



Magellan – Magellan HOS Compliance

March 2018 / V1.0.1804-1805

Document Information

Version History

Version	Date	Author	Reviewer
1621	10/26/16	Editha Dura	Roel Sinadjan
1622/1623	11/21/16	Editha Dura	Roel Sinadjan
1624	12/8/16	Mia Ladoroz	Roel Sinadjan
1625	12/22/16	Mia Ladoroz	Roel Sinadjan
1626	01/18/17	Mia Ladoroz	Roel Sinadjan
1701	01/26/17	Mia Ladoroz	Roel Sinadjan
1702	01/30/17	Mia Ladoroz	Roel Sinadjan
1703	02/15/17	Mia Ladoroz	Roel Sinadjan
1704	03/03/17	Mia Ladoroz	Roel Sinadjan
1705	03/17/17	Mia Ladoroz	Roel Sinadjan
1706	03/30/17	Mia Ladoroz	Roel Sinadjan
1707/1708	04/25/17	Mia Ladoroz	Roel Sinadjan
1709/1710	05/23/17	Editha Dura	Roel Sinadjan
1711/1712	06/23/17	Editha Dura	Mia Ladoroz/Roel Sinadjan
1713/1715	07/20/17	Editha Dura	Mia Ladoroz/Roel Sinadjan
1716/1717	08/27/17	Editha Dura	Mia Ladoroz/Roel Sinadjan
1718/1719	09/27/17	Editha Dura	Mia Ladoroz/Roel Sinadjan
1720/1721	10/12/17	Editha Dura	Roel Sinadjan
1721/1723	12/05/17	Precious Mae Cenia	Roel Sinadjan
1724/1801	01/03/18	Precious Mae Cenia	Roel Sinadjan
1802/1803	02/05/18	Precious Mae Cenia	Roel Sinadjan
1804/1805	03/05/18	Precious Mae Cenia	Roel Sinadjan

Sign Off

Magellan			
Title	Name	Signature	Date
Partner Name			
Title	Name	Signature	Date

Change Log

This section includes the following pages with the modified section details:

Page	Modified Section
Page 11	Updated 2.1.3 Customizing the Carrier Information
Page 20	Updated 2.1.4 Driving Rules>Available US Exceptions Options
Page 29	Updated 3.2 Changing the Driver's Duty Status
Page 36	Updated 3.5 Data Transfer>Select Vehicle
Page 60	Updated 5.2.12 Edit a Log>Modify Log Event Using Grid View Editing
Page 77	Updated 5.4.4 Starting Your DVIR
Page 96-97	Updated 7.5.3 Manage Vehicles / Trailers – Add

Copyright

© Magellan 2018. All rights reserved.

No part of this publication may be reproduced or transmitted in any form or by any means or stored in any retrieval system of any nature without prior written permission except as expressly permitted by any written contract signed by Magellan with the recipient.

The contents of this documentation are the confidential information of Magellan and are subject to the provisions of Magellan standard Customer Agreement or Non-disclosure Agreement (as relevant) or any similar agreement signed by Magellan and entered into with the recipient. The contents of this documentation (or any part or it) must not be used or disclosed to any third party by the recipient except as expressly permitted by the relevant agreement. If you (or your company) have not signed an agreement with Magellan you must not use this documentation, must treat it as strictly confidential and must promptly return it to Magellan.

Change History

This section details what changes have been made in order to prompt a new version of this product specification:

Version	Date	Author(s)	Section Page No.	Change

Contents

 
1 Main Screen	8
1.1 Using the HOS Action Bar	9
2 Customizing the Magellan HOS Compliance App Preferences	11
2.1 Hours of Service Settings	11
2.1.1 Set Hours of Service Preferences	11
2.1.2 Capturing the Driver's Signature	12
2.1.3 Customizing the Carrier Information	13
2.1.4 Driving Rules	14
2.2 Vehicle Data Settings	26
2.3 Device Preferences	27
3 Familiarizing the Hours of Service Main Screen Tiles	30
3.1 Time Remaining Tile	30
3.2 Changing the Driver's Duty Status	31
3.3 Recap	33
3.4 Start Break	34
3.5 Data Transfer	35
3.6 Options	42
3.7 Logs	42
3.8 DVIR	43
3.9 Shift/Cycle	43
4 Check Driver Availability	44
5 Driver Logs	44
5.1 Using the Driver Logs Bulk/ Multiple Selection Functions	45
5.2 The Driver Logs Accordion Header Features	46
5.2.1 Daily Driver's Log Entry Check-box (Uncertified Log)	46
5.2.2 Daily Driver's Log Entry Check-box (Already Certified)	46
5.2.3 Daily Driver's Title Log (Recertify Log)	46
5.2.4 Recap	47
5.2.5 Daily Drivers Log Grid	47
5.2.6 Edit Daily Drivers Log Form	49
5.2.7 Shipment Details	50

5.2.8 Miles Driven by State	51
5.2.9 DVIR	52
5.2.10 Certify a Log	52
5.2.11 Email a Log	54
5.2.12 Edit a Log	56
5.3 Malfunction and Data Diagnostic Events	66
5.4 DVIR	74
5.4.1 DVIR Feature – Main Navigation Menu	74
5.4.2 DVIR Feature – Hours of Service Main Screen	74
5.4.3 Selecting Your DVIR Type	76
5.4.4 Starting Your DVIR	77
5.4.5 Completing the First DVIR Area	77
5.4.6 Capturing an Image of a DVIR Item	78
5.4.7 Add a Comment or Remark to a DVIR Item	78
5.4.8 Finishing / Certifying Your DVIR	80
5.4.9 Submit or Certify the DVIR	82
5.4.10 Deleting a Vehicle DVIR	83
5.4.11 Emailing a DVIR	84
5.5 DVIR History	84
5.5.1 Viewing DVIR History by Vehicle	85
6 Roadside Inspection	85
6.1 Roadside Inspection – Main Navigation Menu	86
6.2 Roadside Inspection – Magellan HOS Main Menu	87
6.3 Inspection Screen – Start Review	87
6.4 Roadside Inspection Screen – Data Transfer	89
7 Switch Equipment	90
7.1 Switch Equipment – Main Navigation Menu	90
7.2 Options Menu	91
7.3 Switch Equipment – DVIR Screen	91
7.4 Switching Equipment	92
7.5 Managing Vehicles / Trailers	93
7.5.1 Manage Vehicles / Trailers – Delete	93

7.5.2 Manage Vehicles / Trailers - Edit.....	94
7.5.3 Manage Vehicles / Trailers – Add.....	95
8 Documents	98
8.1 Documents – Main Navigation Menu	99
8.2 Documents – Options Menu	100
8.3 Adding Documents	101
8.4 Editing / Deleting a Document.....	102
9 Add Fuel Receipts	103
9.1 Main Navigation Menu	103
9.2 Fuel Receipts Screen.....	104
9.3 Adding Fuel Receipts	104
9.4 Editing or Deleting a Fuel Receipts	106
10 Co-Drivers	107
10.1 Logon Co-Driver	107
10.2 Switch Driver	112
11 Shipping Documents	113
12 Add Remark	114
13 Exempt Driver.....	115
14 Logout.....	116
15 Unidentified Driving Events	117
16 Warning Features	118
17 List of Login Errors.....	120

1 Main Screen

The Hours of Service main screen is where you log your duty status events and which, in turn, determines your compliance with FMCSA Hours of Service Regulations. This screen also serves as your gateway to the rest of the app's features.

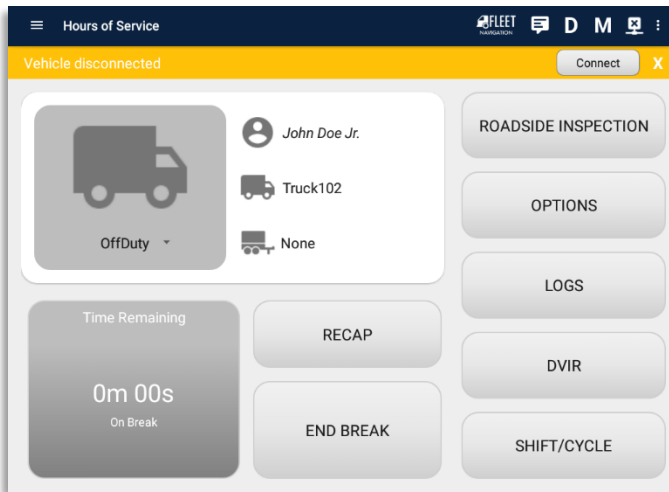


The main screen also provides essential information about the app's user:


- **Driver Name:** Displays the name of the driver who is logged in and whose logs are displayed
- **Vehicle Name:** Displays the driver's vehicle name
- **Trailer Name:** Displays the driver's

Note: Can tap Vehicle and Trailer name to display Switch Vehicle Dialog.

 Magellan HOS Compliance have (2) two app versions. One app version has a navigation button which allows user to launch the Magellan Fleet Navigation app and the other app version has no navigation button.

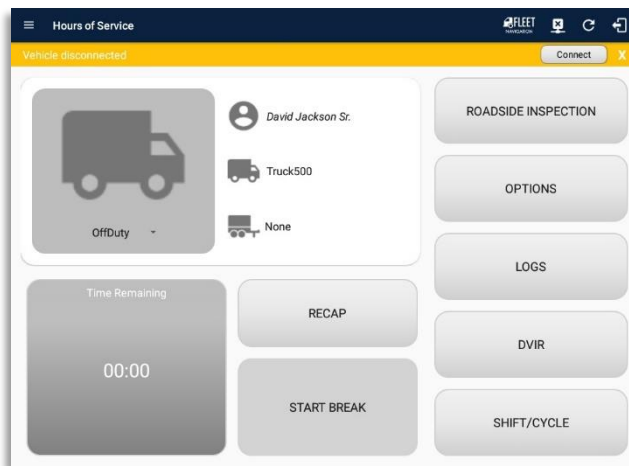

App Version **with Navigation button**

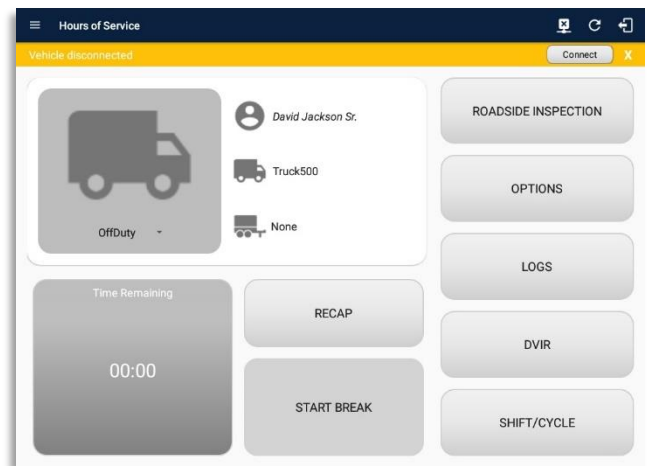 










 

App Version **with no Navigation button**




1.1 Using the HOS Action Bar

The HOS Action Bar is the starting point for navigating to the different pages within the app and is always present in the app's topmost portion:

The action bar features the following navigational controls of the app:




Action Tool Name	Action Tool Icon	Description
Main navigation hamburger		Tap to open the main navigation menu of the application.
Refresh Button		Tap to manually refresh the data in the app page. Hidden under  submenu icon once all icons are present.
Logout Button		Tap to log out of the app, this will also set your status to Off Duty. Hidden under  submenu icon once all icons are present.
Malfunction Button		Tap to see uncleared Malfunctions.
Data Diagnostics Button		Tap to see uncleared Data Diagnostics. Turns into an accent color (based on the app's theme) if there are new events and turns white when already viewed.
VBUS Connectivity		Indicates that the device is connected to a VBUS device and turns to  when disconnected. Hence, connection interruptions may occur which will turn into flashing icon  while in a reconnecting state.
Pending Edit Request Button		Tap to display the pending edit request dialog, edit request is from Motor Carrier Edit Suggestions, correction of errors with Team Drivers, and Events logged under Unidentified Driver Profile.

Connect Button		Tap to display a dialog to Connect to Vehicle's VBUS Device. It has the same capabilities as the VBUS icon  .
Navigation Button		Tap to launch Magellan Fleet Navigation application.

2 Customizing the Magellan HOS Compliance App Preferences

The app's settings and preferences can be customized in the Hours of Service Preferences screen.

To navigate to this part of the app, select the  icon or swipe the screen to the right to display the main navigation menu, select the **Settings** option and then select the **Hours of Service** option, this will display the Settings screen.

 
2.1 Hours of Service Settings

2.1.1 Set Hours of Service Preferences


This is where the basic driver, vehicle, carrier and shipping data is entered and stored within the app. The identification data stored here is then used by the app, web portal and in the driver's daily log report.

After logging in to the app for the first time


When the app is used for the first time, the driver is taken directly to the Main Dashboard after which a Select Equipment dialog box will be displayed requiring the driver to select a vehicle and trailer (if needed).

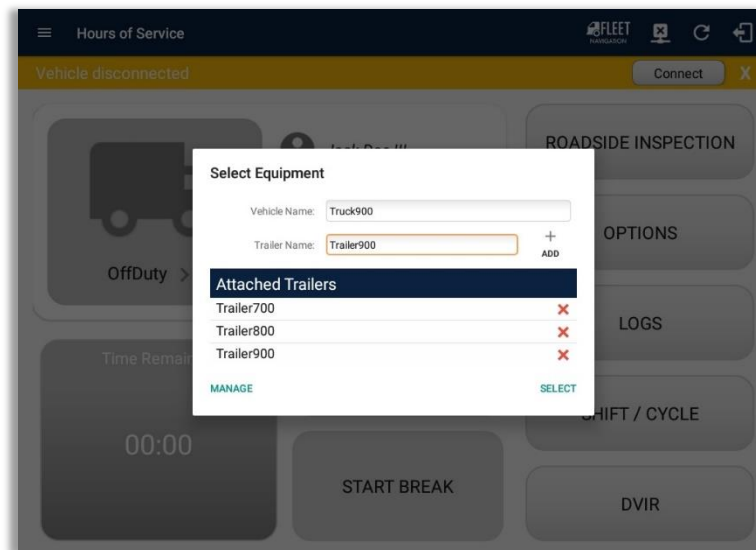


 
If you are logging in to the device you have logged in to before, the driver can login and logout successfully to the app when an internet connection is not available.

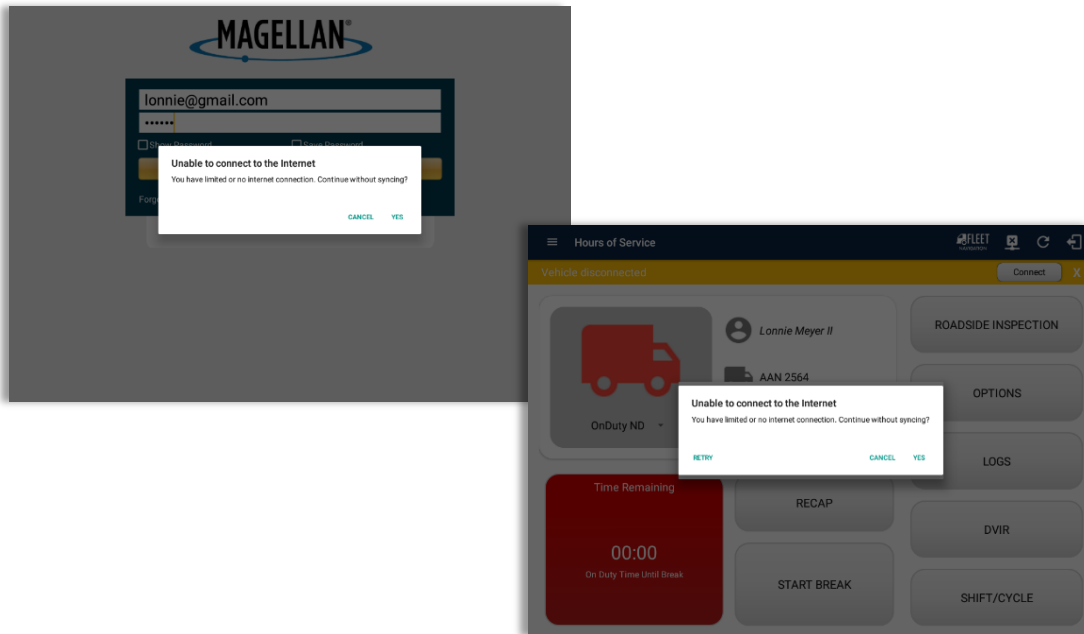

2.1.2 Capturing the Driver's Signature

 The app can capture the signature of the driver which is then used for digitally certifying a log. To create the driver signature, select the main navigation hamburger  , select the **Settings** option and then select **Hours of Service**:

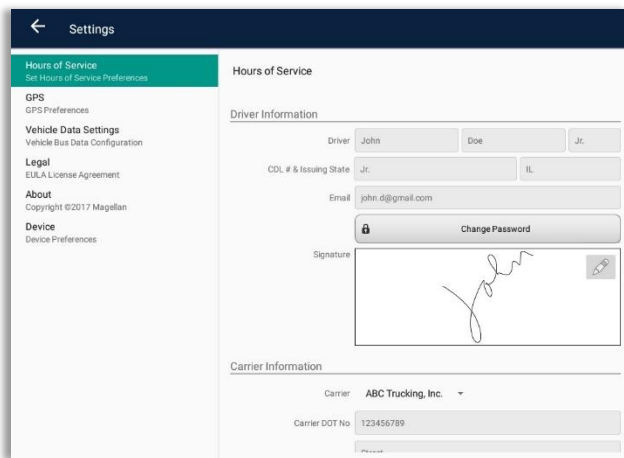

The Driver Information section of the screen will be displayed along with any signature that has been created for the driver. Tap on the  icon to create or change the signature.



Create or update your signature in the app by using your finger to create your signature.



Tap the Done button to save your signature. You can also select the Clear button to clear the captured signature and start again.

2.1.3 Customizing the Carrier Information

The carrier information can also be set from within the Hours of Service section (**main navigation hamburger > Settings > Hours of Service**). You can scroll the screen down to the **Carrier Information** section:

← Settings

Hours of Service
Set Hours of Service Preferences

GPS
GPS Preferences

Vehicle Data Settings
Vehicle Bus Data Configuration

Legal
EULA License Agreement

About
Copyright ©2017 Magellan

Device
Device Preferences

Hours of Service

Carrier Information

Carrier: ABC Trucking, Inc. ▼

Carrier DOT No: 123456789

Main Office: Street

City: State: Zip:

Phone #: Phone Number

Home Terminal: 926 Jail Drive

Macomb IL 61455

Driving Rules

Country: USA ▼

Cycle USA: US 70hr8days ▼

Home Terminal Time Zone: Central (CST6CDT) ▼

Enter details for the following:

 
Carrier Name
Carrier DOT Number
Main Office Address
Phone Number
Home Terminal Details of the driver

Note: The driver is allowed to select a specific Carrier Information if 'Allow driver ability to change carrier in portal->settings->account setting under Portal Controls and 'Allow Carrier Change' in Drivers Management page are enabled.

2.1.4 Driving Rules

This is where you change the HOS rules or the Federal Motor Carrier Safety Administration's (FMCSA) regulations that govern the hours that a commercial vehicle driver can legally accumulate driving or being on duty for a motor carrier in a working day and week. This is also where you apply the HOS rules exceptions.

The driving rules can also be set from within the Hours of Service section (**main navigation hamburger > Settings > Hours of Service**). You can scroll the screen down to the **Driving Rules** section:

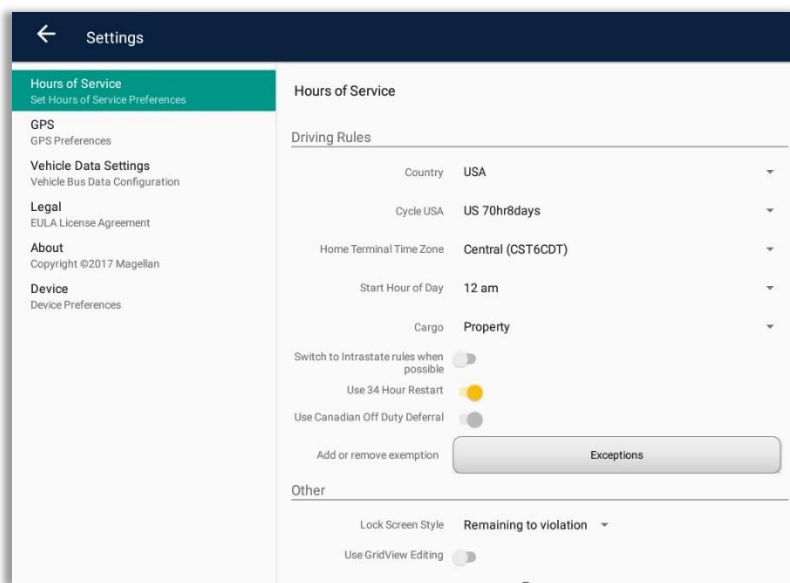

Select the appropriate HOS rules that you would like the app to use from the drop down list. You can customize the region, cycle, cargo, exceptions and time zone rules.

Region

This is where you can set the region. The options are USA and Canada. The cycle and exceptions displayed are dependent on which region has been set by the driver.

Note: If the region selected is Canada, then the condition “Canada Off-Duty Deferral” is enabled. This means that you are allowed to get an extra two hours of driving and on duty in a 24-hour period (day 1) and take the required extra two hours off on the following day (day 2). The Deferral status is shown on the Driver’s Daily Logs.

Cycle

This is where you can set the consecutive multi-day duty period which the driver will follow. Choosing a cycle will take into effect the corresponding legal limitations on the hours that can be used by the driver in a 7 day or 8 day working cycle.

Available cycle Rules Options**Interstate - Federal Rules**

	Cycle	Shift Limit	Drive Limit	Until Break	Break Left
US60hr7days	7 days	14 hours	11 hours	8 hours	30 minutes
US70hr8days	8 days	14 hours	11 hours	8 hours	30 minutes
Alaska70hr7days	7 days	20 hours	15 hours	8 hours	30 minutes
Alaska80hr8days	8 days	20 hours	15 hours	8 hours	30 minutes
California80hr8days	8 days	16 hours	12 hours	N/A	N/A


Intrastate Cycle Rules

	Cycle	Shift Limit	Drive Limit	Break Limit
Alabama60hr7days	7 days	15 hours	10 hours	N/A
Alabama 70hr8days	8 days	15 hours	10 hours	N/A
Florida 70hr7days	7 days	16 hours	12 hours	N/A
Florida 80hr8days	8 days	16 hours	12 hours	N/A
Illinois 60hr7days	7 days	14 hours	11 hours	N/A
Illinois 70hr8days	8 days	14 hours	11 hours	N/A
Maryland 70hr7days	7 days	16 hours	12 hours	N/A
Maryland 80hr8days	8 days	16 hours	12 hours	N/A
Massachusetts 60hr7days	8 days	14 hours	11 hours	N/A
Massachusetts 70hr8days	8 days	14 hours	11 hours	N/A
Michigan 60hr7days	7 days	14 hours	11 hours	30 minutes
Michigan 70hr8days	7 days	14 hours	11 hours	30 minutes

New Hampshire 60hr7days	7 days	14 hours	11 hours	N/A
New Hampshire 70hr8days	8 days	14 hours	11 hours	N/A
New York 60hr7days	7 days	14 hours	11 hours	N/A
New York 70hr8days	8 days	14 hours	11 hours	N/A
North Carolina 70hr7days	7 days	16 hours	12 hours	N/A
North Carolina 80hr8days	8 days	16 hours	12 hours	N/A
Pennsylvania 60hr7days	7 days	14 hours	11 hours	N/A
Pennsylvania 70hr8days	8 days	14 hours	11 hours	N/A
South Carolina 70hr7days	7 days	16 hours	12 hours	N/A
South Carolina 80hr8days	8 days	16 hours	12 hours	N/A
Tennessee 60hr7days	7 days	14 hours	11 hours	N/A
Tennessee 70hr8days	8 days	14 hours	11 hours	N/A
Texas 70hr7days	7 days	15 hours	12 hours	N/A
Wisconsin 70hr7days	70 days	16 hours	12 hours	30 minutes
Wisconsin 80hr8days	80 days	16 hours	12 hours	30 minutes
Vermont 60hr8days	7 days	14 hours	11 hours	N/A
Vermont 70hrs8days	8 days	14 hours	11 hours	N/A
Virginia 70hr7days	7 days	16 hours	12 hours	N/A
Virginia 80hr8days	8 days	16 hours	12 hours	N/A

Canada Cycle Rules

	Cycle	Shift Limit	Drive Limit	Break Limit
Canada 70hr7days South	7 days	16 hours	13 hours	30 minutes
Canada 120hr14days South	7 days	16 hours	13 hours	30 minutes
Canada 80hr7days North	7 days	20 hours	15 hours	30 minutes
Canada 120hr14days North	7 days	20 hours	15 hours	30 minutes
Alberta Province		15 hours	13 hours	30 minutes

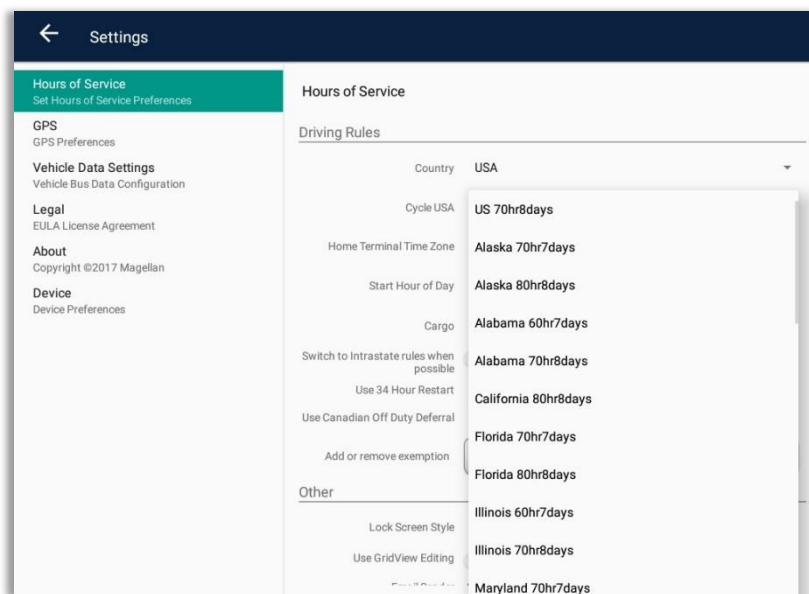 

Any of the above cycle rules are depending on the region selected and can be applied given the appropriate rule from the region drop down list.

- ***Intrastate to Interstate driving rules***

 
If the driver is operating in intrastate mode and is crossing over a state line then the app automatically switches to federal rules. A dialog will display confirming that the driving rules have changed right after crossing boundaries.

Example:

SouthCarolina80hr8days to US70hr8days

or

SouthCarolina70hr7days to US60hr7days

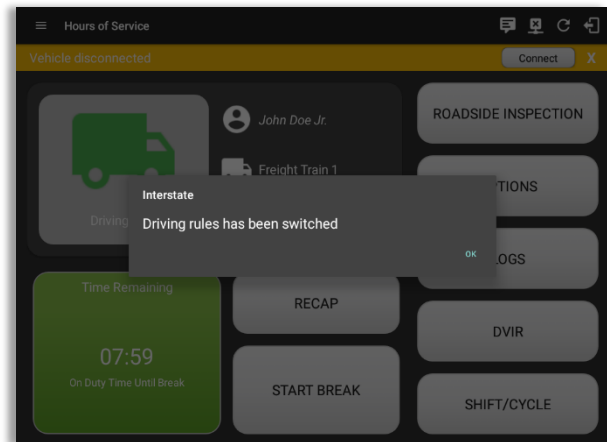


- **Interstate to Intrastate driving rules**

The driver must also follow the Federal HOS regulations for a short period of time while operating in interstate commerce. If the driver were using the 60-hour/7-day schedule, he must follow the Federal HOS regulations for the next 7 days having done operating in interstate commerce. If you were using the 70-hour/8-day schedule, you must follow the Federal hours-of-service regulations for the next 8 days after you finish operating in interstate commerce.

Note:

 To perform intrastate check, enable the option available in the Settings > HOS Preferences (however this check is optional). The user has the ability to whether or not perform to the checking.

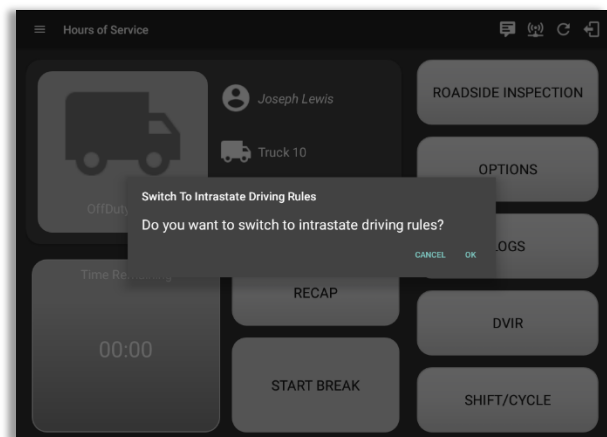


Also, it is important for the driver to monitor the cycle used for the past 7 or 8 days.

Cargo

This will set the applicable Hours of Service rules for property carrying or passenger carrying commercial vehicles.

Available Cargo Rules Options

 - Property – the 11 and 14 hours rule will apply
- Passenger – the 10 and 15 hours rule will apply

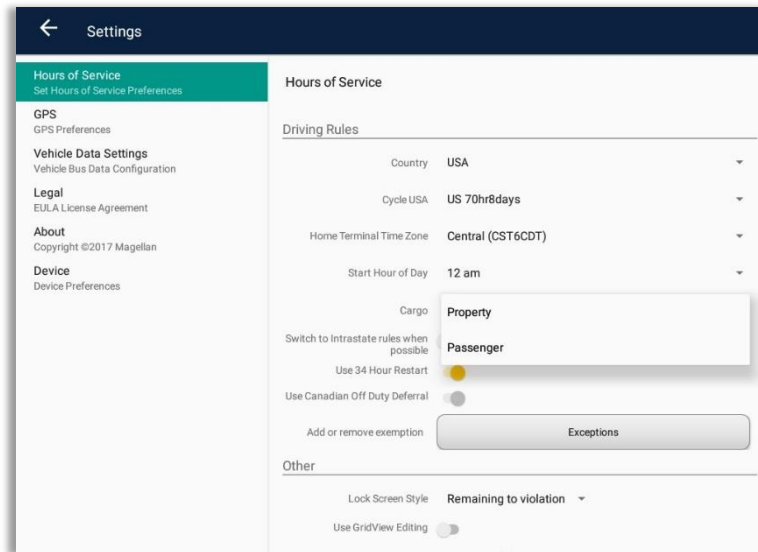

Either of the above cargo rules can be applied by selecting the appropriate rule from the drop down.

Exceptions

 
The options that appear when tapping the **Exceptions** button will allow the driver to avail of exceptions from the Hours of Service rules for as long as certain conditions are met as stipulated the Hours of Service section of the Code of Federal Regulations (49 CFR Part 395.1-Hours of Service of Drivers-Scope of rules in this part) and other pertinent FMCSA regulations.

Available US Exceptions Options

- 2 Hour Driving Extension for Adverse Driving Conditions
- Relief from all driving rules for Emergency Conditions
- Oilfield Operations with 24-hour restart
- 30 Minute Break Exemption for Short-Haul Drivers
- 30 Minute OnDuty break for Asphalt drivers
- No Logs for Short-haul Drivers operating within 100 air miles or Non-CDL-Drivers operating within 150 air miles
- 24 Hour Restart for Construction, Groundwater well-drilling


- 16 Hour Driving Window

Note: '16 Hour Driving Window' exception can only be used once for the last 7 days or in every 70hr cycle, if the driver attempted to enable the exception an error dialog will display stating the following:

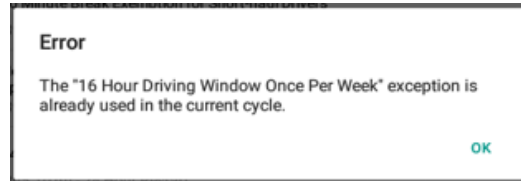

However, it is possible for the driver to add another '16 Hour Driving Window' exception when a cycle reset has occurred. Nevertheless, the driver will need to wait for the current cycle to end to be able to add the exception again.

 - Utility Service Vehicle
- 30 Minute Break Exemption for Specialized Carriers & Rigging Association (SC&RA)
- Agricultural Operations
- Transport of Commercial Bees, Livestock
- Hi-rail 2-hour travel exclusion - 395.1(w)
- Driver salesperson - 395.1(c)
- Relief from Driving rules for State of Emergency - 390.23

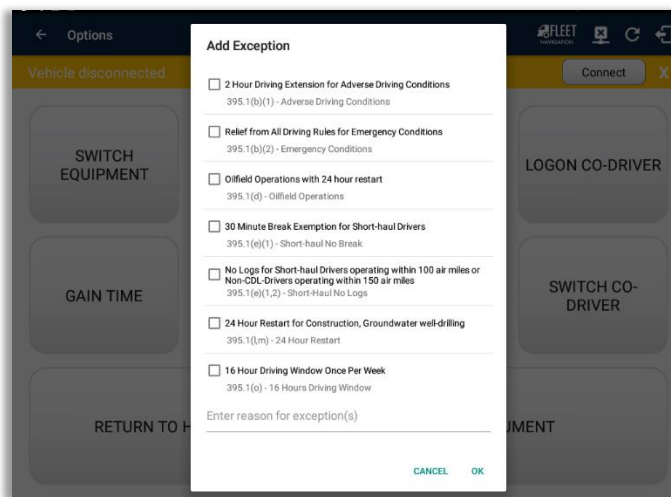


Select the appropriate exception from the list; you must then enter a reason for applying the exception in the Enter reason for exception(s) field. Once complete, select the **OK** option to apply the selected exception

Note: Exceptions are different depending on the Region selected.


Available Canada Exceptions Options

 - 2 Hour Driving Extension Special Permit
- Oil Well Service permit
- CanEmergencyConditions
- 2 Hour Driving Extension for Adverse Driving Conditions
- No Logs for drivers operating within 160km of home terminal

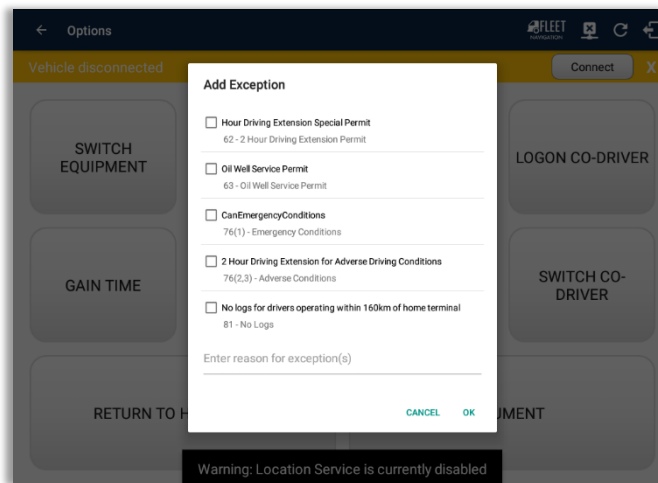


Available Alberta Province Exceptions Options

 - CanEmergencyConditions
- 2 Hour Driving Extension for Adverse Driving Conditions

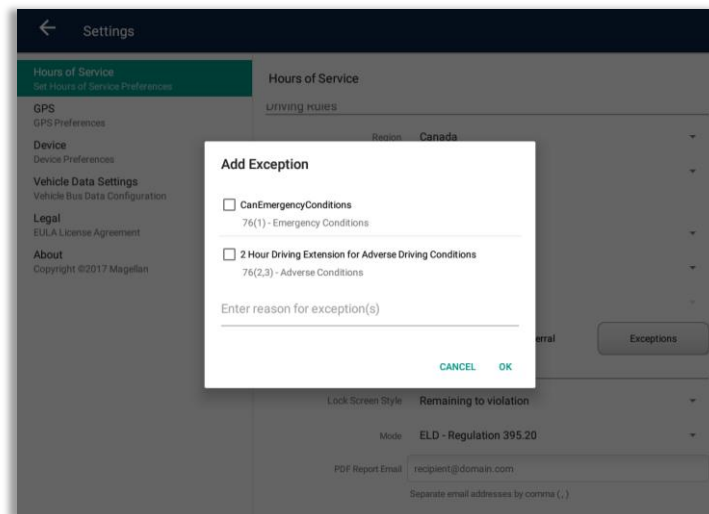

Time Zone

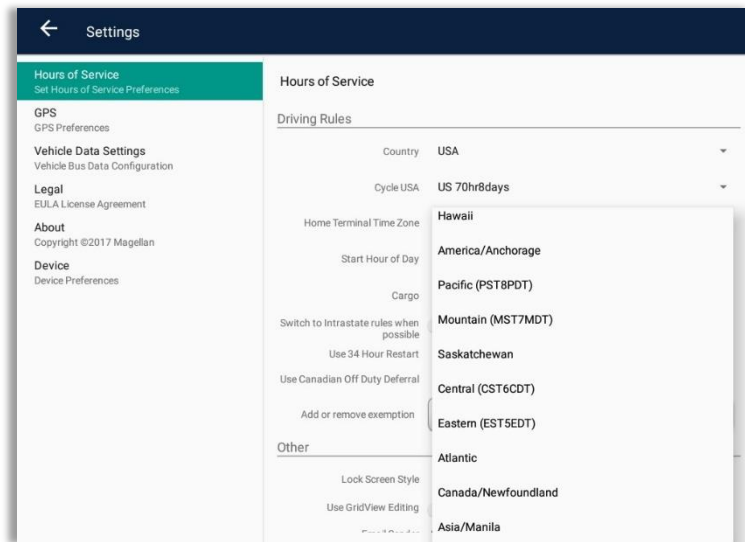 


Select the driver's Home Terminal time zone. Time zones available are:

Hawaii
 America/Anchorage
 Pacific Time (PST8PDT)
 Mountain Time (MST7MDT)
 Saskatchewan
 Central Time (CST6CDT)
 Eastern Time (EST5EDT)
 Atlantic
 Canada/Newfoundland
 Asia/Manila

PDF Report Email Recipients

 You can set the default recipients of your Driver Daily Log PDF report in the part of the Settings Menu.

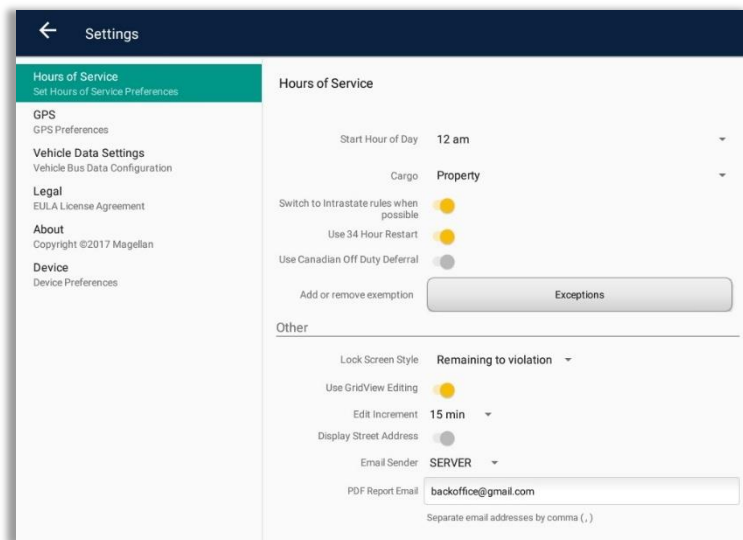


Enter the email address or addresses that will become a recipient or recipients of the Hours of Service app's Daily Driver Log PDF report.

The email addresses must be separated by a comma (,)


Lock Screen Style

 The user has the ability to control the lock screen display. There are two (2) types available: new 'Remaining to violation' lock screen or the old '4 clocks' lock screen.

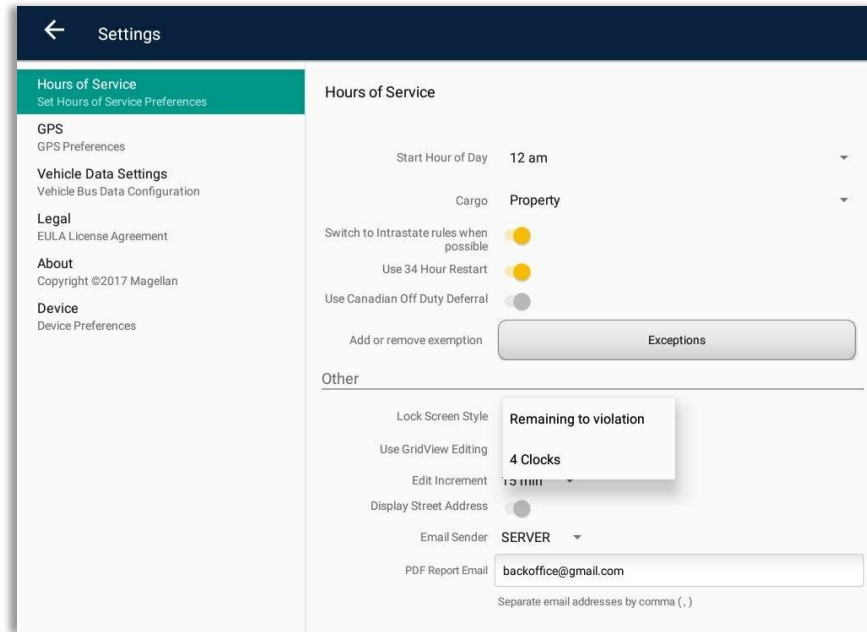


Use Grid View Editing

 The user has the ability to use grid view editing. Once enabled, user can also set the edit increment time. (See Section 5.2.11 Editing a Log)

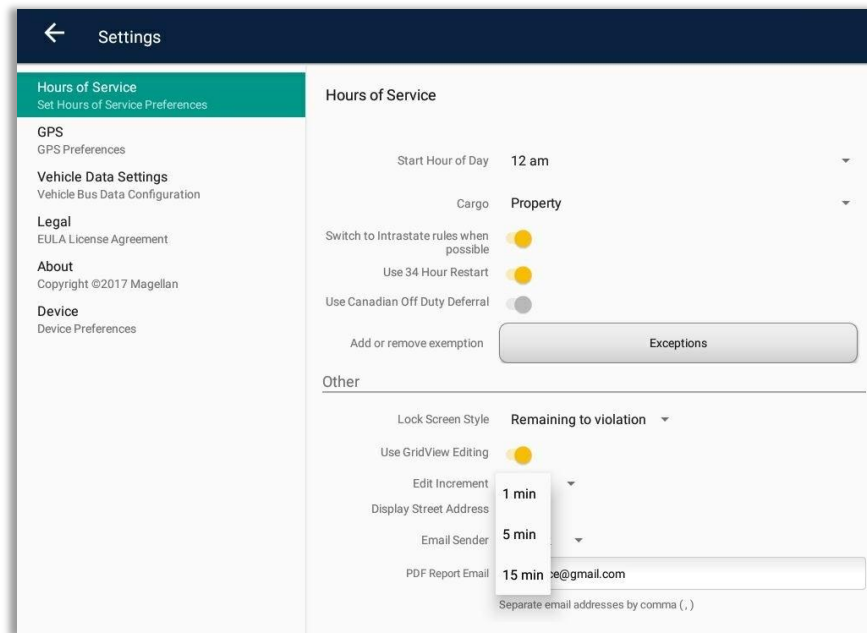


Display Street Address

 Display Street address option will allow drivers to select where to get the location if it is the actual location or the nearest City with 5,000 population when in AOBRD mode. The option will only display for drivers that have permission which is set by the personnel in the portal->Account Settings->Carrier Information tab->'Display Street Address for AOBRD mode'.

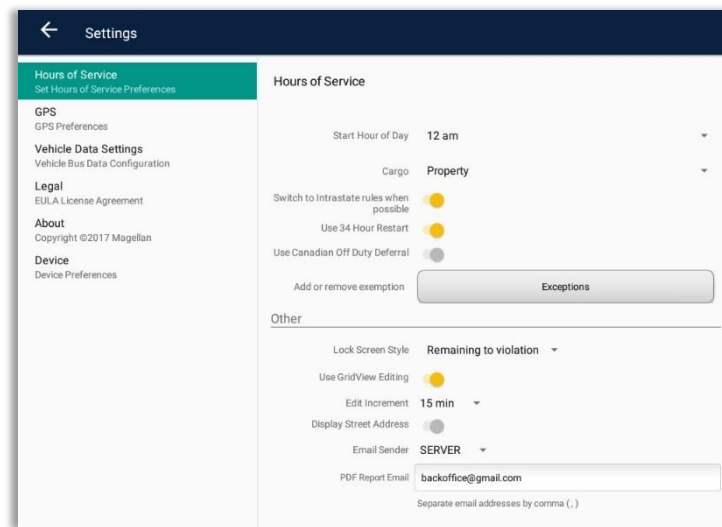

Email Sender

 
Email Sender option allows the driver to specify email sender when drivers' need to send certified log PDF and DVIR report PDF. There are (2) two email sender options: via App or Server.

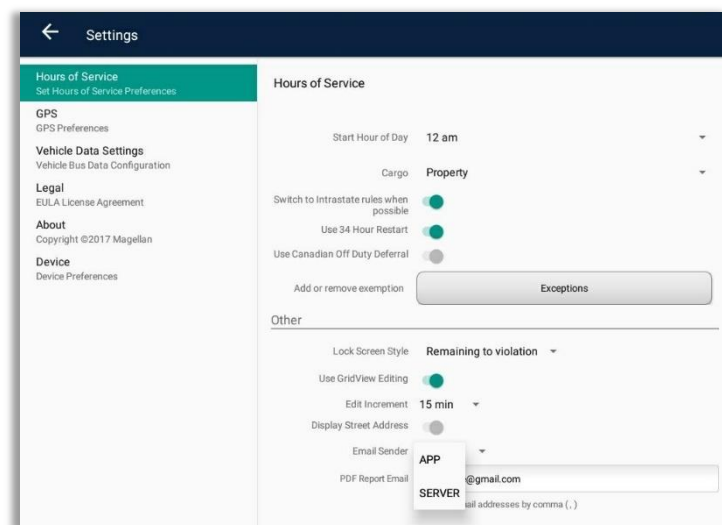


2.2 Vehicle Data Settings

AOBRD Speed Threshold

 For vehicle in AOBRD mode, speed threshold setting is dependent on what is set on the portal->account settings->AOBRD Speed Threshold. The default value is 100 Mph/Kph. (For example: When the set AOBRD Speed Threshold is 100 Mph/Kph, lock screen will be shown and the app will be in driving state once the vehicle speed threshold reached to 100 mi/hour)

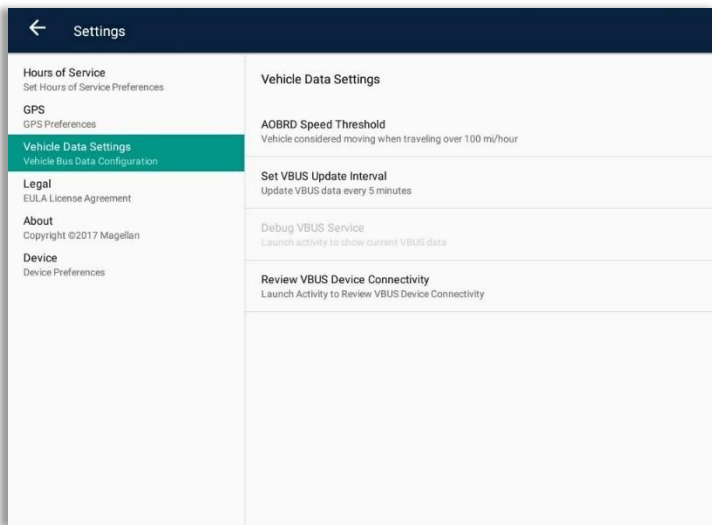

 
Also, drivers have the ability to set speed threshold on the app->Vehicle Data Settings->AOBRD Speed Threshold only if the driver is allowed. To allow a specific driver, enable the option which can be seen in portal->Drivers Management Page->Set AOBRD Speed Threshold option.

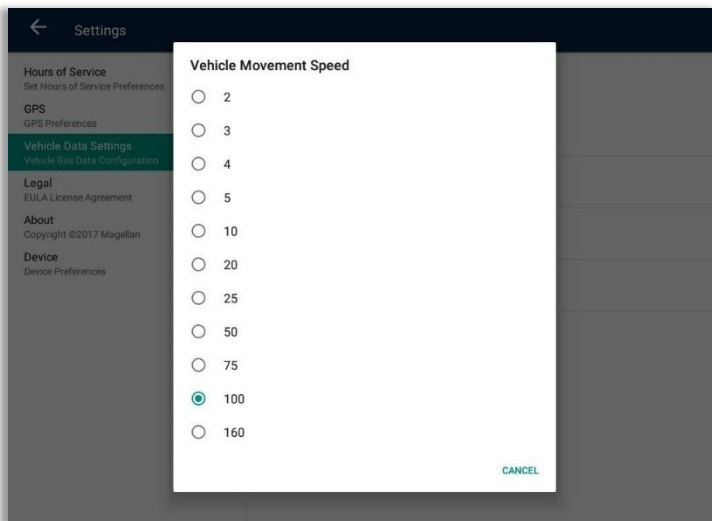

2.3 Device Preferences


Unit of Distance

 Setting the default unit of measures

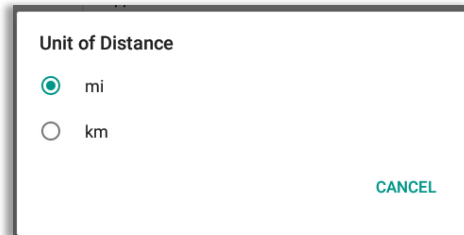

Disable Notification Sound

 
The application has a Mute button to silence all sounds that could come from the application. Also, the ELD rules state that all application sounds should be muted during Sleeper status. However, the mobile device should not be muted so that sound will be available for phone calls.

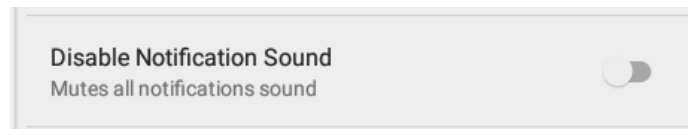


Note: When the current status is Sleeper Berth, it automatically mutes the application sound.

Color Theme

  
Displays option for selecting Color Theme

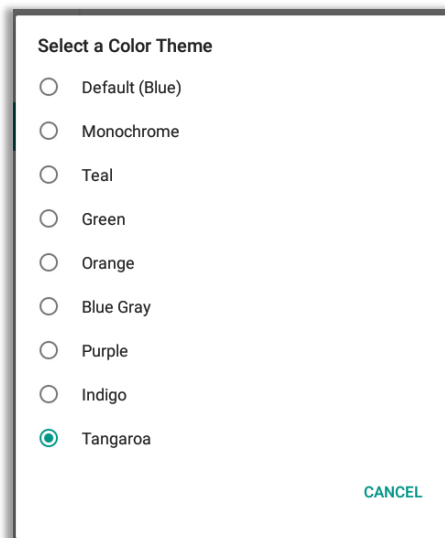

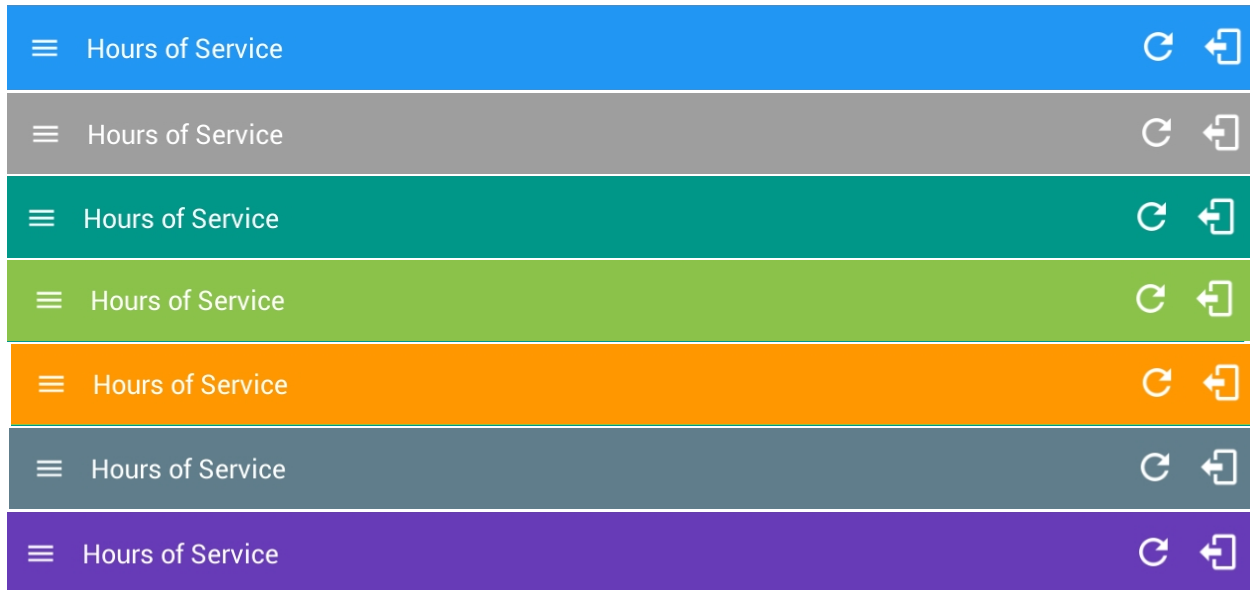

Night Theme

 By default, the application automatically changes to a night theme based on the sunset time calculated from the device's location. If location is not available, the local time of the device is used.

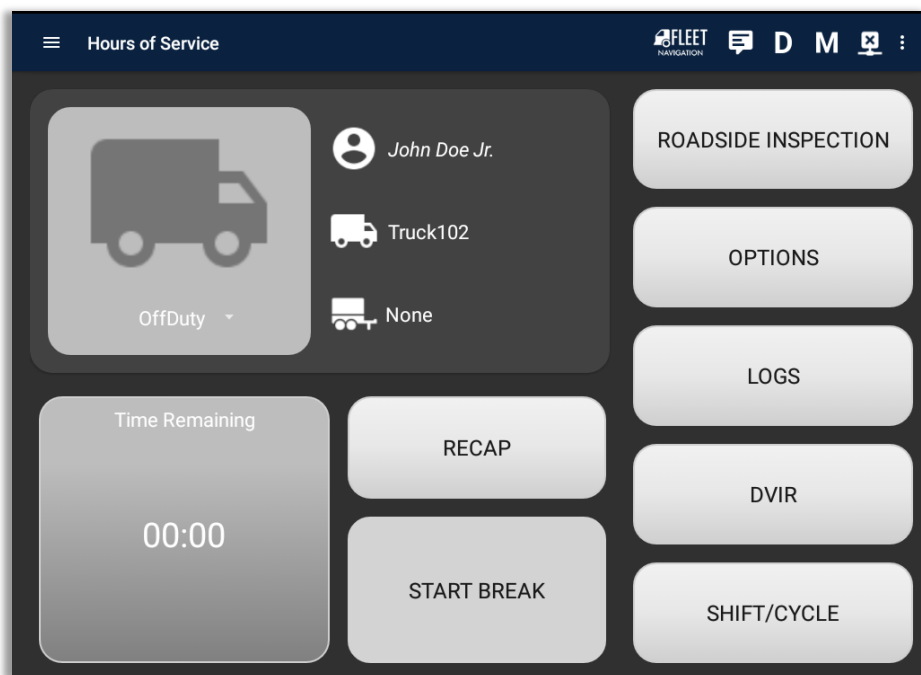

Language Support

The application supports language translation for French-Canadian (Francais (Canada)) and Spanish (Español (Estados Unidos)).

To enable the translation, go to the **Android Device Settings > Language and Input > Language**. Select between the supported language and the translation will take effect immediately.



 
3 Familiarizing the Hours of Service Main Screen Tiles

3.1 Time Remaining Tile

When the time remaining tile displays a grey color, it indicates that the driver is Off Duty, Sleeper or Waiting at Well Site; when the tile displays a green color, it indicates that the driver's status is Driving or On Duty; when the tile displays an amber color, it indicates that the driver's status is Driving or On Duty and has less than 3 hours left; when the tile displays a red color, it indicates that the driver's status is Driving or On Duty and has less than 1 hour left or has already ran out of time.



Tap the time remaining panel to view the Time Remaining Clocks.

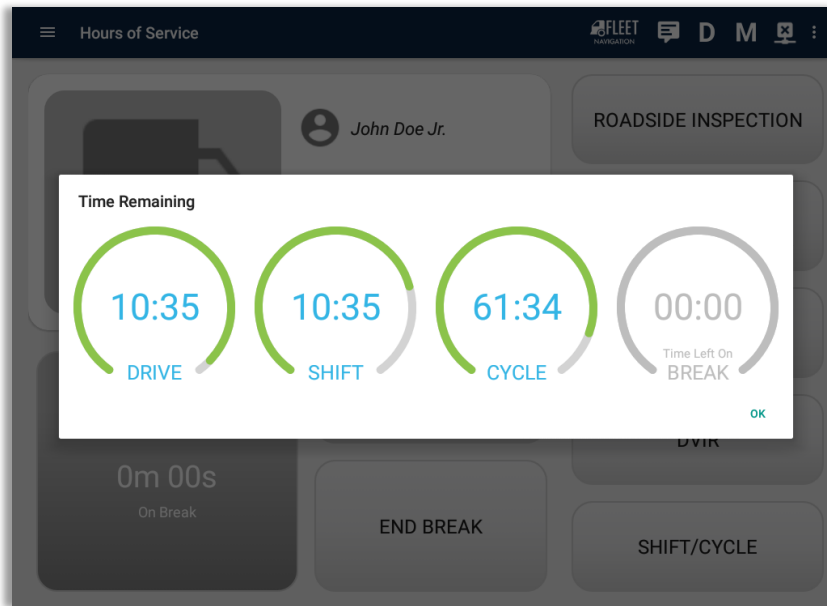


The time remaining clocks are color coded to match the time remaining panel.

3.2 Changing the Driver's Duty Status

To change the duty status of the driver, tap the Duty Status button and select the appropriate driver duty status.

Available Duty Status Options

Duty Status Icon	Duty Status	Duty Status Icon	Duty Status
	Off Duty		On Duty
	Sleeper Berth		Waiting at Site
	Driving		

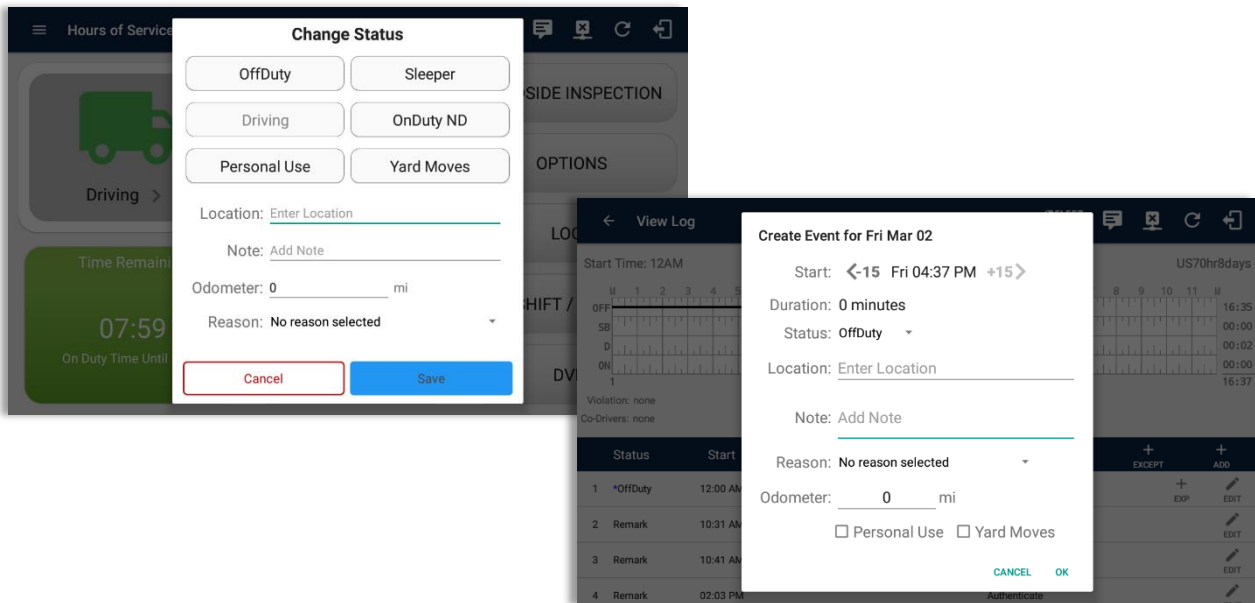 

Tapping the duty status button will show the **Change Status** pop up dialog. You can adjust the duration of the duty status event by tapping the Previous 15 minutes Time Interval button to increase the time duration and the Next 15 minutes Time Interval button to decrease the time duration. However, these buttons are disabled prevent time from going before or after the current day. (eg. 12:00AM – 11:59PM).

- If Personal Use is enabled, the status will be set to Off Duty automatically and will disable the other checkboxes. Selection of this option will be recorded within the events history.
- If Personal Use is enabled, events except Off Duty will not be displayed in the grid but is displayed in the event history list. Off duty will always be the display in the grid and when the driver makes an automatic event, lock screen will also be shown.
- If Yard Moves is enabled, the status will be set to On Duty automatically and will disable the other checkboxes. Selection of this option will be recorded within the events history.
- If Yard Moves is enabled, events except On Duty will not be displayed in the grid but is displayed in the event history list. Off duty will always be the display in the grid and when the driver makes an automatic event, lock screen will also be shown.

Note: Attempt to create a new event such as Off Duty, On Duty, Sleeper Berth in the middle of an automatically Driving event is not allowed, instead an error dialog is displayed stating "Error: shortening of prior driving event is not allowed. Select a time before or after the driving event."

When the app is able to obtain a valid GPS fix, the **Location** field will be automatically populated with the current location information of the user. If there is no GPS fix, the **Location** field will remain blank, in this instance; you must manually input the relevant details.

Once all relevant details have been entered and the correct duty status selected, tap the **OK** button to save the new duty status event. You can also select the **Cancel** button to cancel adding the selected duty status.

Changing the status to On Duty or Driving also enables the options for ‘**Personal Use**’ and ‘**Off Road**’. Personal Use is mentioned in the FMCSA’s Supplemental Proposal, which was published on March 28, 2014, that mandates ELDs for most drivers of CMVs that currently log. The proposal says that ELDs may be set up to allow drivers to put themselves in a special driving category called “personal use.” When a driver selects this option, the ELD will record the time as off duty until the driver de-selects the option. **Off Road**, on the other hand, means that the vehicle is running on rough terrain. Lastly, **Yard Moves**, has been established under a mandate which allows a driver or another personnel to perform duties like moving trucks around the home yard by establishing a single set of thresholds for all ELDs in an On Duty, not Driving status without triggering the device by reaching the thresholds.

3.3 Recap

Tap the Recap button to bring up the recap information for the specified duty day and corresponding cycle data.

Day	Date	Hours worked
Tue	Jan 10	00:00
Wed	Jan 11	00:00
Thu	Jan 12	00:00
Fri	Jan 13	00:00
Sat	Jan 14	00:00
Sun	Jan 15	00:00
Mon	Jan 16	01:15
Tue	Jan 17	06:21
Total hours last 8 days		07:36
Hours available today		61:34
Hours worked today		00:52
Hours available tomorrow		61:34

3.4 Start Break

 
The **Start Break** button will be disabled when the duty status is **Off Duty**, **Sleeper Berth** or **Waiting at Well Site**.

The **Start Break** button will be enabled when the duty status is **On Duty** or **Driving**. Once you tap the **Start Break** button, a pop up dialog will be displayed asking you to confirm that you wish to start your break.

- If the 'Start Break' button is pressed, then:
 - It sets the status to OffDuty
 - The 'Start Break' button turns to 'End Break'
 - The Time remaining button turns to On Break and the second line shows "time remaining 00:00"
- If the 'End Break' button is pressed, then:
 - It sets the status to 'On Duty' (if the vehicle is not moving) or 'Driving' (if the vehicle is moving)




Note: An audible alert activated when 30 minute break is over.

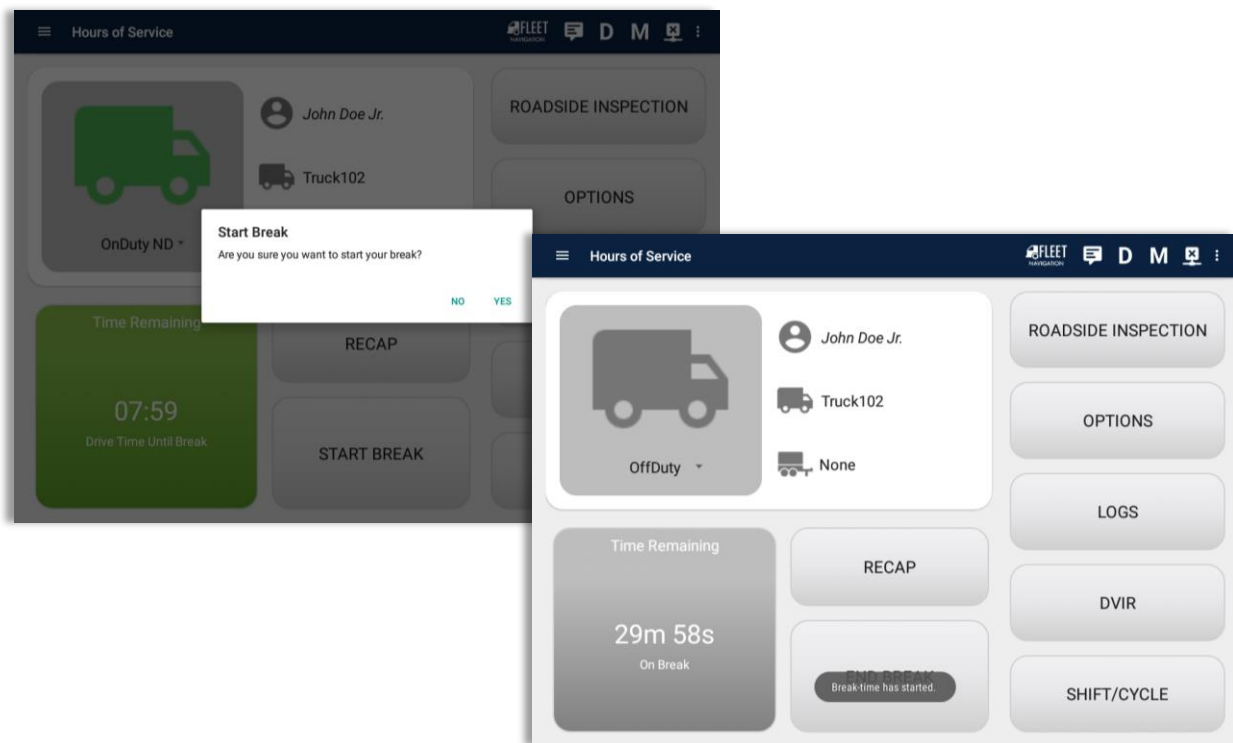


3.5 Data Transfer

Selecting the **Data Transfer** button from the **Options Screen** will display the list of supported data transfer options.

 The ELD provides a standardized single-step compilation for the driver's ELD records and initiation of the data transfer to authorized safety officials when requested during a roadside inspection.

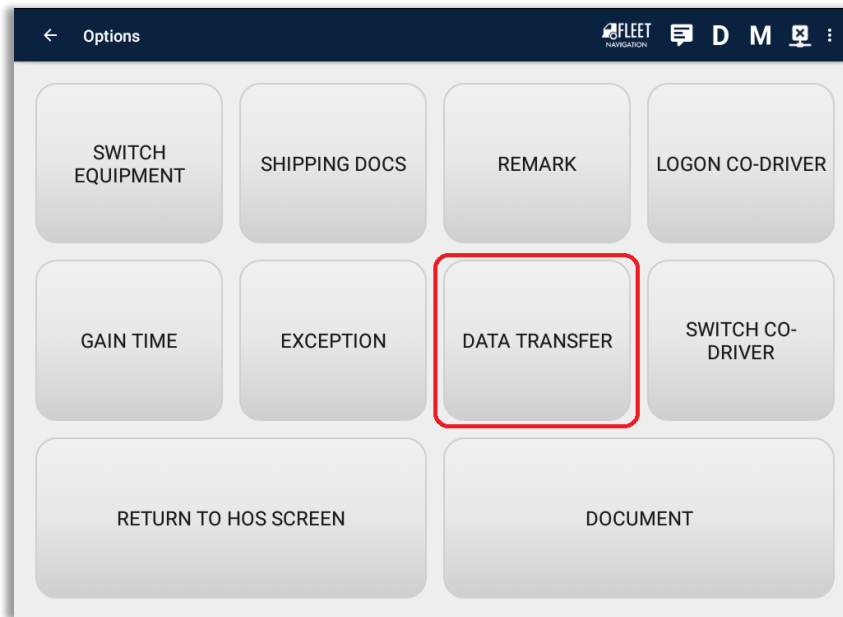

 Tap the **Data Transfer** button to transfer data of the compilation of the driver's ELD records. Once tapped, a selection of the supported data transfer options by the ELD will prompt to the user.

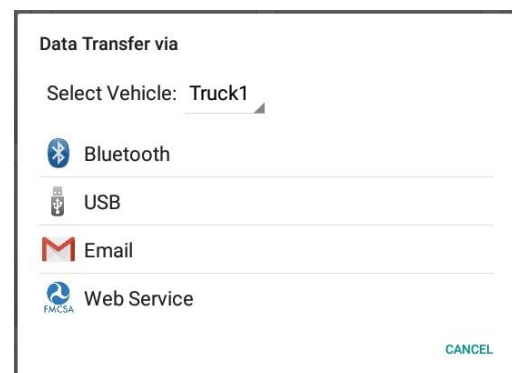

- **Select Vehicle** - this option enables the ELD to produce a data file or a series of data files of ELD records for a subset of its vehicles used by the driver.

Tap the **Select Vehicle** menu to show the list of vehicles used by the driver.

The 'All Vehicles' option will only display on the list when the driver has already driven multiple vehicles for the day.

For **Android app**, list of vehicle/s are displayed in drop down list which allows to select a specific vehicle or 'All Vehicles' in Data Transfer.

 
For **iOS app**, list of vehicle/s are displayed in checkboxes. The app allows to select specific vehicle(s) to be included in ELD output file. The list of vehicles displayed are the vehicles that the driver used within the current cycle.

Select or deselect a vehicle by tapping the checkbox button. Tap OK button to save selection.

- **Transfer via Bluetooth Tethering** - this option enables the user to transfer files through Bluetooth tethering. The ELD prompts for an output file comment which the driver may enter (optional). After the input, if Bluetooth is not yet turned on, a prompt will appear asking you to turn it on.




You will then be asked to pick the device to which the ELD output file will be transmitted via Bluetooth tethering.

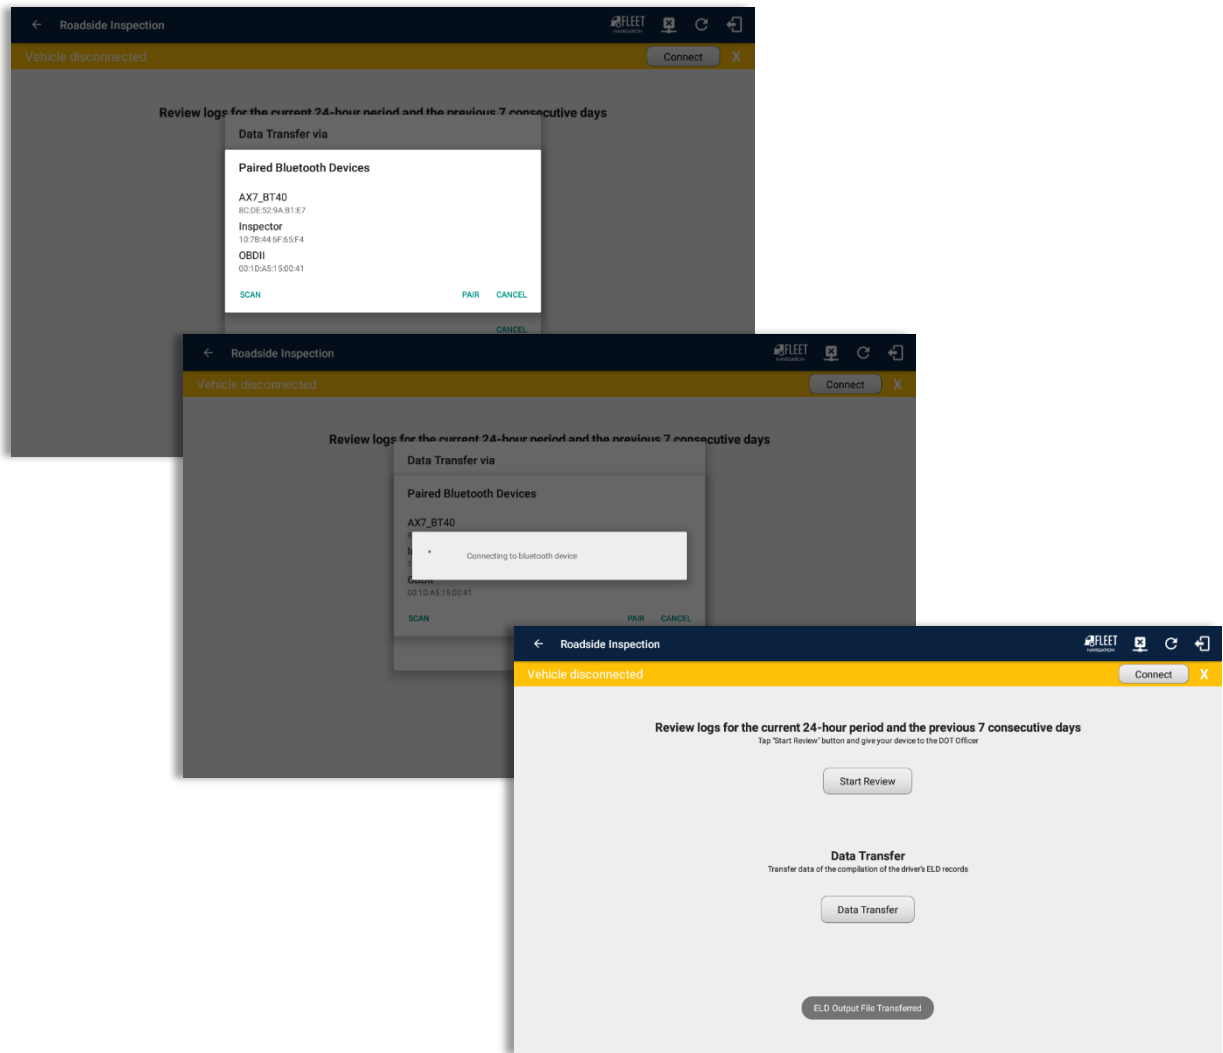



After the data transfer process is successful, a toast message will then display at the bottom stating that the 'ELD Output File Transferred'.

- **Transfer via USB (Android Only)** - this option enables the user to transfer files through USB (external devices).

 
After selecting a data transfer option, the ELD prompts for an output file comment which the driver may enter (optional). The ELD accommodates the entry of an output file comment up to 60 characters long.

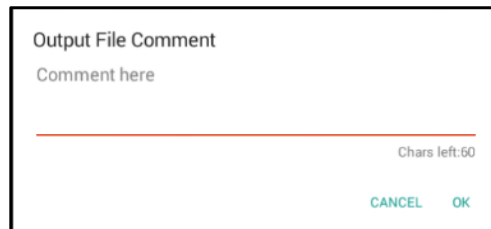

  
Prior to saving the driver's ELD file to an external storage/device, the ELD must read a verification text file from the USB device provided by the Authorized Safety Officials. This can be done by selecting the path where the verification file is located on the Safety Official's USB device.

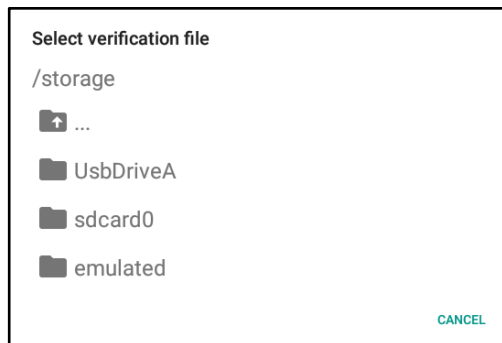

 If the verification process is successful, a 'Verification Successful' dialog will display.

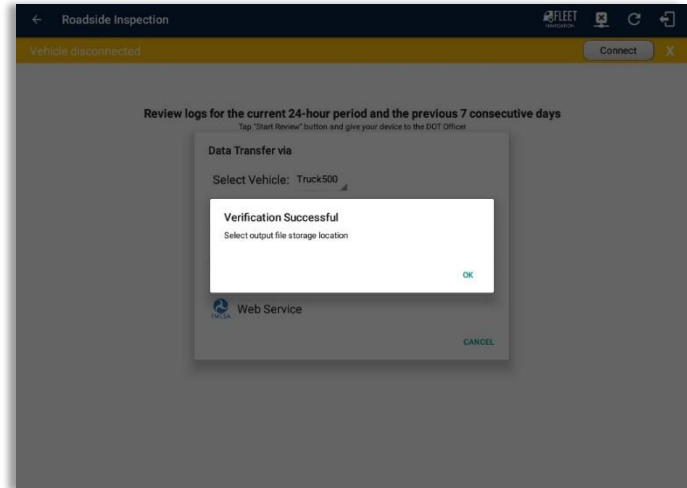

 Once 'OK' button is tapped, then the driver can now select on where to save the ELD file.

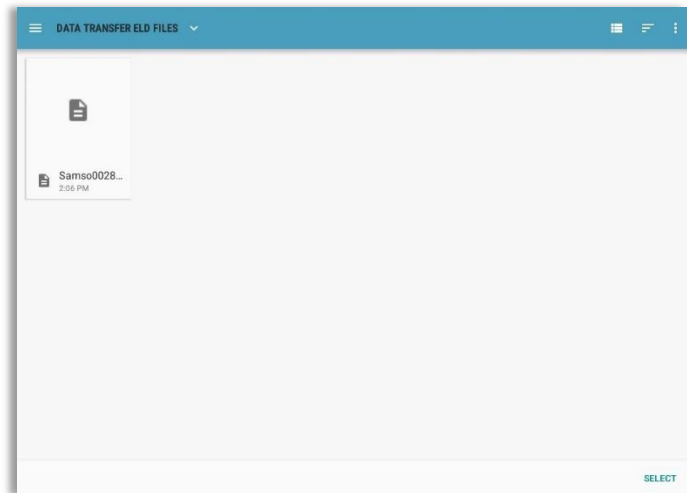

Upon confirmation, the ELD generates the compliant output file and performs the data transfer. A toast message will display at the bottom stating that the 'ELD Output File Transferred'.

Note: You cannot transfer a file via USB when the verification file on the device is not the same as the verification file on the inspector's USB drive. If this issue occurs a toast message will display stating 'Invalid verification file'.

 
- **Transfer via Email** - this option enables the user to transfer files through email. The ELD output file transferred is encrypted using AES-256 in FIPS Publication 197. Before sending, the ELD prompts for an output file comment which the driver may enter (optional).




After the data transfer process is successful, a toast message will then display at the bottom stating that 'ELD Output File Transferred'.

Note: Data transfer via email is sent to fmcsaeldsub@dot.gov.

- **Transfer via Web Service** - this option enables the user to submit ELD output files, and verify that the ELD's certificate, ELD Identifier, and Registration ID are still valid.

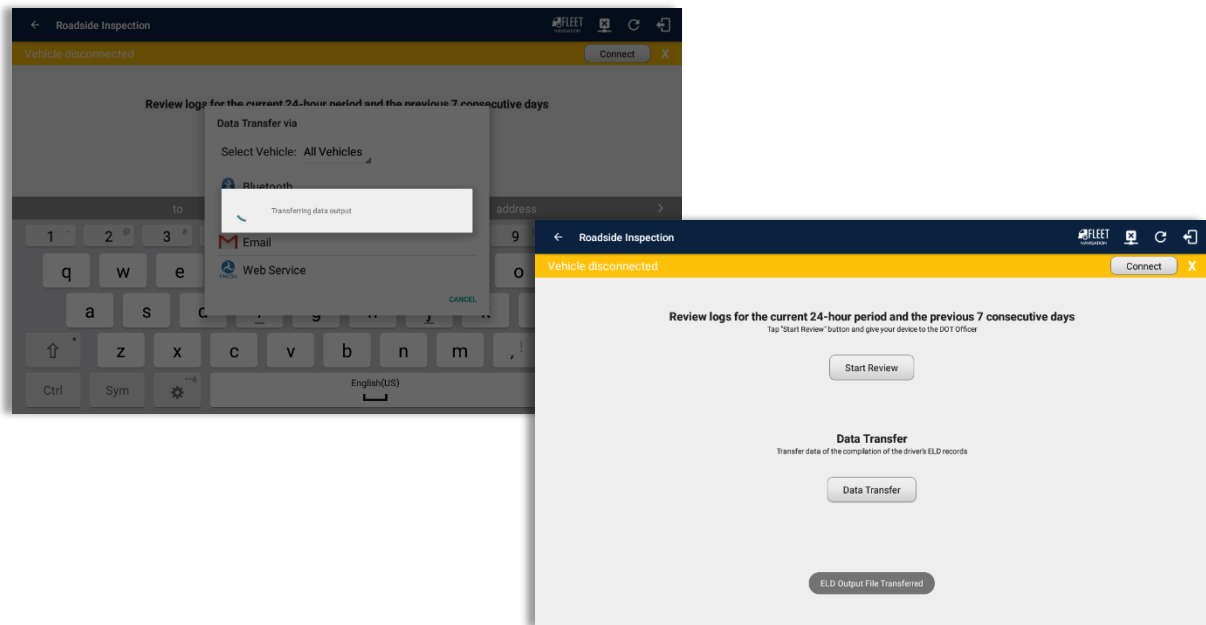


 After the data transfer process is successful, a toast message will then display at the bottom stating that the 'ELD Output File Transferred'. When the selected vehicle has an invalid information then a dialog will display with an error message.

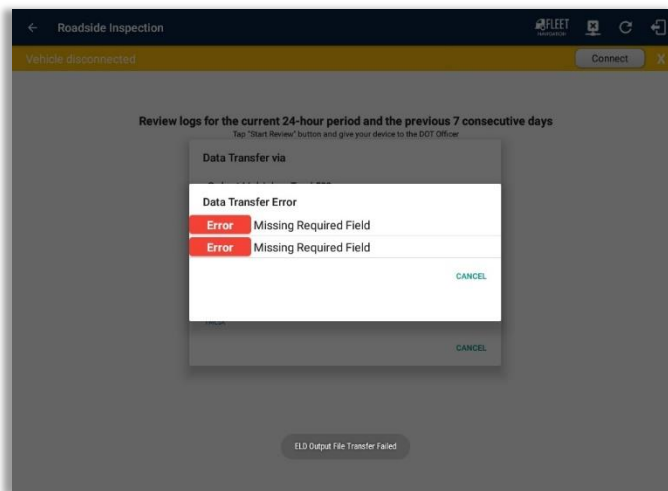

3.6 Options

 
Selecting the **Options** button from the **HOS Main Screen** will display the **Options** module:

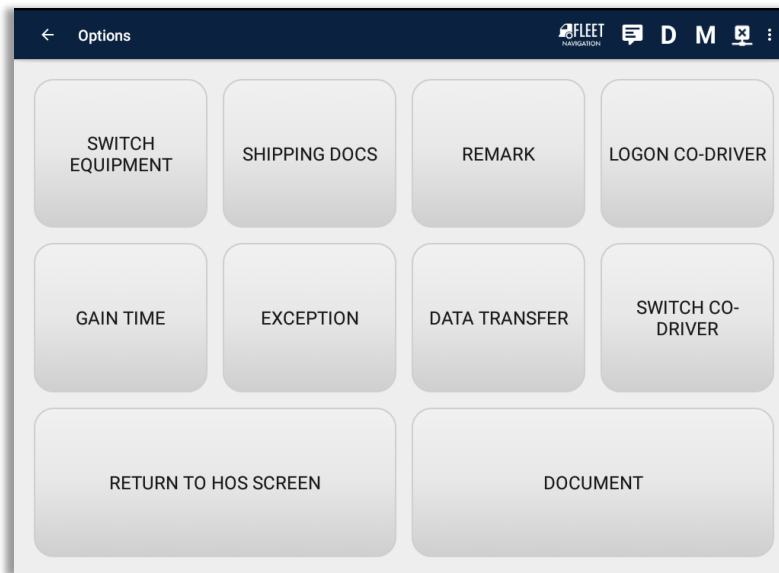

The functions within the Options module will be covered in more detail throughout this document.

3.7 Logs

 Selecting the **Logs** button from the **HOS Main Screen** will display the current days log and provide the ability to navigate backwards to view the previous seven logs:

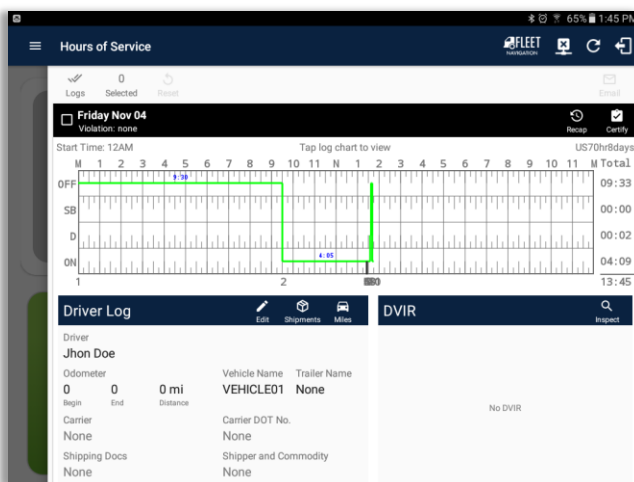

Scroll the screen to view all of the information, or, tap the log grid to view the log events

3.8 DVIR

Selecting the **DVIR** button from the **HOS Main Screen** will display the Select DVIR screen:

- DVIR can be created to suit the vehicle types, all DVIRs will be displayed on this screen.
- DVIR History can be viewed by tapping the DVIR History button in the DVIR screen

 
Note:

- When switching the vehicles, the equipment's will be displayed along with their associated forms. Changing the forms used will pop up a message dialog stating "Are you sure you want to use a different form?" with a 'Cancel' or 'Ok' button.
- Highlighted text only displays when conducting an inspection for the first time and that no DVIR forms are associated to the current equipment used.

3.9 Shift/Cycle

Selecting the Shift/Cycle button from the HOS Main Screen will display the total work hours of the driver's current work shift and the total working hours that the driver can legally accumulate over a certain cycle or a consecutive multi-day period:


4 Check Driver Availability

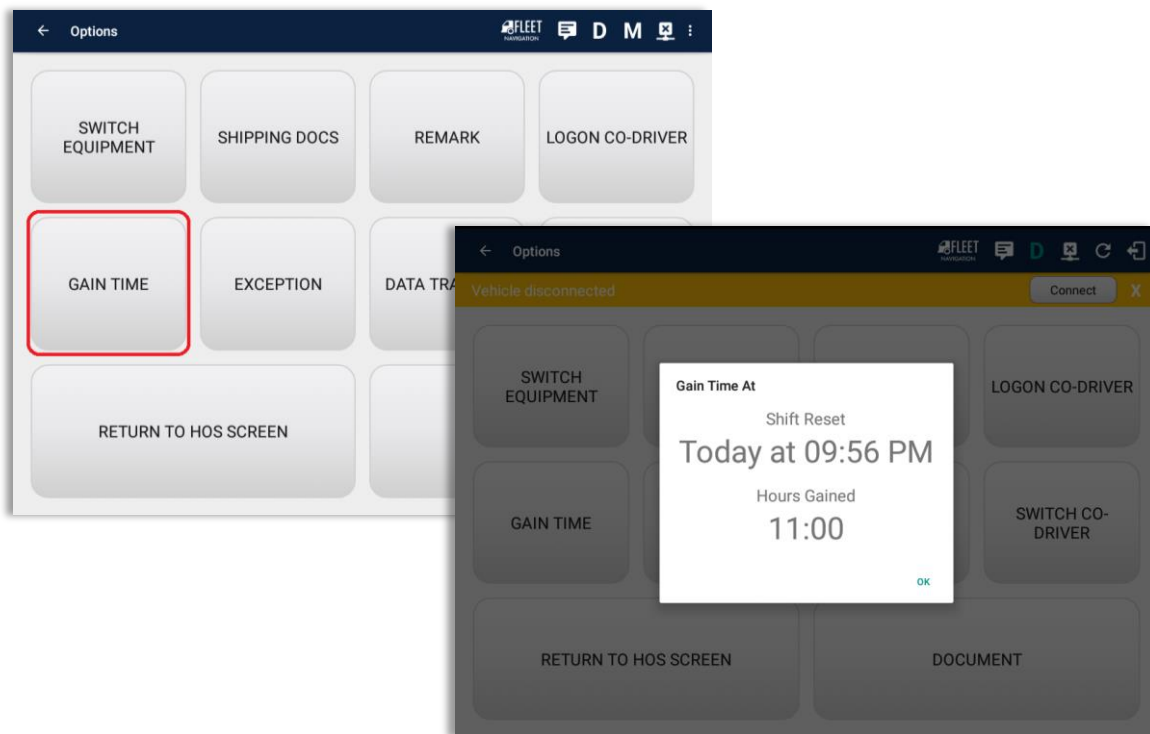

From the **Hours of Service Main Screen**, tap the **Options** button and then tap the **Gain Time** button, this will then display a date & time of when the driver will gain his/her maximum hours.

5 Driver Logs

 The **Driver Logs** allows you to view and update the electronic recording of your duty status events in the HOS app's online driver logs. This is where you also store shipment data, send the certified logs to its intended recipients and manage other driving duty information.

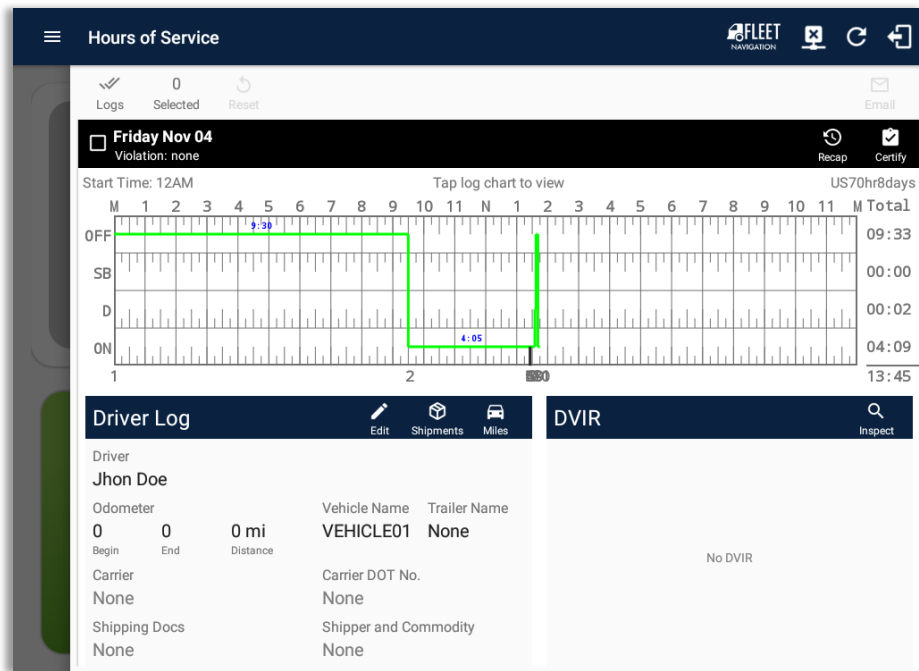


Scroll the screen to view all of the information, or, tap the log grid to view the log events. The daily log for the current day will be in expanded view by default. The daily driver logs for the previous days will be in collapsed view.



To expand or collapse a daily log, tap the Collapsible Menu Header

Cycles and the **Start Hour** time used are also shown in the Log, it is found on the upper right corner just above the **Grid Chart**.

5.1 Using the Driver Logs Bulk/ Multiple Selection Functions

 The first part of the Driver Logs user interface feature controls and information for the bulk/multiple selection features. These controls will allow you to perform features for multiple selected driver logs.

Function icon	Function	Description
	Selection Button	Tap the button to select all certified logs

 	Selected Logs Counter	This shows the number of selected certified driver logs
	Reset Button	This clears/deselects all of the selected driver logs

5.2 The Driver Logs Accordion Header Features

To expand or collapse a daily log, tap the Driver Logs Accordion/Collapsible Menu Header:



Note: Driver Logs title shows the full time range when the **Start Hour** time is not zero. You can change the time by going to Settings > HOS Preferences

5.2.1 Daily Driver's Log Entry Check-box (Uncertified Log)

Tap the check-box to certify the selected daily log:



5.2.2 Daily Driver's Log Entry Check-box (Already Certified)

Tap the check-box to uncertify the selected daily log:



 
5.2.3 Daily Driver's Title Log (Recertify Log)



When a certified log has been edited in the portal, it prompts the driver to either accept or reject the proposed changes through the “Edit Suggestions” dialog. Once the driver accepts an edit request, it will display a note on the daily driver's title log stating “**Recertify**”, which indicates the log needs to be certified again in order to include the records changes.

5.2.4 Recap


Tap the Recap button to bring up the recap information and corresponding cycle data for the specified duty day

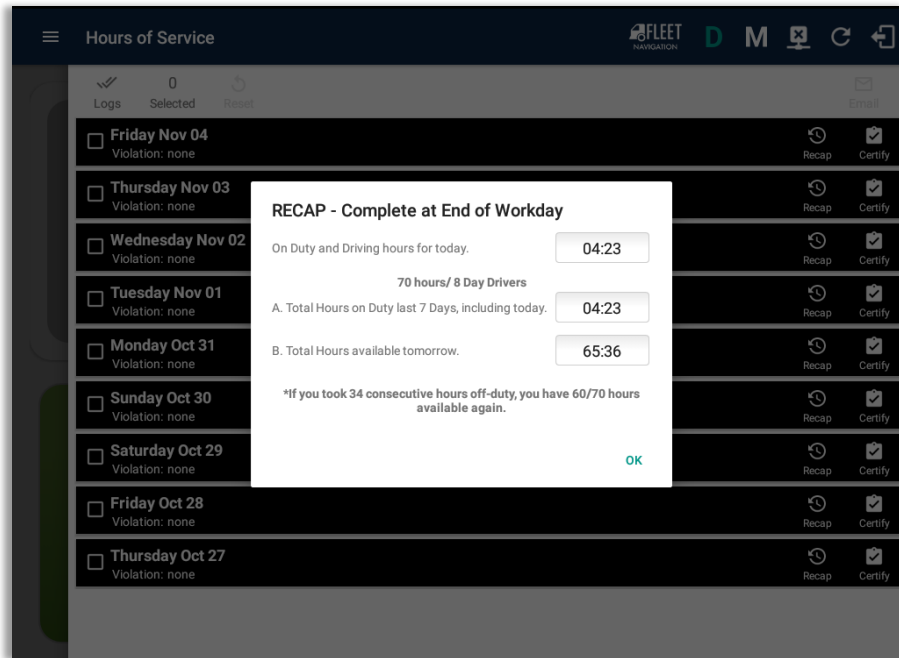

Tapping the **Recap** button will display a complete recap for the end of the workday including:

- On Duty & Driving Hours, - Total hours on duty last 7 days (including current day), - Total hours available tomorrow, - Total hours On Duty last 8 days (including current day)

 
5.2.5 Daily Drivers Log Grid

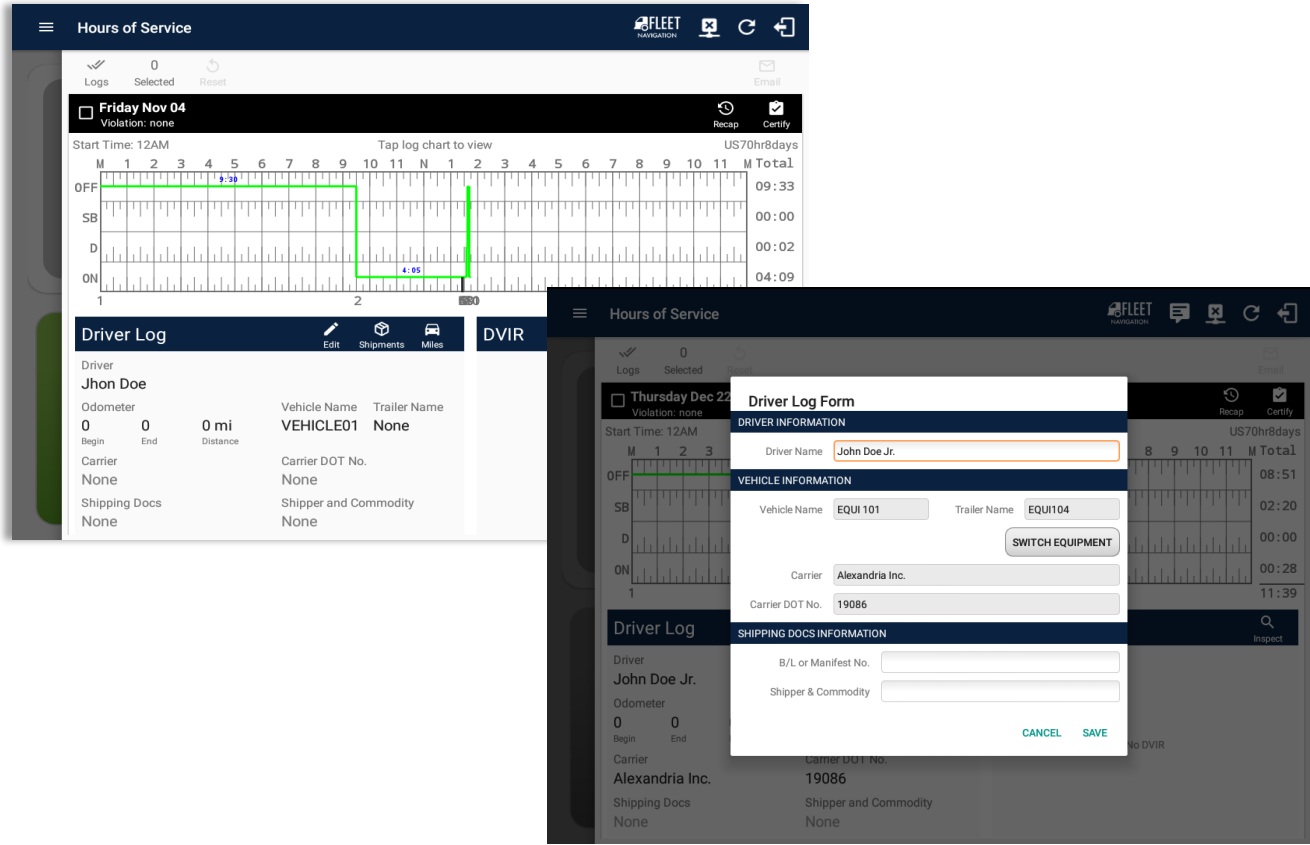

Tap the driver's log grid to view the log events and edit the log. Scroll up/down the screen to view the Daily Driver's Form; this is where you can view the other required information that must appear in the driver's daily log. In addition, not all of the events statuses are displayed on the grid chart. Personal Use and Yard Moves are also displayed on the grid chart as an Amber color line to be visually different with the other event statuses, a **dashed line** represents the Personal Use event and a **dotted line** represents the Yard Moves event. The legends for Personal Use and Yard Moves event will only display when the said events occurred.



 5.2.6 Edit Daily Drivers Log Form

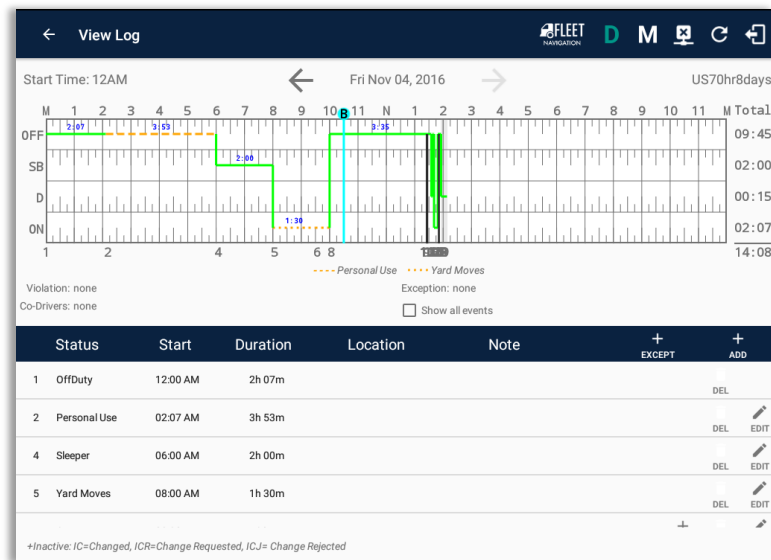

Tap the **Edit** button to open the **Driver Log Form**, from here; you can update the other required information that must appear in the driver's daily log (as listed below)

The following information can be viewed / amended within the **Daily Drivers Log Grid**:

Driver Information

a) **Driver Name** – displays the name of the driver

b) **Vehicle Information**

- Vehicle Name – displays the name of the current Vehicle of the driver.
- Trailer Name – displays the name of the current Trailer of the driver.
- SWITCH EQUIPMENT – tap this button to launch the Switch Equipment dialog to select another Vehicle or Trailer names.
- Carrier – a non-editable field which displays the Name of the Carrier.
- Carrier DOT Number – a non-editable field which displays the Carrier DOT Number

c) **Shipping Information**

- Shipping docs – displays the bill of lading or manifest number entered by the driver
- Shipper & Commodity – displays the shipper name and the type of commodity which the shipment contains

5.2.7 Shipment Details

Tap the **Shipments** button to open the **Shipment Details Form**; you can fill in the shipment data that is to be included in the driver's daily log.

Note: The data that can be included in this form is listed on the next page.

Data that can be included within the **Shipment Details Form** includes:

Shipments on Truck

- Order Number – the order number of the specific shipment item
- Weight – the weight of the shipments
- From – the point of origin of the commercial motor vehicle
- To – the destination of the commercial motor vehicle

Shipments Unloaded Today

- Order Number – the order number of the specific shipment item
- Collected or Billed – the preferred payment method
- Amount Collected – the amount collected for the shipment
- Mailed Papers From – the name of the shipment company where the shipping related documents are from

5.2.8 Miles Driven by State

Hours of Service

Logs

0 Selected

Reset

Email

Recap

Certify

Friday Nov 04

Violation: none

Start Time: 12AM

US70hr8days

M	1	2	3	4	5	6	7	8	9	10	11	M	Total
OFF	2:07			3:53									09:45
SB													02:00
D													00:15
ON													02:07
	1	2											14:08

Driver Log

Driver

Jhon Doe

Odometer

490 490 0 mi

Begin End Distance

Carrier

None

Shipping Docs

None

Vehicle Name

VEHICLE01

Trailer Name

None

Carrier DOT No.

None

Shipper and Commodity

None

No DVIR

MILES DRIVEN TODAY BY STATES

CODE	STATE	LOADED	EMPTY	ROUTED NO.	FUEL TICKETS
		0	0		
		0	0		
		0	0		
		0	0		
		0	0		
		0	0		
		0	0		
TOTAL:		0	0		

 
CANCEL

OK

Tap the **Miles** button to open the **Miles Driven Today by States** dialog. This is where you can fill in the shipment data that is required to be included in the driver's daily log. Required data includes:

- Code
State
Loaded
Empty
Routed Number
Fuel Purchased Tickets Attached

5.2.9 DVIR

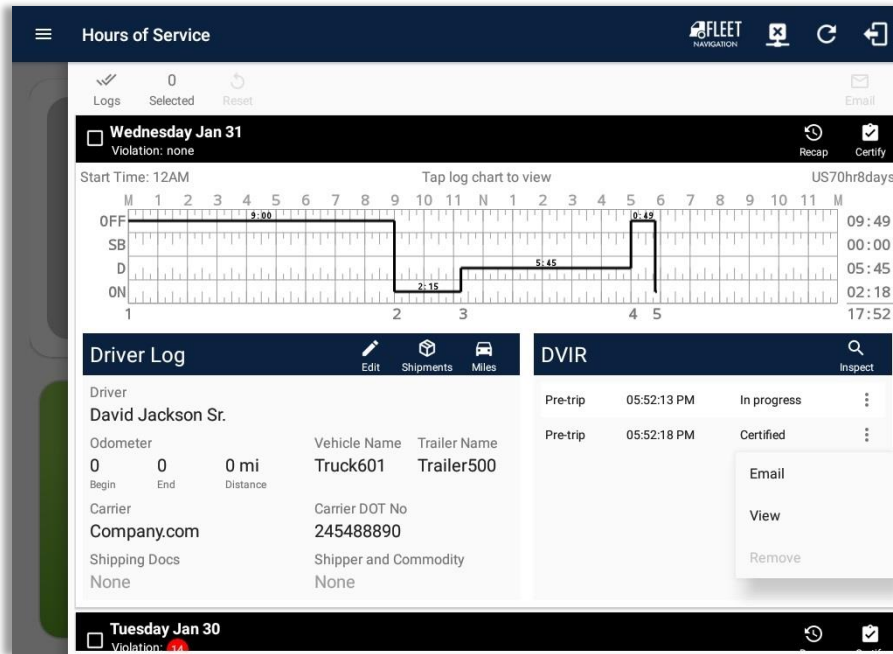

This is where you can view a list of the DVIRs conducted during the selected working day.

Tap the  icon to open the pane for the email and view options.

Tap the **Email** button to send the completed DVIR.

Tap the **View** button to view the DVIR.

 
Tap the **Remove** button to remove the DVIR.

Note:

- *Email button will only be enabled if the DVIR Log is already certified.*
- *Certified logs cannot be removed (unless uncertified).*


5.2.10 Certify a Log

Tap the **Certify** button to certify the selected daily log. If the current status is **Driving**, a pop up dialog will open and you will be asked to confirm changing the status to Off Duty:

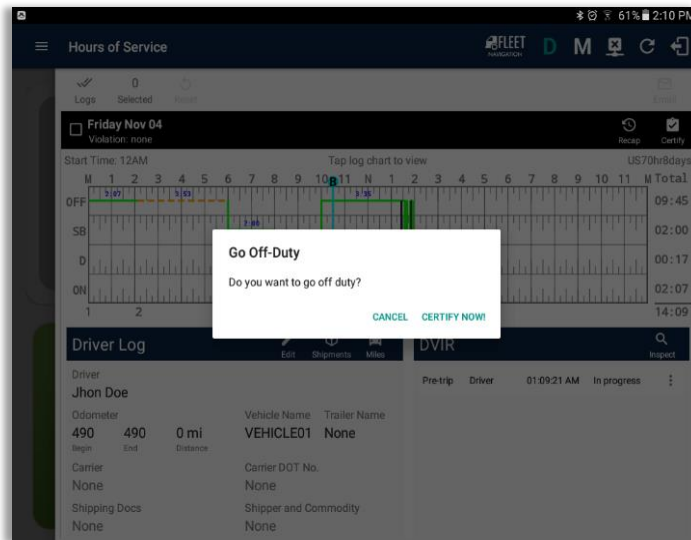


Tap the **Certify Now** button to confirm you wish to go **Off Duty**.

 Tap the **Cancel** button to cancel changing the status.

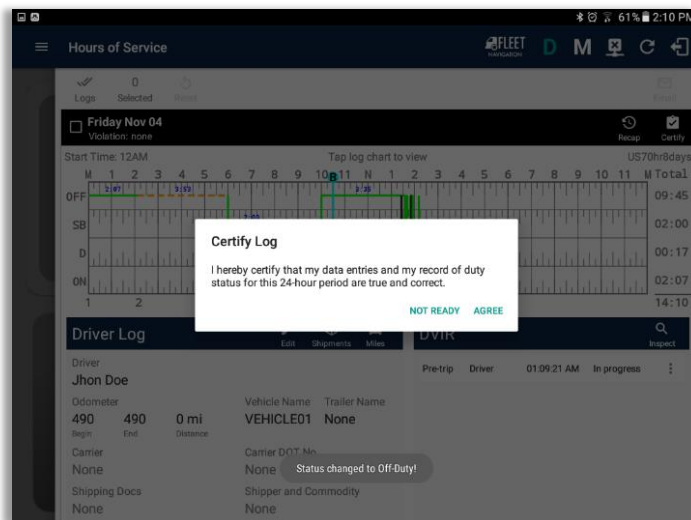


Tap the **Agree** button to confirm certifying a daily log.

 Tap the **Not Ready** button to cancel certifying a log.

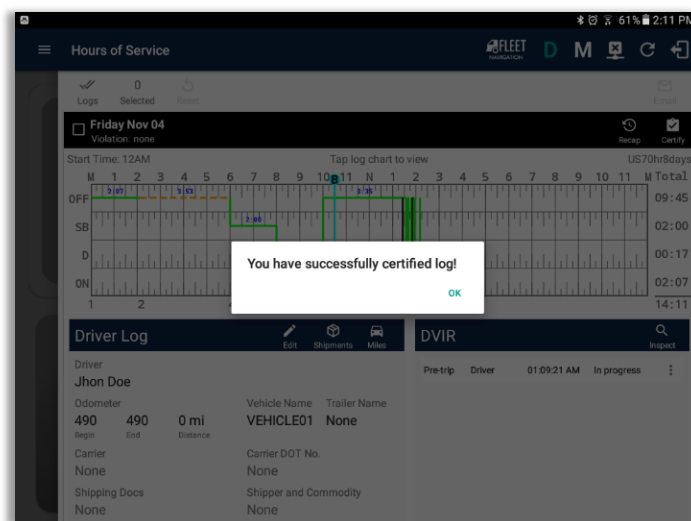


 Tap the **OK** button to close the confirmation pop up dialog.

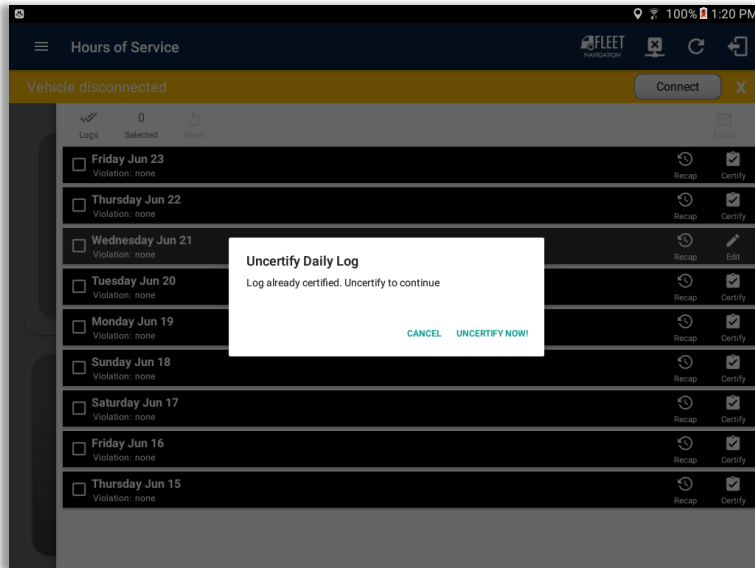

Tap the **OK** button if you wish to email the certified log to a selected recipient.

 Select the **Cancel** button to close the pop up dialog without emailing the certified log.

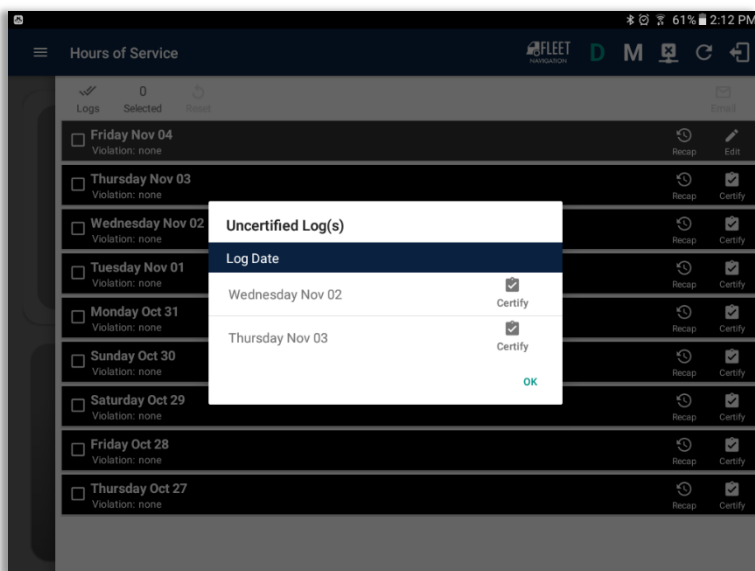


If the driver did not certify all the daily logs, the ELD will prompt the driver regarding uncertified logs upon logging in and logging out to the app along with the option to certify the relevant days.

5.2.11 Email a Log

When driver need to email a certified logs PDF to the back office, the driver can send directly from the **App** used (e.g Gmail app for Android) or have the HOS **Server** send the email instead of sending it directly from the mobile device.

 Email Log via Server

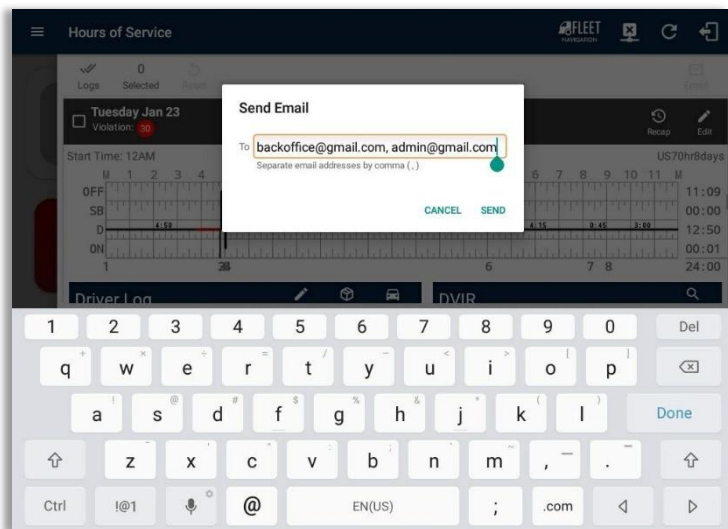


A Send Email dialog will display when the driver taps 'Yes' on the prompt to send certified log.

Enter the email address for the recipient. If the recipient is more than one, separate email addresses by comma. Tap **Send** button to send the certified log PDF.

Note: To send certified log PDF via HOS Server, set the Email Sender option to Server (default to Server) in Settings screen>HOS Preferences>Other.

 Email Log via App

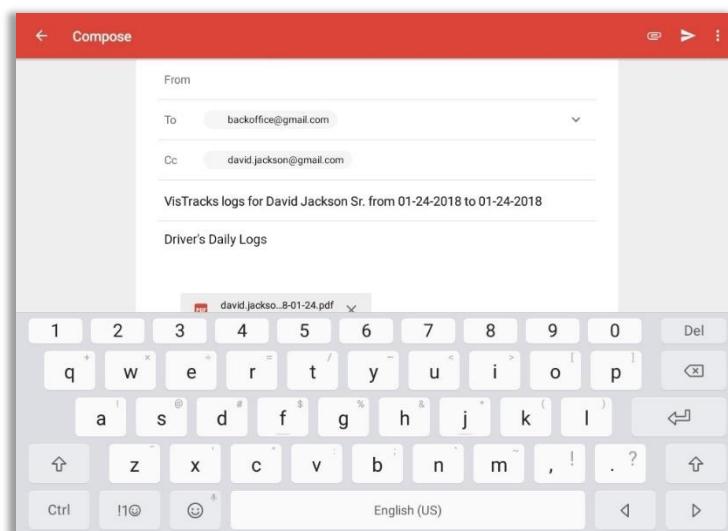


An app will open (e.g. Gmail app will open for Android device) with a new message that has a PDF file attached when the driver taps 'Yes' on the prompt to send certified log.

If driver has recipient email populated in the **portal>settings>drivers' management page>PDF Report** or in the **app>settings>PDF Report Email**, then recipient email is also pre-populated in the email draft.

Note: To send certified log PDF via App, set the Email Sender option to App in Settings screen>HOS Preferences>Other.

5.2.12 Edit a Log

 
Only driver logs that have not yet been certified can be edited, you will have to uncertify a driver log in order to update its contents, to do this, tap the Edit button to uncertify the selected log and reopen it for editing:

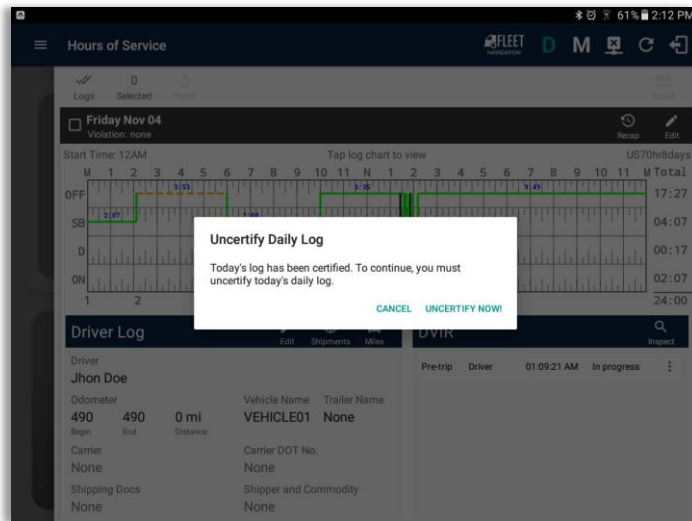

Tap the **Uncertify Now** button to confirm uncertifying the selected log.

 
Tap the **Cancel** button to cancel uncertifying the selected log.

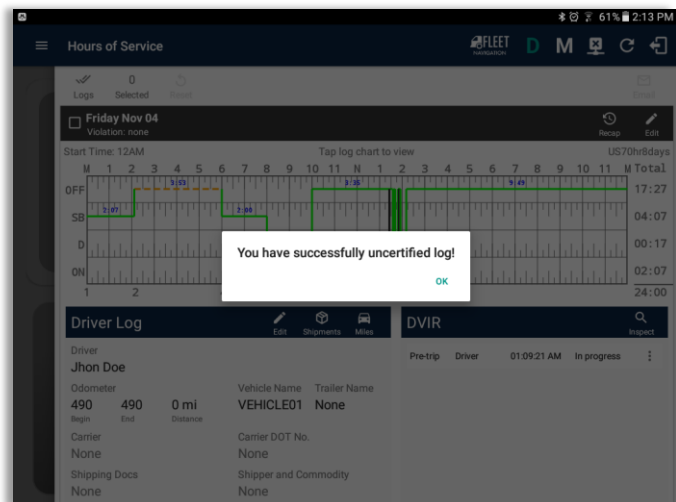

Tap the **OK** button to close the pop up dialog.



 The **Edit Log** screen can update/correct the driver's or driving duty data entries logged through the app. It can also view the history of an edited log.

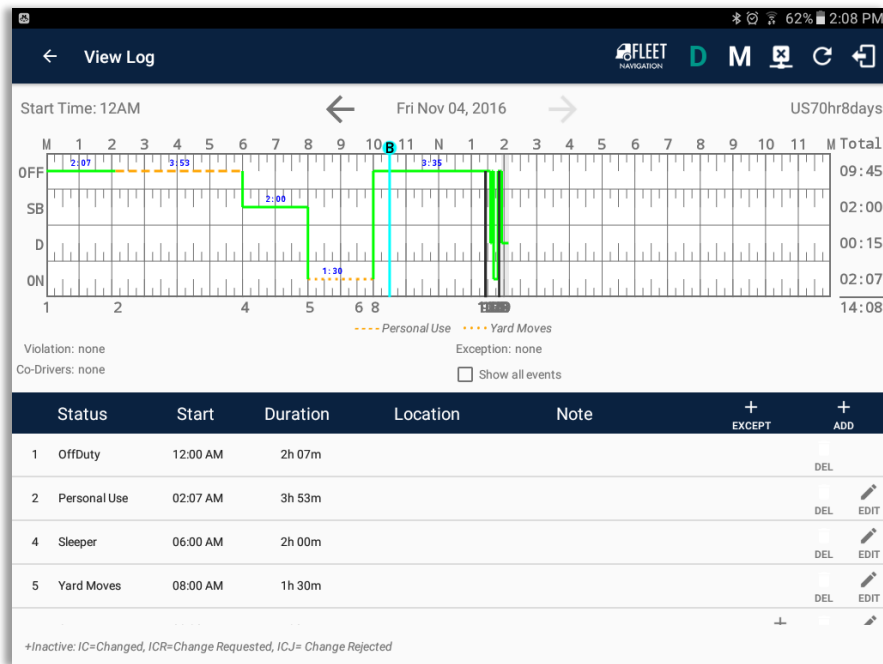
Tap the driver's log grid to start editing it:



You can navigate through the daily driver logs by selecting either back or forward arrows located above the grid  

Driver will be able to add a note to the following events: Intermediate log

 - Login/logout
- CMV Engine power up/shut down
- Malfunctions and diagnostic events

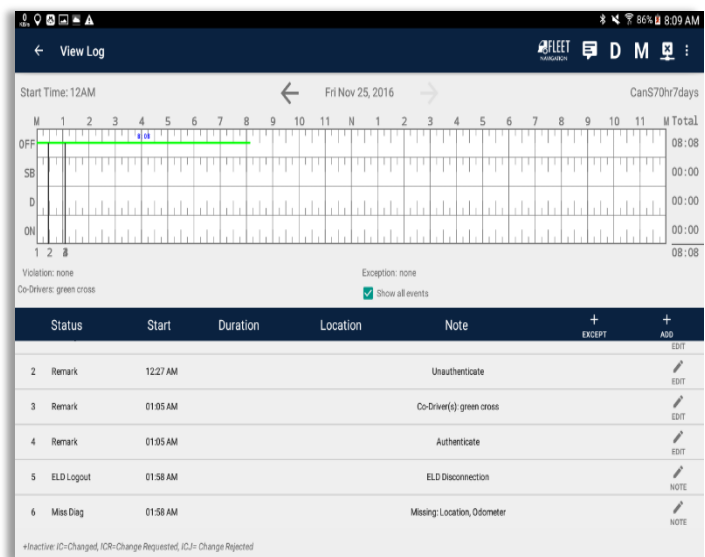

Create Log Event

Vehicle disconnected

Start Time: 00

00 1 2 3 4 5 6

OFF

SB

D

ON

1

Violation: none

Co-Drivers: none

Status Start

1	OffDuty	00:00
2	Remark	07:56
3	Sleeper	08:23
4	Remark	08:56

+Inactive: IC=Changed, ICR=Change Requested, ICJ= Change Rejected

Warning: Location Service is currently disabled

US60hr7days

19 20 21 22 23 00Total

08:23

03:21

00:00

01:27

13:11

Connect X

CREATE EVENT FOR THU MAR 30

Start: <-15 Thu 13:11 +15>

Duration: 0 minutes

Status: OffDuty

Location: Enter Location

Note: Add Note

Reason: No reason selected

Odometer: 0 mi

☐ Personal Use ☐ Yard Moves

CANCEL OK

To add a new event to the selected log, tap the **Add** button, input the relevant details to create the event, once complete, tap the **OK** button to save the event. Also, the current status of the app is disabled to prevent adding the same status consecutively.

Note: Refer to 3.2 Changing the Driver's Status for 'Personal Use'.

Modify Log Event

Vehicle disconnected

Start Time: 00

00 1 2 3 4 5 6

OFF

SB

D

ON

1

Violation: none

Co-Drivers: none

Status Start

1	OffDuty	00:00
2	Remark	07:56
3	Sleeper	08:23
4	Remark	08:56

+Inactive: IC=Changed, ICR=Change Requested, ICJ= Change Rejected

US60hr7days

19 20 21 22 23 00Total

08:23

03:21

00:00

01:27

13:11

Connect X

MODIFY EVENT FOR THU MAR 30 LOG

Start: <-15 Thu 08:23 +15>

Duration: 3 hours 21 minutes

Status: Sleeper

Location: Enter Location

Note: Add Note

 
Reason: Driver Not Logged On

Odometer: 0 mi


☐ Personal Use ☐ Yard Moves

DEACTIVATE CANCEL OK

Tap the **Edit** button adjacent to any of the existing log events, make any required changes, select a reason for the edit from the drop-down list and then tap the **OK** button to save the changes.

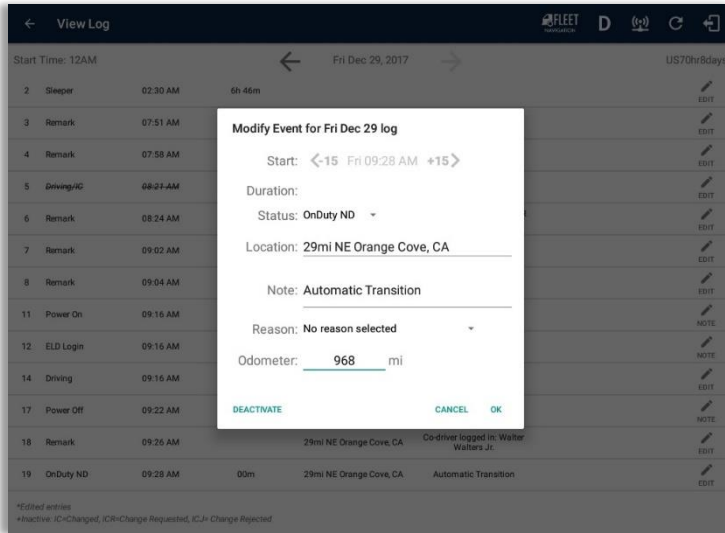

 Regardless if the vehicle currently used is in AOBDR or ELD mode, driver can be able to edit the **Auto OnDuty ND** event the same with editing a manually created events.

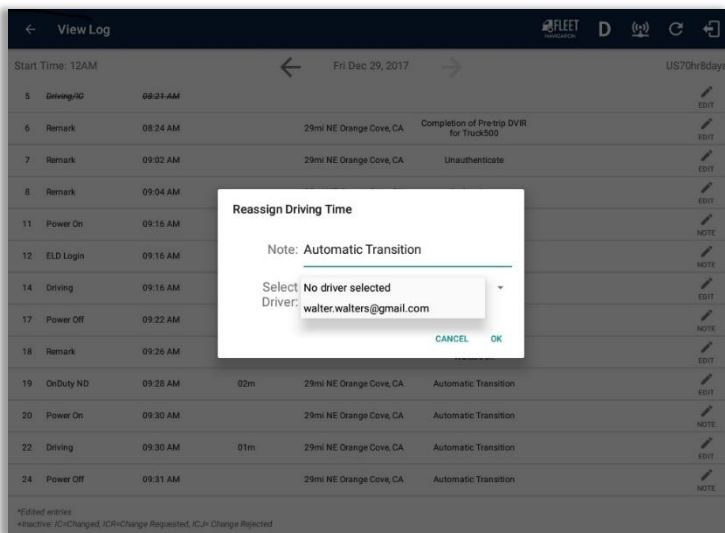

For **Auto Driving event**, driver can be able to edit a note or reassign the event to a co-driver. (See Section 10.1 Logon Co-Driver-> Reassign Driving Time)

Modify Log Event Using Grid View Editing

When **Use GridView Editing** is enabled in Settings->HOS Preferences, a grid view editing form will display upon tapping **Edit** button to any of the existing log events or tapping the **Insert Past Status** button.

User can then make any required changes:

 
- Drag the sliders on the grid to set the Begin Time and End Time or by manually entering the time using time picker field.
- Select Off Duty, Sleeper Berth, Driving or On Duty ND button
- Select a reason for the edit from the drop-down list.
- Fill other fields required fields.
- Then tap the **Save** button to save the changes.

Notes:


- All log events that have been manually created or amended, will be displayed with an asterisk against it in the log events list depicting that it has been edited. Also scroll down to see check boxes for Personal Use, Yard Moves and Off Road.
- Upon editing a past event, the Note field should not be empty and must contain at least 4 characters when filled out.

Pending Edit Requests


The Motor Carrier can request edits to the driver's logs. In the application allows the driver to review the requested edits which requires the driver to take necessary action whether the driver wants to **"confirm"** or **"reject"** the requested edits.

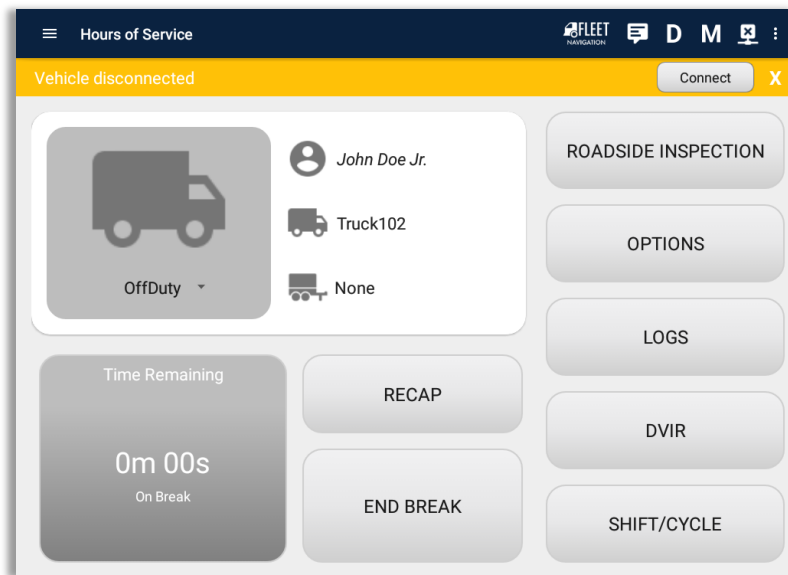

Tap the icon beside the refresh button to display the pending edit request dialog.

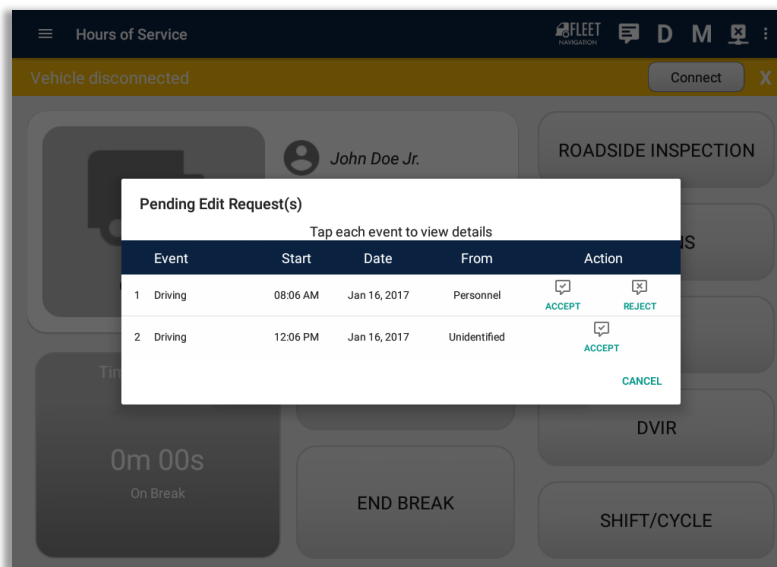 

 
The Pending Request dialog also appears upon certifying a log only if driver has pending requests. Driver must accept or reject the pending request(s) first before certifying the days's log.

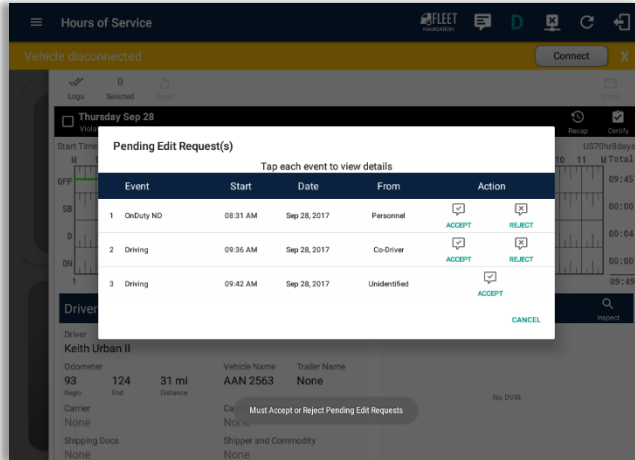

A toast message will be displayed at the bottom of app stating: "Must Accept or Reject Pending Requests".


Note: The events from the 'Unidentified' driver does not require acceptance.

 The Reject and Accept Event dialog shows the comparison of the Original status vs the changes (requested edits). Also, accepting the edits requested requires the driver to fill in the annotation field (**Required**) to successfully save the changes.

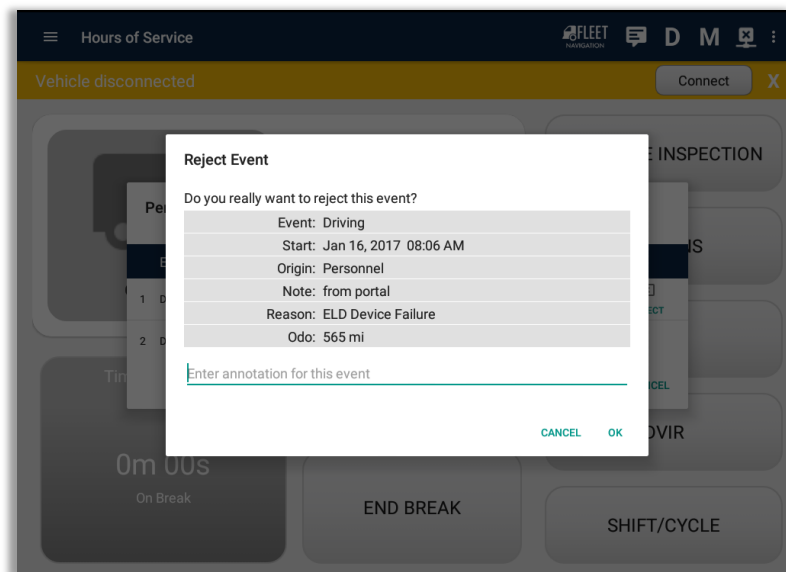


If the driver rejects the edit suggestions then the original record remains

 If the driver approves the edit suggestions, the new status will replace the old status and the changes will be reflected in the events history list

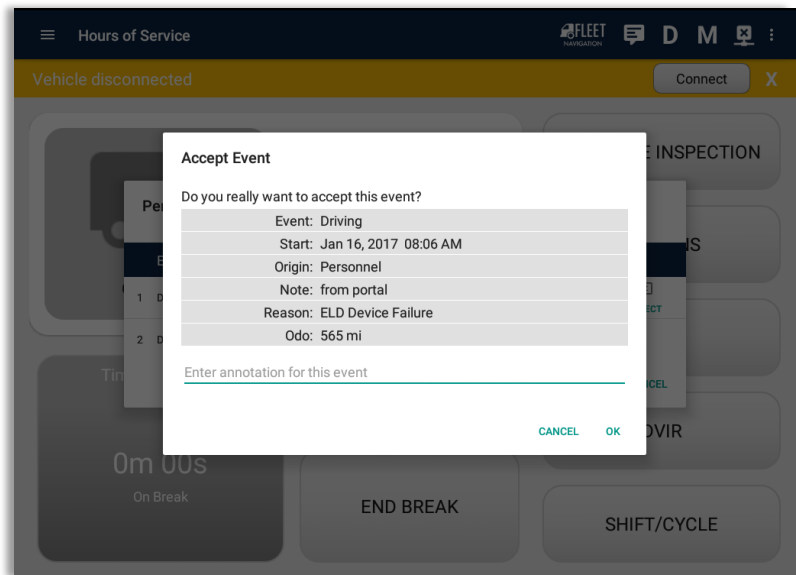

Auto Events

 The ELD automatically records the driving time when the vehicle is in motion by setting duty status to driving for the driver unless, before the vehicle is in motion, the driver has sets the duty status to off-duty and indicates personal use of CMV, in which case duty status must remain off-duty until driver's indication of the driving condition ends;

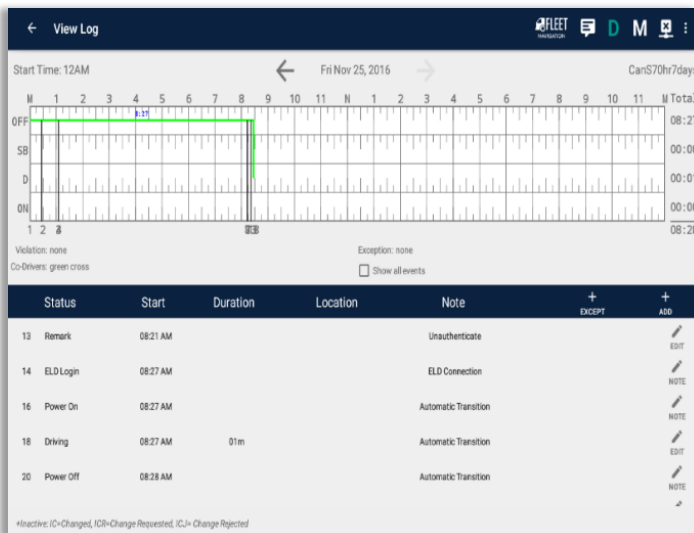


Events such as Power On, Power Off, Driving and OnDuty are automatically created when connecting to a device. Auto events created were recorded and displayed on the Events history list indicated with a note **"Automatic Transition"**.


(These events are also displayed in the Portal)

To view all the auto created events (primary or secondary events) when connecting to a device, tap on the **'Show all events'** checkbox to enable.

 To hide all the secondary events, tap back on the checkbox to disable.

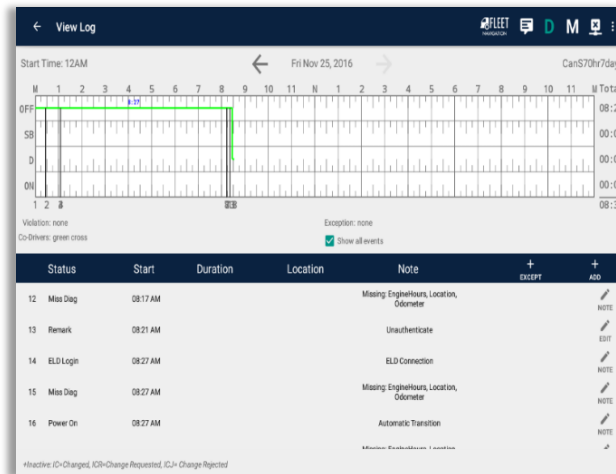

 Note: The graph-grid overlay periods of driver's indications of authorized personal use of CMV and yard moves using a different style line (such as the dashed or dotted line in amber color).

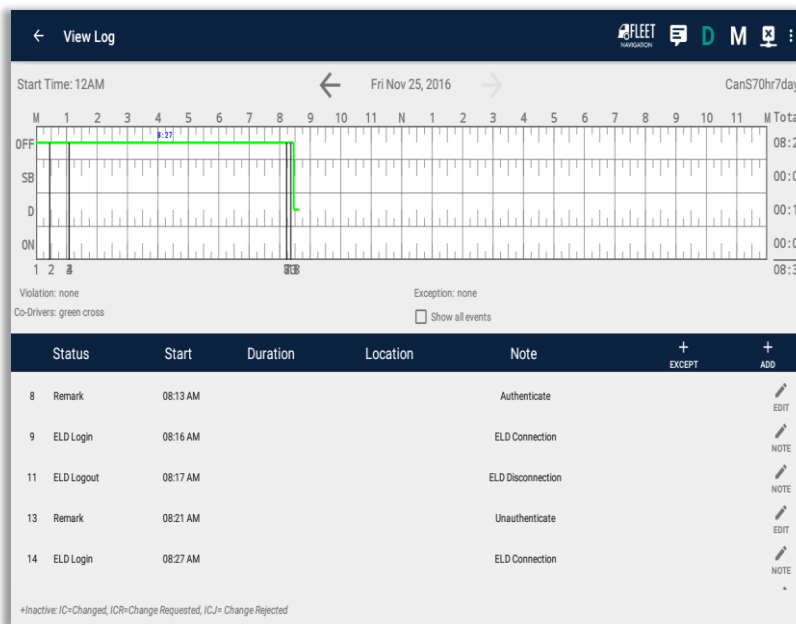


- A Remark will be recorded with a note "Authenticate" to the events history list if Driver will login to app.
- A Remark will be recoded with a note "Unauthenticate" if driver will logout from app.
- ELD Login will be recorded with a note "ELD Connection" to events' history list when app successfully connected to VBUS Device.
- ELD Logout will be recorded with a note "ELD Disconnection" to events' history list when driver manually disconnect to VBUS Device by tapping the connect/disconnect icon located at the App header.

Crossing Boundaries

The border crossing calculation uses the VBUS GPS coordinates if they are available, and the android coordinates if they are not. The following instances happens when the driver crossed boundaries between Canada and US (vice versa):

 - a. If the GPS coordinates are changed to a different state or province, a remark event will be recorded in the driver log.

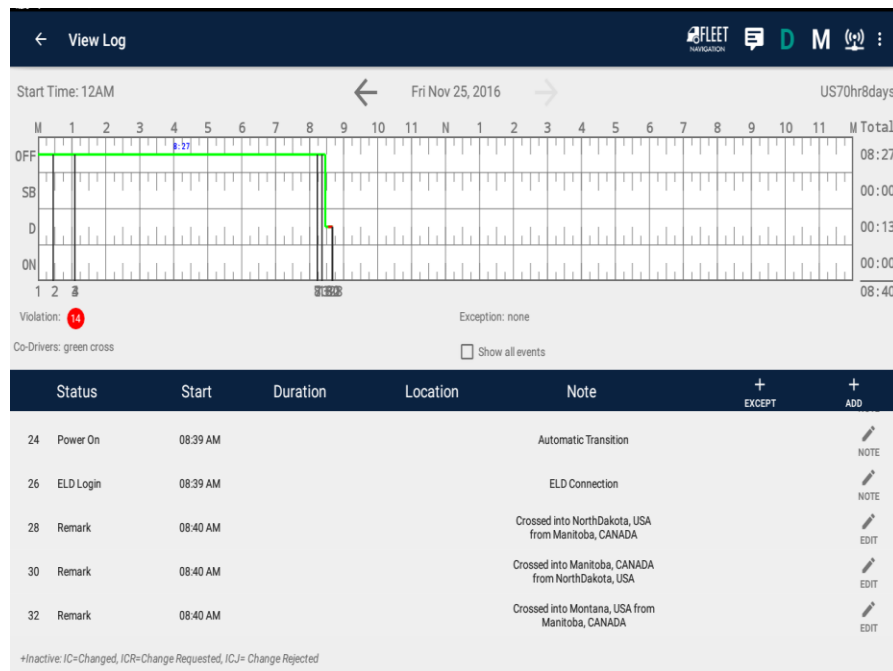

- b. If the current location is in Canada, the driving rules will automatically switched to Canadian rules. Similarly, if the location is in the US, the driving rules automatically switched to US rules.
- c. If there is a co-driver logged in, both the remark and the rules changes will be occurring to be applied for him/her as well.

5.3 Malfunction and Data Diagnostic Events


At Each instance when an ELD malfunction or data diagnostic event is detected or cleared by the ELD, the ELD records the event. The recorded malfunctions and data diagnostic events are inconsistencies found while monitoring the app/ELD against FMCSA compliance requirements. These instances are indicated in the application header and in the Android notification toolbar with the letters M and D, respectively.



Note: The ELD Data Diagnostic indicator provides notification of active data diagnostics events applicable to the active driver. The Data Diagnostics “D” icon will flash in amber color if there are new active Data Diagnostics events that is not yet reviewed by the driver and will only turn back to white once the Data Diagnostic dialog is closed after being reviewed by the driver. There will also be a notification in the Android toolbar indicating a malfunction or a data diagnostic event.

Data Diagnostics				
Code	Date	Time	Description	Action
3	Fri Nov 04, 2016	01:56:00 PM	Missing: Location	CLEAR
3	Fri Nov 04, 2016	01:55:39 PM	Missing: Location	CLEAR
3	Fri Nov 04, 2016	01:55:30 PM	Missing: Location	CLEAR
3	Fri Nov 04, 2016	01:55:30 PM	Missing: Location	CLEAR
CLEAR ALL				

Malfunctions				
Code	Date	Time	Description	Action
L	Fri Nov 04, 2016	01:55:30 PM	Position Malfunction	CLEAR
P	Thu Nov 03, 2016	05:39:34 AM	Power Malfunction	CLEAR
CANCEL				

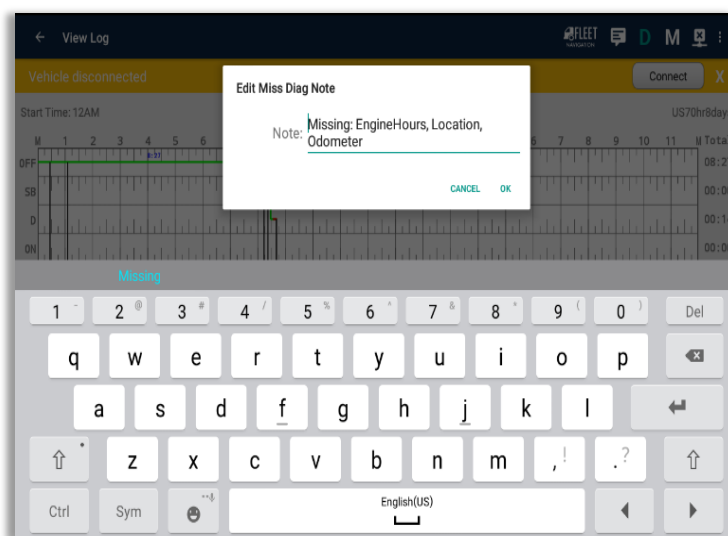 

The Malfunction and Data Diagnostic events note can also be edited on the edit log screen.

Tap the **Clear button** to clear the malfunction or data diagnostic event detected.

To clear all Data Diagnostic Events, tap the **Clear All** button.

Malfunction Events			
Requirement No.	Event Code	Event Name	Description
4.6.1.1	P / Power MF	Power Malfunction	An ELD must set a power compliance malfunction if the power data diagnostics event described in paragraph 4.6.1.1(a) of this appendix indicates an aggregated in-motion driving time understatement of 30 minutes or more on the ELD over a 24-hour period across all driver profiles, including the unidentified driver profile.
4.6.1.2	E / Sync MF	Engine Synchronization Malfunction	An ELD must set an engine synchronization compliance malfunction if connectivity to any of the required data sources specified in section 4.3.1 of this 87 appendix is lost for more than 30 minutes during a 24-hour period aggregated across all driver profiles, including the unidentified driver profile.
4.6.1.3	T / Timing MF	Timing Malfunction	The ELD must periodically cross-check its compliance with the requirement specified in section 4.3.1.5 of this appendix with respect to an accurate external UTC source and must record a timing compliance malfunction when it can no longer meet the underlying compliance requirement.
4.6.1.4	L / Pos MF	Position Malfunction	ELD records requiring location information must use the last valid position measurement and include the latitude/longitude

			<p>coordinates and distance traveled, in miles, since the last valid position measurement.</p> <p>An ELD must monitor elapsed time during periods when the ELD fails to acquire a valid position measurement within 5 miles of the CMV's movement. When such elapsed time exceeds a cumulative 60 minutes over a 24 hour period, the ELD must set and record a positioning compliance malfunction.</p>
4.6.1.5	R / DR MF	Data Recording Malfunction	An ELD must monitor its storage capacity and integrity and must detect a data recording compliance malfunction if it can no longer record or retain required events or retrieve recorded logs that are not otherwise catalogued remotely by the motor carrier.
4.6.1.7	S / Trans MF	Data Transfer Malfunction	<p>(a) An ELD must implement in-service monitoring functions to verify that the data transfer mechanism(s) described in section 4.9.1 of this appendix are continuing to function properly. An ELD must verify this functionality at least once every 7 days. These monitoring functions may be automatic or may involve manual steps for a driver.</p> <p>(c) After an ELD records a data transfer data diagnostic event, the ELD must increase the</p>

			frequency of the monitoring function to check at least once every 24-hour period. If the ELD stays in the unconfirmed data transfer mode following the next three 90 consecutive monitoring checks, the ELD must detect a data transfer compliance malfunction.
4.6.1.8	O / Other MF	Other Malfunction	In addition to the required monitoring schemes described in sections 4.6.1.1– 4.6.1.7 of this appendix, the ELD provider may implement additional, technology-specific malfunction and data diagnostic detection schemes and may use the ELD's malfunction status indicator and data diagnostic status indicator (described in sections 4.6.2.1 and 4.6.3.1) to communicate the ELD's malfunction or non-compliant state to the operator(s) of the ELD.
Data Diagnostic Events			
Requirement No.	Event Code	Event Name	Description
4.6.1.1	1 / Pwd Diag	Power Diagnostic	An ELD must monitor data it receives from the engine ECM or alternative sources as allowed in sections 4.3.1.1- 4.3.1.4 of this appendix, its onboard sensors, and data record history to identify instances when it may not have complied with the power requirements specified in section 4.3.1.1, in which case, the ELD must record a power data diagnostics event for the corresponding driver(s), or under the unidentified driver profile if no drivers were authenticated at the time of detection.

4.6.1.2	2 / Sync Diag	Engine Synchronization Diagnostic	An ELD required to establish a link to the engine ECM as described in section 4.2 must monitor its connectivity to the engine ECM and its ability to retrieve the vehicle parameters described under section 4.3.1 of this appendix and must record an engine-synchronization data diagnostics event when it no longer can acquire updated values for the ELD parameters required for records within 5 seconds of the need.
4.6.1.4 (d)	3 / Miss Diag	Missing Data Elements Diagnostic	If a new ELD event must be recorded at an instance when the ELD had failed to acquire a valid position measurement within the most recent elapsed 5 miles of driving, but the ELD has not yet set a positioning compliance malfunction, the ELD must record the character "X" in both the latitude and longitude fields, unless location is 88 entered manually by the driver, in which case it must log the character "M" instead. Under the circumstances listed in this paragraph, if the ELD event is due to a change in duty status for the driver, the ELD must prompt the driver to enter location manually in accordance with section 4.3.2.7 of this appendix. If the driver does not enter the location information and the vehicle is in motion, the ELD must record a missing

			required data element data diagnostic event for the driver.
4.6.1.7	4 / Trans Diag	Data Transfer Diagnostic	(b) If the monitoring mechanism fails to confirm proper in-service operation of the data transfer mechanism(s), an ELD must record a data transfer data diagnostic event and enter an unconfirmed data transfer mode.
4.6.1.6	5 / Unid Diag	Unidentified Driver Diagnostic	<p>(b) If more than 30 minutes of driving in a 24-hour period show unidentified driver on the ELD, the ELD must detect and record an unidentified driving records data diagnostic event and the data diagnostic indicator must be turned on for all drivers logged in to that ELD for the current 24-hour period and the following 7 days.</p> <p>(c) An unidentified driving records data diagnostic event can be cleared by the ELD when driving time logged under the unidentified driver profile for the current 24-hour period and the previous 7 consecutive days drops to 15 minutes or less.</p>
4.6.1.8	6 / Other Diag	Other Diagnostic	In addition to the required monitoring schemes described in sections 4.6.1.1– 4.6.1.7 of this appendix, the ELD provider may implement additional, technology-specific malfunction and data diagnostic detection schemes and may use the ELD's malfunction status indicator and data diagnostic status indicator

			(described in sections 4.6.2.1 and 4.6.3.1) to communicate the ELD's malfunction or non-compliant state to the operator(s) of the ELD.
--	--	--	--

Actions for Malfunction & Data Diagnostic Events

Carrier responsibilities regarding malfunctions:

- Provide drivers with an instruction sheet describing the various ELD malfunction events and recordkeeping procedures (395.22)
- Provide drivers with a supply of 8 days' worth of blank paper driver records (395.22)
- Repair, replacement, or service
 - Motor carrier must correct the malfunction of the ELD within 8 days of discovery of the condition or a driver's notification to the motor carrier, whichever occurs first (395.34)

Record keeping responsibilities by the driver:

- Malfunction events
 - Note the ELD malfunction and provide carrier with written notice within 24hrs (395.34)
 - Reconstruct driving events for the current 24hr period and previous 7 consecutive days using paper logs (unless they can be retrieved from the ELD) (395.34)
 - Continue to manually prepare driving logs until ELD is serviced and brought back into compliance (395.34)
 - During inspections which take place when a malfunction has occurred: provide safety official with manually kept driver logs (395.34)
- Data diagnostic events
 - Driver must follow the motor carrier's and ELD provider's recommendations in resolving the data inconsistency (395.34)

Clearing of malfunction and data diagnostic events:

 
- ELD needs to capture when a malfunction or data diagnostic event has been cleared by the driver (4.5.1.7)
- Unidentified driving records data diagnostic
 - Events that drop to 15 minutes or less during the current 24hr period and previous 7 days can be cleared automatically and there is no requirement to record the automatic clear (4.6.1.6)

5.4 DVIR

The **DVIR** feature provides a way for you to create online vehicle DVIR reports while in the field. This helps to ensure that your vehicle confirms to the FMCSA's safety regulations.

There are a number of ways to access this feature:

5.4.1 DVIR Feature – Main Navigation Menu

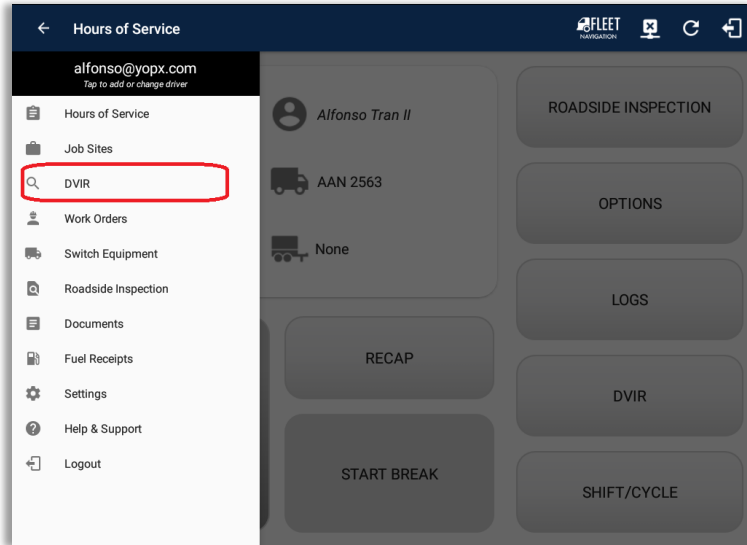

1. Slide the screen from left to right to show the **Main Navigation Menu**

 
Or

2. Tap the **Main Navigation Hamburger icon** 

to show the **Main Navigation Menu**

Tap the **DVIR** option within the **Main Navigation Menu**

5.4.2 DVIR Feature – Hours of Service Main Screen

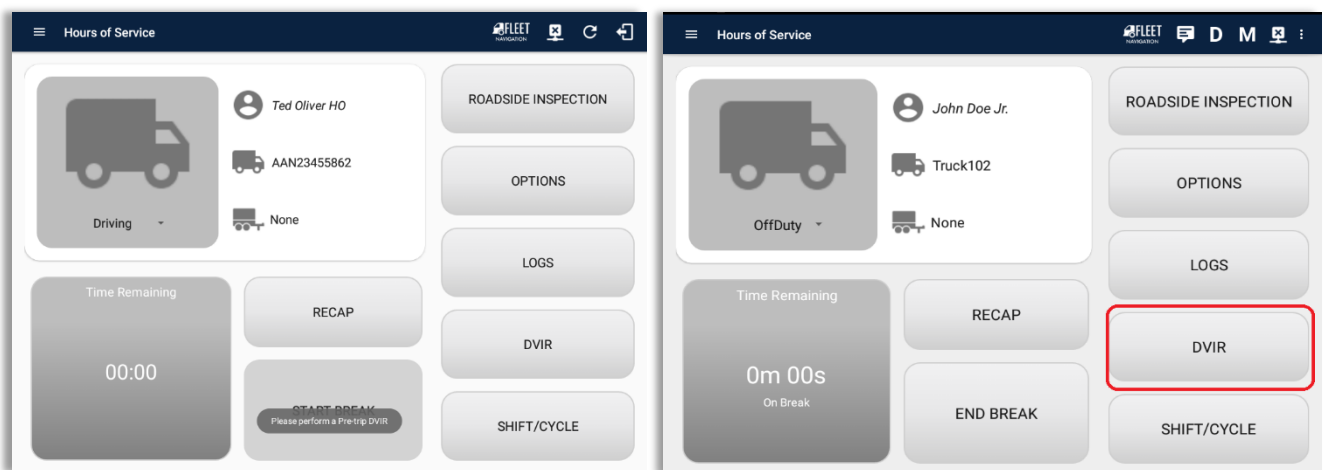

From the **Hours of Service Main Screen**, tap the **DVIR** button to display the **DVIR** screen



- When driver manually/automatically change to Driving event without completing the Pre-trip DVIR, it will create a 'Remark' event with a note 'Pre-trip DVIR not performed.'
- The Remark event will only be created once per shift.
- The Remark event will be created after it detects or when a first Driving event on the shift cycle is created.
- Also, an **alert** is sent only once for each vehicle that begins to drive without having done a Pre-Trip DVIR.

5.4.3 Selecting Your DVIR Type

The screenshot shows the 'Select DVIR' interface. Under the 'DVIR Details' section, the 'Type' dropdown is open, showing three options: 'Pre-trip', 'Post-trip', and 'Ad hoc'. The 'Pre-trip' option is currently selected. Below this, there are sections for 'Vehicle' (AAN 2564) and 'Trailer' (AUB2137), each with a 'Form' dropdown and an 'INSPECT' button. A warning at the bottom states: 'Warning: Location Service is currently disabled'.

Choose the appropriate **DVIR Type** from the following options.

Choose the appropriate **Inspector** from the following options.


This screenshot shows the 'Select DVIR' screen with the 'Vehicle/Trailer' section highlighted. For the 'Vehicle' (AAN 2564), the 'Form' dropdown is open, showing 'Select form' and 'INSPECT'. For the 'Trailer' (AUB2137), the 'Form' dropdown is also open, showing 'Trailer Trailer' and 'INSPECT'. The same warning about location service is at the bottom.

You can select a DVIR Form from the 6 default DVIR forms or you can also select a Customized DVIR Forms for Asset(s) also from the list.


This screenshot is identical to the first one, showing the 'Select DVIR' screen with the 'Pre-trip' dropdown menu open and 'Pre-trip' selected. The 'Vehicle/Trailer' section and the warning at the bottom are also visible.

- a) **Pre:** A DVIR conducted before driving the CMV
- b) **Post:** A DVIR conducted after driving a CMV
- c) **Ad Hoc:** Any DVIR conducted in any other period that the ones specified in points a & b


5.4.4 Starting Your DVIR

Tap the **Inspect**  button in each equipment to start the DVIR, you will be directed to the **DVIR screen**.

 Note: However, a dialog as shown below will display that will ask confirmation to switch you to On Duty status to do DVIR if current duty status is in Off Duty or will take you out to Personal Use if current status is Off Duty under Personal Use.

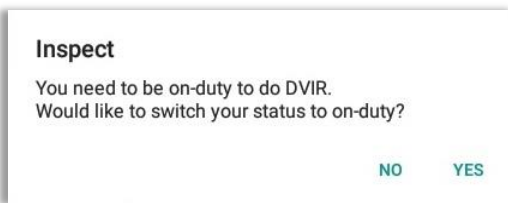


If current duty status is Off Duty

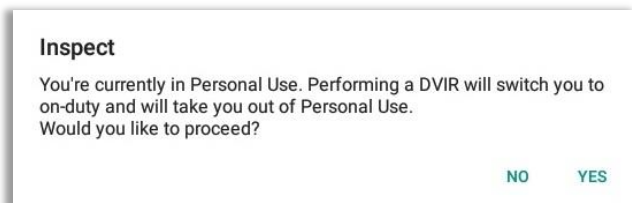 


If current duty status is Off Duty under Personal Use

 
5.4.5 Completing the First DVIR Area

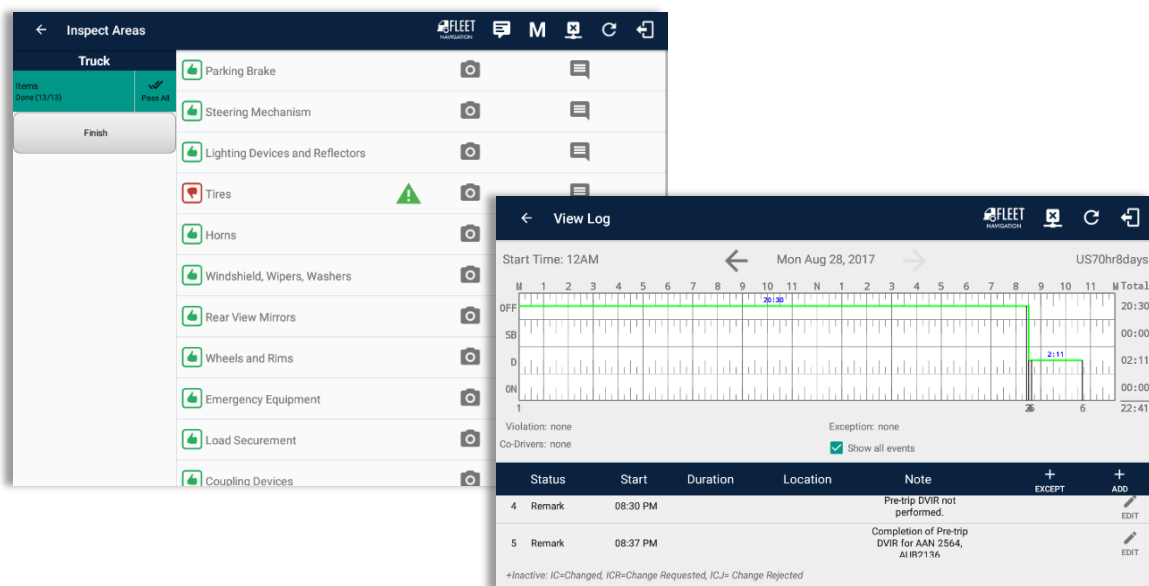





The first **DVIR Area** is selected by default; you can also tap its corresponding tab to display the DVIR items under this area.

You can select the status of each DVIR Item by tapping their respective tri-state check boxes as listed below.

Tap the unselected check box once or select the green  Thumbs Up icon to specify that the item has passed.

Tap the unselected check box twice or select the red  Thumbs Down icon to specify that the item has failed.

Tap the unselected check box three times or select the NA  icon if the item is not applicable for the current DVIR.

When failing a DVIR, an option for selecting a severity level will appear with its corresponding color: High – Red , Medium – Yellow , Low – Green .

Tap the **Check All** button to automatically select all the DVIR items.

 
5.4.6 Capturing an Image of a DVIR Item

If you wish to capture an image of a DVIR item, you can tap the **Camera Button**. 


The Camera app will then appear, proceed to take a picture of the DVIR item.

After tapping the **Capture Image Button**, select the Save button to save the image and add it to your item report. You can also discard the captured image by selecting the **Cancel** button.

5.4.7 Add a Comment or Remark to a DVIR Item

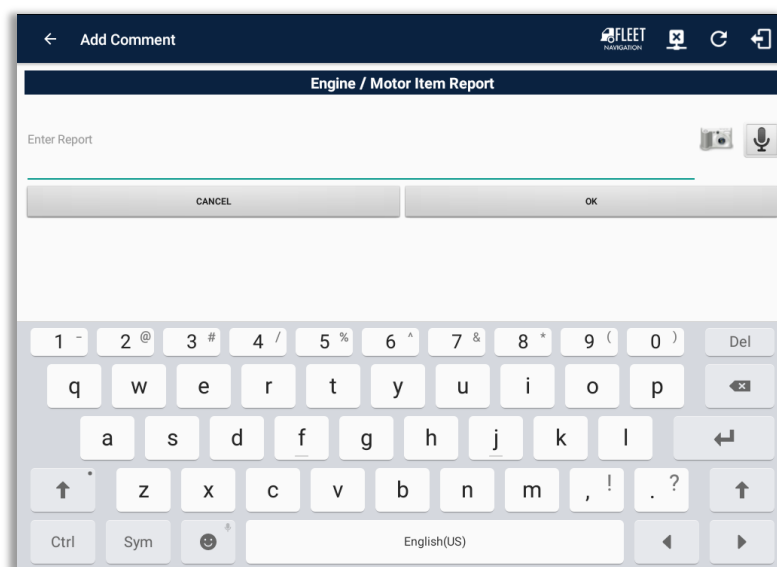

 You may add comments or remarks against a DVIR item by tapping the **Comments** button, enter the relevant comment or remark in the **Enter Report** field, tap the **Camera** button to add more images if required and select the **OK** button to finish adding your images and comments or remarks.

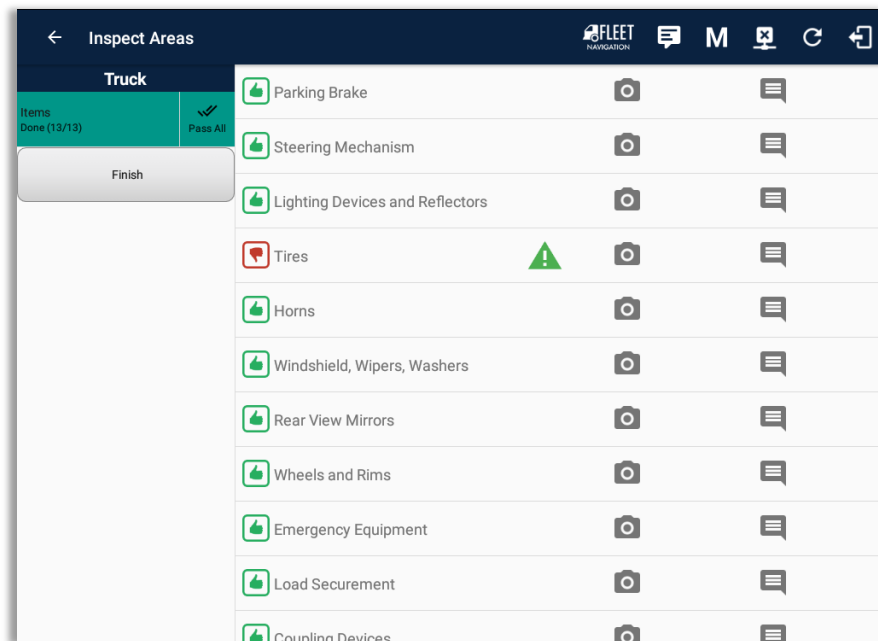

If you add an image and a comment or remark to the DVIR item, the **camera** button will have a numbered icon over it depicting the number of images that have been attached; also, any comments or remarks that have been added will be displayed and will replace the **Comments** button.

Note: You can also tap the Voice Dictation button (speech to text) to use voice dictation instead of typing your comments or remarks.

5.4.8 Finishing / Certifying Your DVIR

To finish / certify your DVIR, select the **Finish** tab, this will display the information detailed on the next page.

Summary

- **Start Time** – the date and time the DVIR was started
- **Elapsed Time** – the duration of the current DVIR
- **Items Inspected** – this is a counter for the number of items already inspected

Items Remaining

This will only be displayed if you have not yet updated all of the DVIR items, this will show the item(s) that are still to be inspected.

Final Items


Inspection Result	
General Comments	
Defects Corrected	<input type="checkbox"/>
Condition Satisfactory	<input type="checkbox"/>
Condition Unsatisfactory	<input type="checkbox"/>

General Comments – this is where you can enter your general DVIR report comments.

One of the following options must be selected before the DVIR can be finished / certified.

- Defects Corrected
- Condition Satisfactory
- Condition Unsatisfactory

 Signature

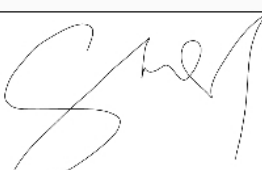Signature	
	
CHANGE SIGNATURE	FINISH INSPECTION

Drivers can change their signature by tapping the **Change Signature** button.

 
Mechanics and other inspectors can create their signatures by tapping the **Change Signature** button.

Selecting the **Change Signature** button will open the **Create Your Signature Here** screen:




Tap the **Done** button to save your signature or tap the **Clear** button to discard the signature.

5.4.9 Submit or Certify the DVIR

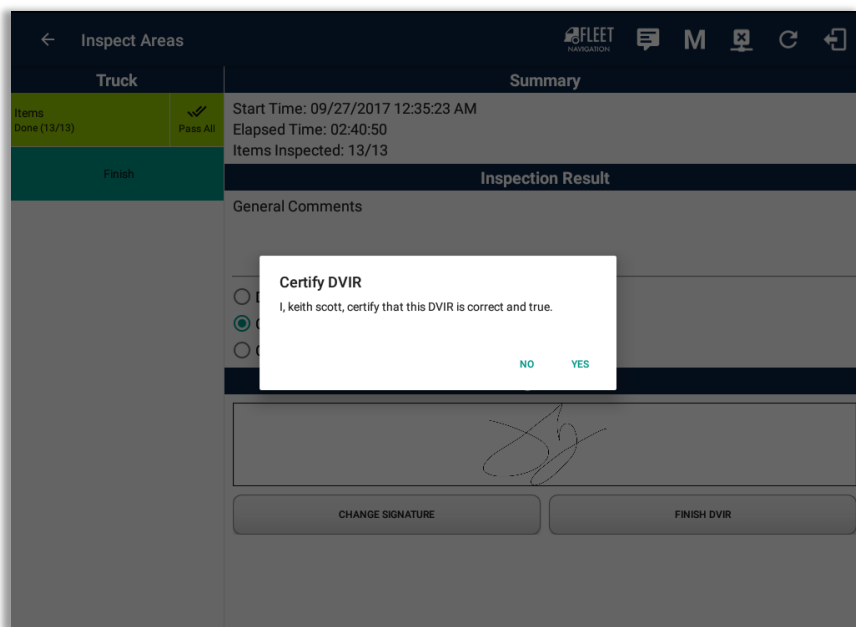

Tap the Finish DVIR button to finish / certify the current vehicle DVIR. Finally, after reviewing all of the DVIR details tap the **OK** button to certify the DVIR. You can also cancel certifying the DVIR by tapping the **Cancel** button.

 After successfully certifying the DVIR, a remark event will be created in the Edit Logs screen stating the completion of Pre/Post/Ad-Hoc DVIRs.

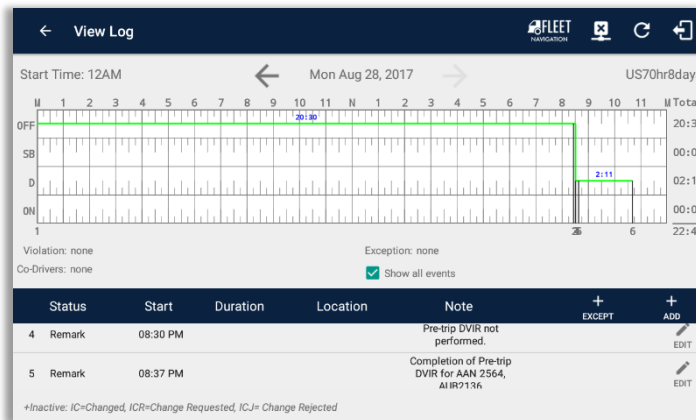

Note: A remark "Autogenerated: Pre-trip DVIR not performed." Displayed in edit log screen when DVIR was not performed.


5.4.10 Deleting a Vehicle DVIR

Go to the **Current DVIR** section. This is where you can view a list of the DVIRs conducted within the Vehicle DVIR screen:


Current DVIR			
Pre-trip	04:17:15 AM	In progress	⋮

- Tap the Email button to send the completed DVIR to an intended recipient.
- Tap the View button to view the DVIR details (once submitted, this cannot be amended).
- Tap the Remove button to remove the DVIR (once submitted, this cannot be removed).

 5.4.11 Emailing a DVIR

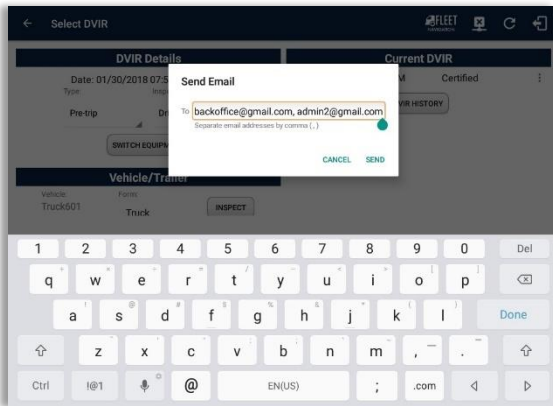

*Emailing a DVIR via **Server***

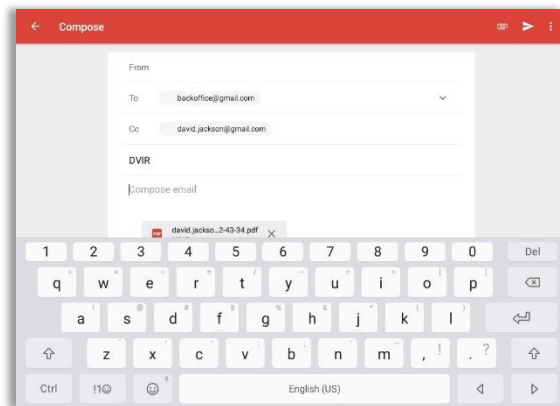 


*Emailing a DVIR via **App***

- If Email Sender is set to Server, a Send Email dialog will display when the driver taps Email button to send the completed DVIR. Enter the email address for the recipient. If the recipient is more than one, separate email addresses by comma.
- If Email Sender is set to App, an app will open (e.g. Gmail app will open for Android device) with a new message that has a DVIR Report PDF file attached.

Note: Email Sender option can be seen and set in settings screen>HOS Preferences>Others.

 5.5 DVIR History

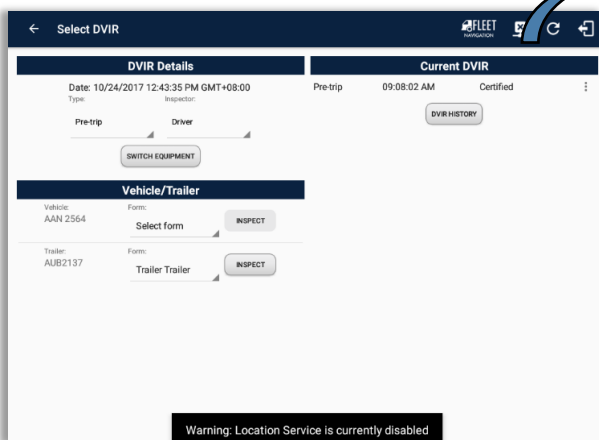


Equipment	Inspection Type	Inspector	Date Inspected
37S142	Pre-trip	keith scott	27/09/2017
Item Name			
Service Brakes (including Trailer Connections)			
37S142	Pre-trip	douglas richards II	25/09/2017
Item Name			
Hazard Placarding / Shipping Papers			
AA2569	Pre-trip	Arturo Moore II	18/09/2017

The **DVIR History** feature displays the DVIRs for the last 30 days for the currently selected equipment. Completed DVIRs that don't have failed items shows in a row highlighted in

green color while Completed DVIRs with failed items are highlighted in red. Also, a '+' can be tap to show the details of failed items.

 5.5.1 Viewing DVIR History by Vehicle

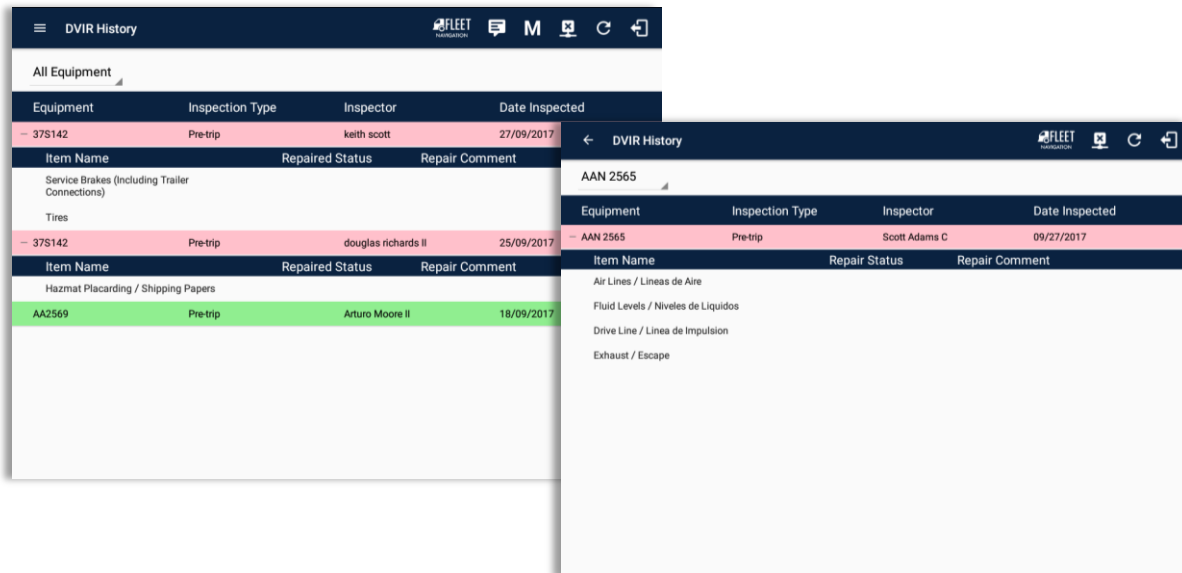


- DVIR History Screen displays DVIR inspections for all equipment by default.
- Tap the Equipment name on the upper left of the screen to view the DVIR of the specified vehicle.

6 Roadside Inspection


The Roadside Inspection feature provides the ability to view the driver daily logs for the past one week. It includes information on the vehicle used, shipments and driving statuses. It also has the ability to send all the logs that have already been certified to an intended recipient.

There are a number of ways to access this feature:

 6.1 Roadside Inspection – Main Navigation Menu

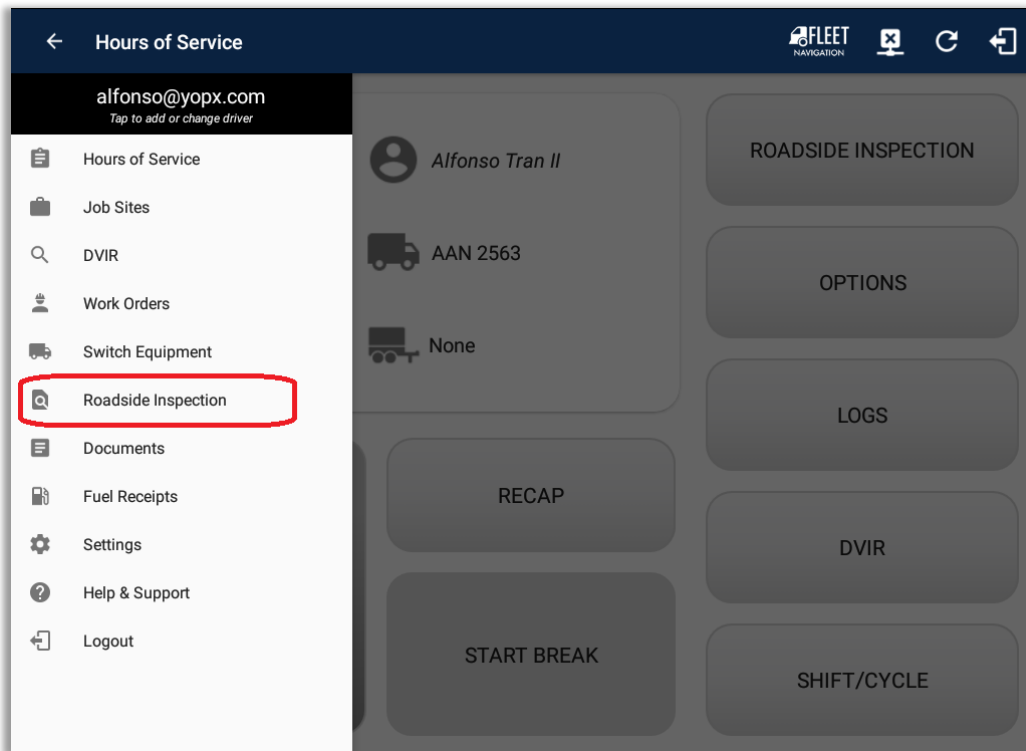


1. Slide the screen from left to right to show the **Main Navigation Menu**
Or

2. Tap the **Main Navigation Hamburger** icon  to show the Main Navigation Menu


Tap the **Roadside Inspection** option within the **Main Navigation Menu**

 6.2 Roadside Inspection – Magellan HOS Main Menu

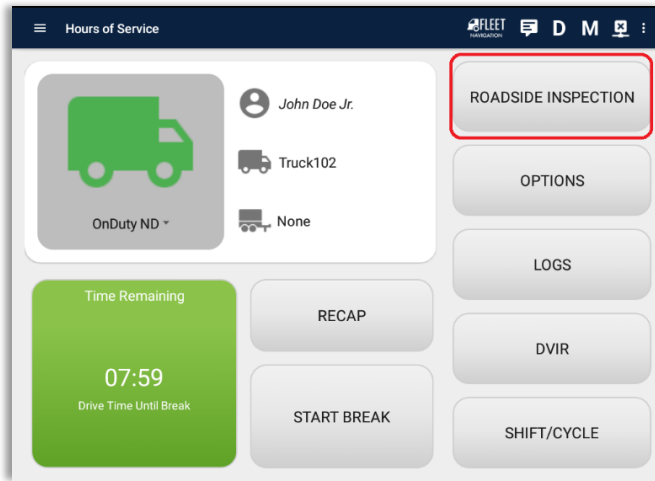


From the **Hours of Service Main Screen** then tap the **Roadside Inspection** button.

 
6.3 Inspection Screen – Start Review

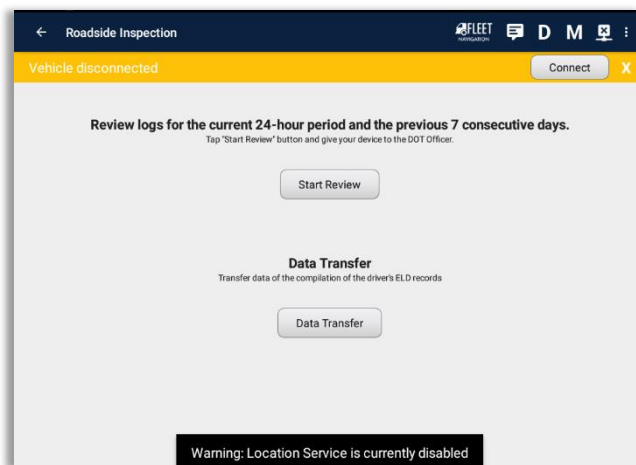

 From the **Roadside Inspection Screen**, tap the **Start Review** button to view the **Driver's Daily Log screen**.

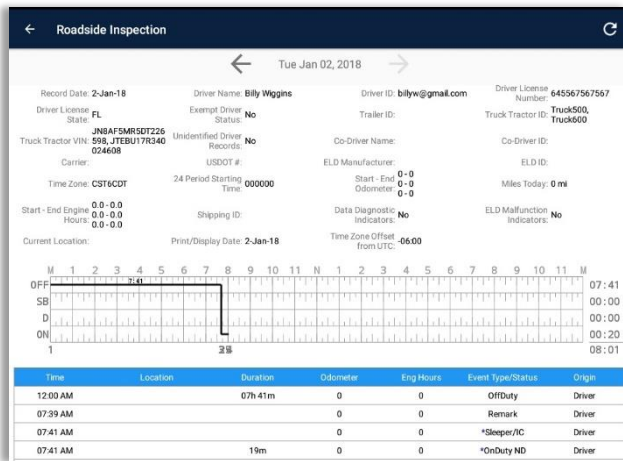

 
Roadside Inspection screen for vehicle in ELD mode

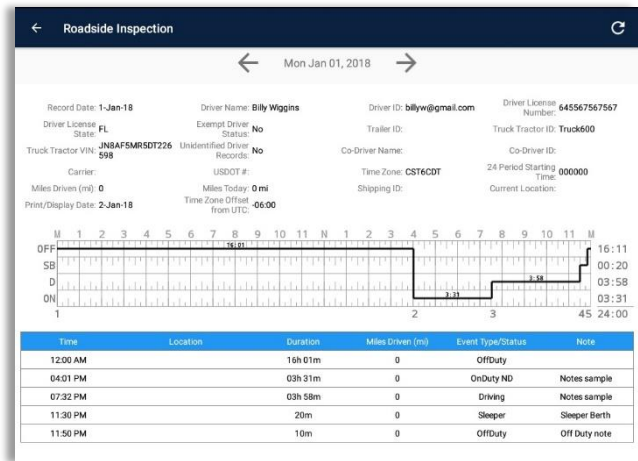

Roadside Inspection screen for vehicle in AOBDR mode


Note:

 - Automatic 'Remarks' will not be displayed in the screen such as 'Pre-Trip not performed', 'Authenticate' and border crossing remarks if current vehicle is in AOBDR mode.
- Notes entered in an added event will be displayed in the Roadside Inspection screen under the "Note" column when in AOBDR mode.
- Driver that is being inspected must provide a password when exiting from the Roadside Inspection Screen.

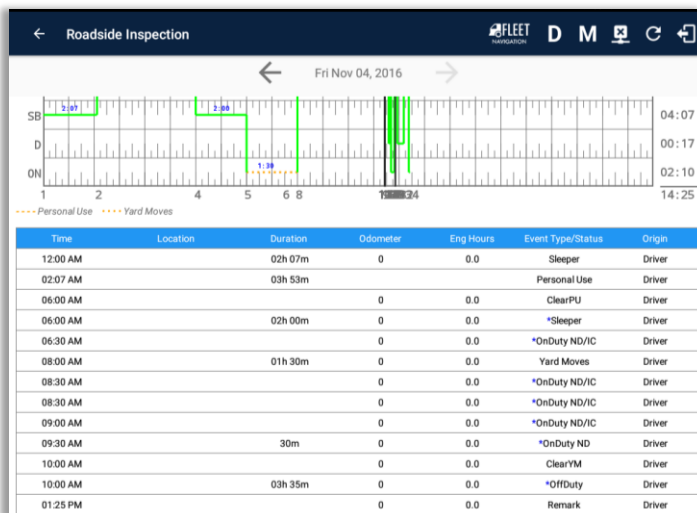


Tap the Previous button to navigate to the previous log or tap the Next button to navigate to the next log.

 6.4 Roadside Inspection Screen – Data Transfer

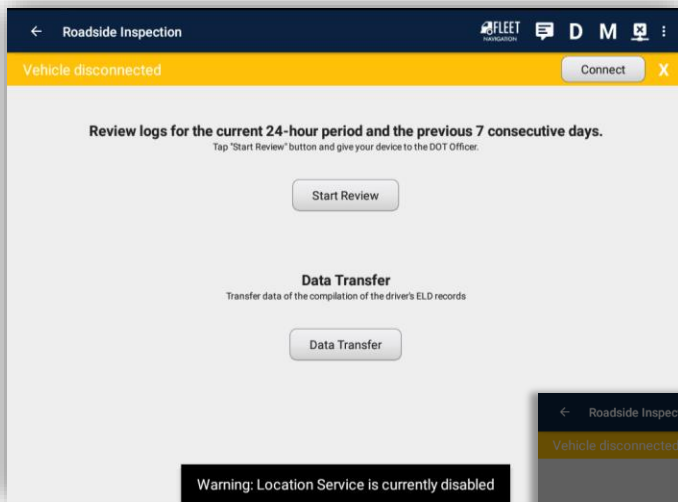

From the **Roadside Inspection Screen**, tap the **Data Transfer** button

 Select an option to transfer the compilation of the driver's ELD records.

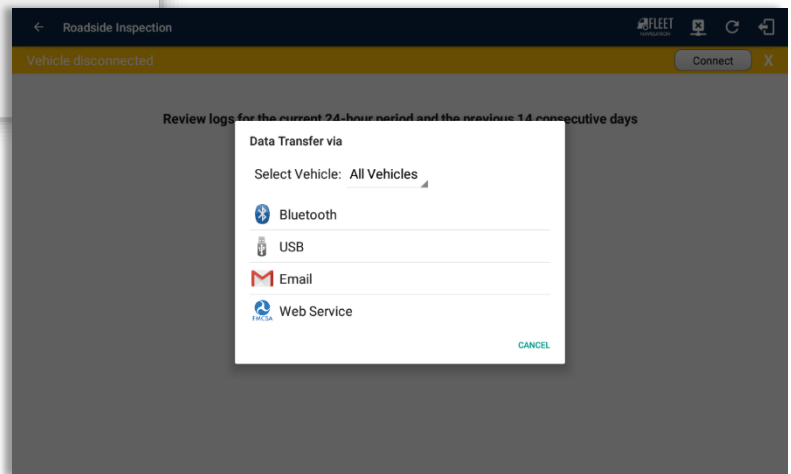


7 Switch Equipment


The Switch Equipment feature allows a driver to easily ‘switch’ from one vehicle to another. It also assists in monitoring and documenting the vehicles being used as part of their driver logs.

There are a number of ways to access this feature:

 7.1 Switch Equipment – Main Navigation Menu

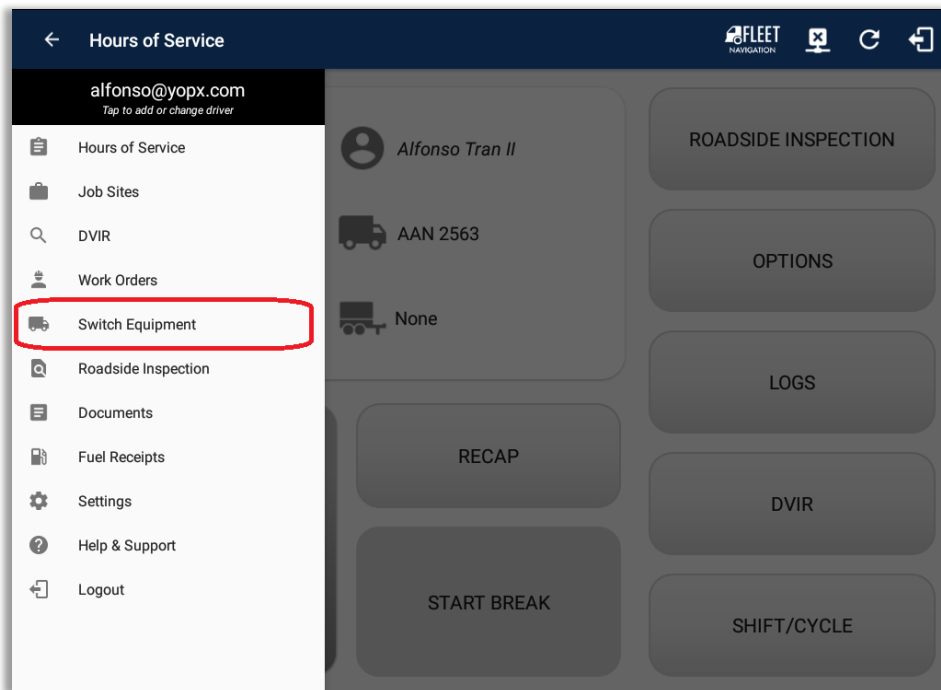


1. Slide the screen from left to right to show the **Main Navigation Menu**
Or

2. Tap the **Main Navigation Hamburger** icon  to show the Main Navigation Menu

Tap the **Switch Equipment** option within the **Main Navigation Menu**


Note: User must provide a password when exiting from the Roadside Inspection screen.

 
7.2 Options Menu

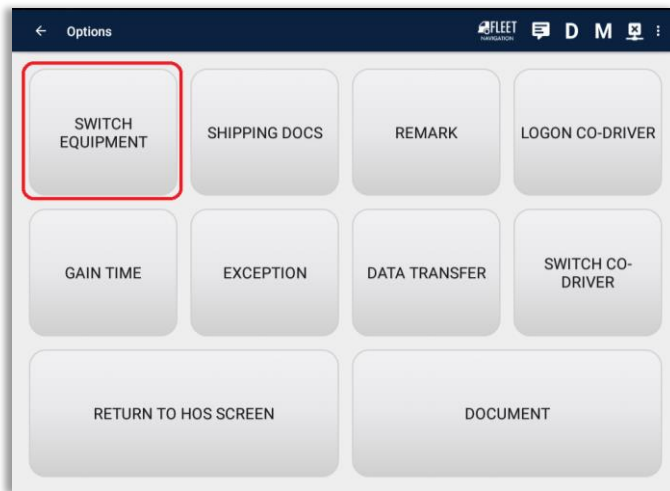


From the **Hours of Service Main Screen**, tap the **Options** button and then tap the **Vehicle/Trailer** button.

 7.3 Switch Equipment – DVIR Screen

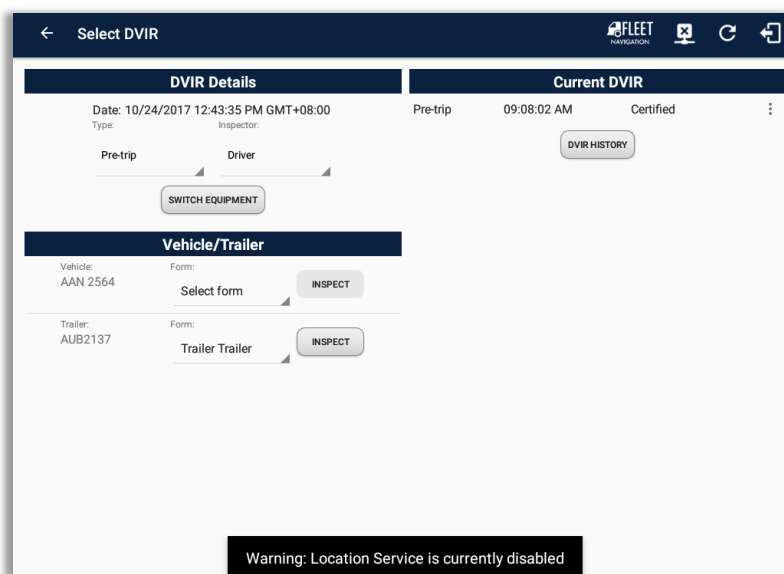


1. Slide the screen from left to right to show the **Main Navigation Menu**.
Or
2. Tap the **Main Navigation Hamburger** icon  to show the Main Navigation Menu
Tap the **DVIR** option within the **Main Navigation Menu**.
3. Select the **DVIR** button from the Main Hours of Service Menu and then select the **Switch** button.

 7.4 Switching Equipment

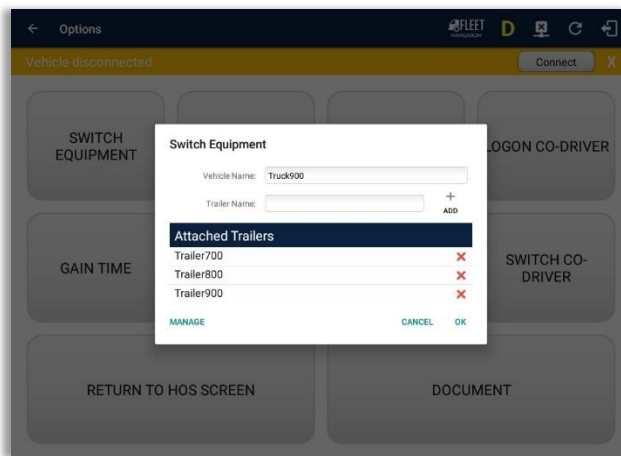


 Select the **Vehicle ID** or **Trailer ID** dropdown list and select the required vehicle or trailer, then tap the **OK** button to switch to the selected vehicle or trailer.

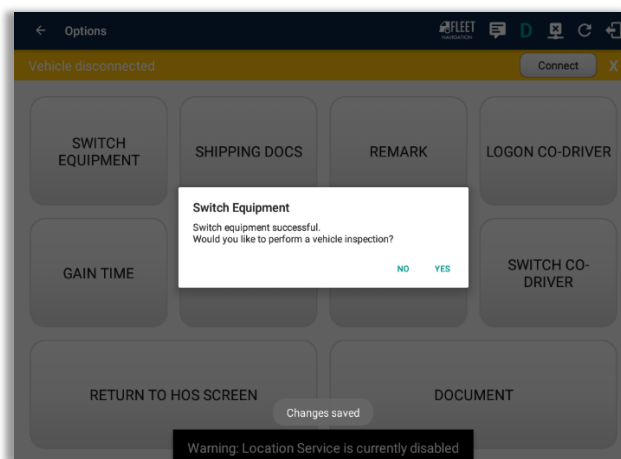

After tapping the Switch button, you will be asked if you would like to perform a vehicle DVIR, tap the **YES** button to navigate to the **Vehicle DVIR** screen or tap the **NO** button to close the dialog box and continue.

 Switch equipment can be performed also in the dashboard, by tapping the vehicle/trailer icon.

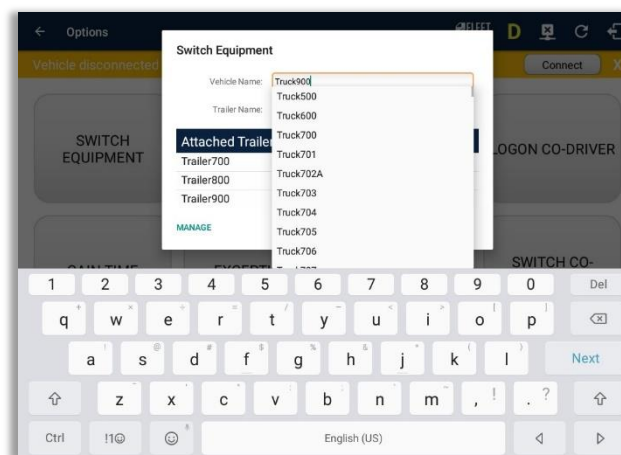


Vehicles and Trailers can also be filtered through **text entry** on the vehicle/trailer text fields. Text entry availability starts if the total number of trailers/vehicles numbers 250 or more.

Switching or selecting a Vehicle with a preconfigured VBUS device enables the app to find and connect on the match device.

Note: On the VBUS Settings, VBUS Data and Automatic Configuration should be enabled.

 7.5 Managing Vehicles / Trailers

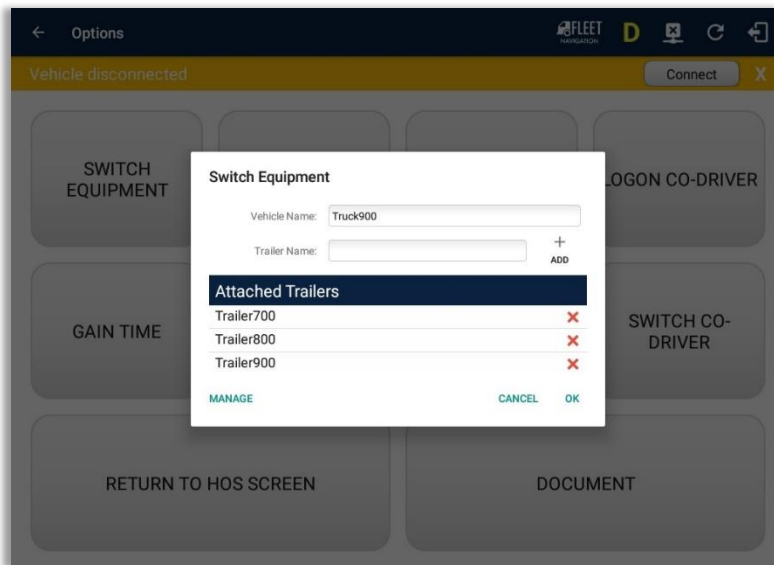


You can add, update and delete vehicles or trailers by tapping the **Manage** button; this will display the **Manage Vehicles/Trailers Screen**

The 'Manage' button is only available given a situation, that the driver is an asset admin and that the 'Manage Equipment' option (found in the Equipment Management Page) is also enabled. Otherwise, the button will not be available on the Switch Equipment dialog.


7.5.1 Manage Vehicles / Trailers – Delete

Name	License Plate	VIN	Type	Actions
Trailer996			Trailer	[Edit] [Delete]
Trailer997			Trailer	[Edit] [Delete]
Trailer998			Trailer	[Edit] [Delete]
Trailer999			Trailer	[Edit] [Delete]
Truck500		19XFB2F80DE036331	Vehicle	[Edit] [Delete]
Truck600		WVGCR77LX90018177	Vehicle	[Edit] [Delete]
Truck700		1FTBKGD7CEB54447	Vehicle	[Edit] [Delete]
Truck701		1FTBKGD7CEB54447	Vehicle	[Edit] [Delete]
Truck702A		3D4G067V79T243032	Vehicle	[Edit] [Delete]

Name	License Plate	VIN	Type	Actions
Trail1			Trailer	[Edit]
Trail2			Trailer	[Edit]
Trail3			Trailer	[Edit]
Trail4		JTCRBYC0755C057	Trailer	[Edit]
Truck1		J43AU16U29U024930	Vehicle	[Edit]
Truck2		1G6KDSEY9A113517	Vehicle	[Edit]
Truck3		1FMSK708106B69297	Vehicle	[Edit]


To delete any of the vehicles or trailers listed, tap the  icon. Vehicles/Trailers made in the portal can be edited or deleted can be in the Magellan HOS Compliance app and vice versa.

 
Note: If "Allow drivers to delete equipment" is unchecked in the portal then delete button will not be displayed in the screen.

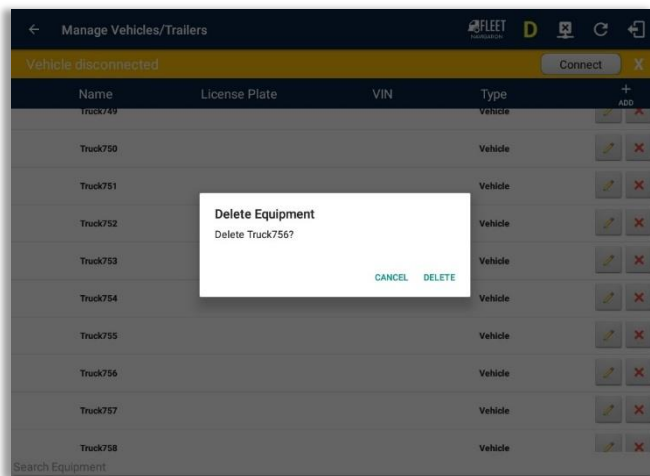

Tap the **DELETE** button within the **Delete Vehicle** dialog to confirm deletion or, tap the **CANCEL** button to return without deleting.

  7.5.2 Manage Vehicles / Trailers - Edit

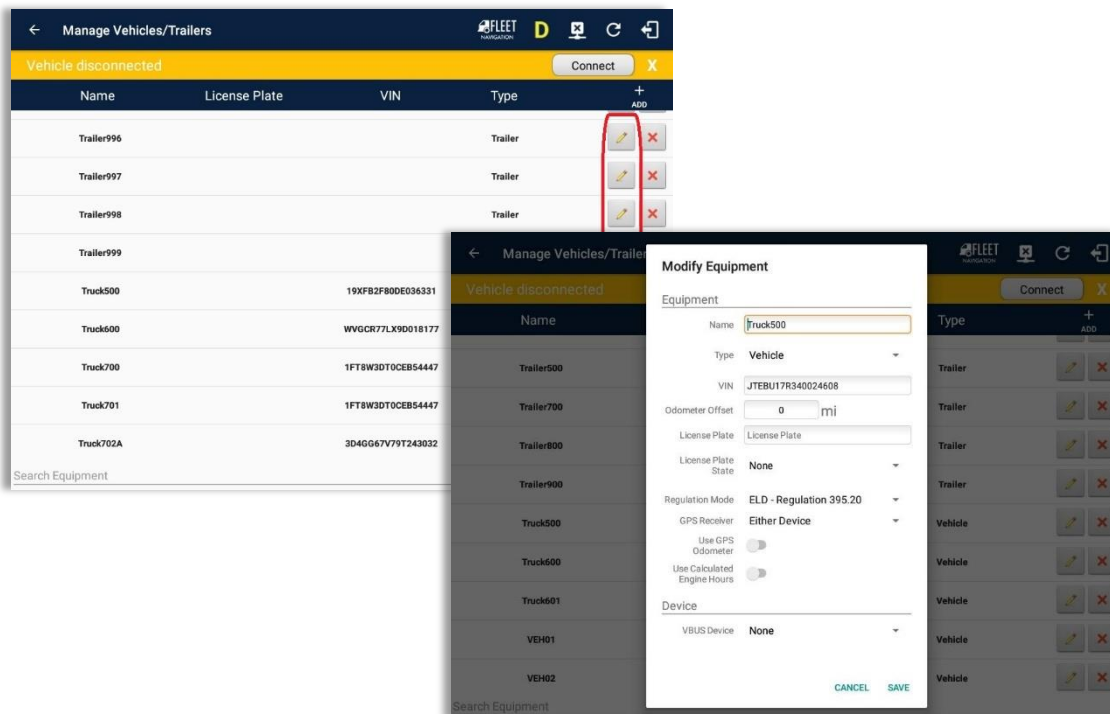

To edit any of the trucks or trailers listed, tap  the icon, make any required changes to the selected truck or trailer and then tap the **SAVE** button to save the changes or, tap the **CANCEL** button to return without saving.

7.5.3 Manage Vehicles / Trailers – Add

Name	License Plate	VIN	Type
Trailer996			Trailer
Trailer997			Trailer
Trailer998			Trailer
Trailer999			Trailer
Truck500		19XF82F80DE036331	Vehicle
Truck600		WVGCR77LX9D018177	Vehicle
Truck700		1FT8W3D0CEB54447	Vehicle
Truck701		1FT8W3D0CEB54447	Vehicle
Truck702A		3D4G667V79T243032	Vehicle

To add a new truck or trailer, tap the **+ ADD** button, this will open the Add Truck dialog, enter the following details:

Vehicle Name – Truck or trailer name

VIN – Vehicle Identification Number

License Plate – license number

Vehicle Type – Vehicle or Trailer

Fill in the **Device Information** section to pre-configure the Vehicle to a specific VBUS device.

When creating a new equipment, the default selected device option is set to "None". Also, If the option "None" is selected, on the create/edit equipment screen, all other fields on the ELD configuration section will be hidden.

Tap the **ADD** button to save the new truck or trailer or Tap the **CANCEL** button to cancel adding the new truck or trailer.

Note:

- The connection type defers on the VBUS Device selected.
- If user selects "Digi WVA" in connection type, then admin password field is required.

- Firmware version field can be manually populated. For some VBUS device, it is already pre-populated.
- In the Portal, an ability to determine on which VBUS devices will be displayed is present. Accordingly, on the app, only those devices selected on the portal will be displayed in the “VBUS Device” menu.

A **Regulation Mode** option to switch between 395.15 (AOBRD) and 395.20 (ELD) support is available. When 395.15 (AOBRD) mode is selected it turns off all 395.20 (ELD) features. It simply records the drivers' events regardless to the FMCSA rules.

Notes:

- Drivers on the app cannot change the Regulation Mode unless the driver is allowed to do so by enabling the following account control within the Account Settings->Carrier Information tab-> 'Allow drivers to specify vehicle HOS Regulation Mode (AOBRD or ELD).
- When in AOB RD mode, disables the data transfer button in the Options screen and changed the button to 'Email Logs' in the Roadside Inspection screen.
- When the driver is in AOB RD mode then the edit "*" sign & events will not be displayed in the Edit Logs screen and on the Certified PDF logs.

A **GPS Receiver** option allows the user to change how to get the device GPS positions. The GPS Receiver settings can be set in a specific vehicle in the portal->equipment management page.

An **Odometer Offset** allows driver or personnel to adjust the odometer so that the driver will see an odometer matches their dashboard, rather the engine odometer. Possible scenario is when the engine is replaced and the value is not yet synchronized.

Notes:

- Negative entry for odometer offset field is allowed.
- Odometer offset does not affect app screens like Roadside Inspection and Certified Logs PDF.
- If the saved offset is 100, and the logs have odometer values of 10, 20, 30, 40, will display to the driver 110, 120, 130, 140 (Odometer + Offset).
- If the offset is 100, and the driver edits an event to change the odometer from 140 to 130, will display 130 - 100 (the Offset) or 30 to the log.

When creating/modifying an equipment with a selected type of "Trailer", the VIN field is also enabled but is not required when saving. VIN field does not require valid format.

If the VIN is optionally populated and that the source is not the engine ECM, it will auto be converted to capital letters when saved.

The screenshot shows the 'Manage Vehicles/Trailers' interface. A modal titled 'Create Equipment' is open, allowing the user to add new equipment. The modal contains the following fields:

- Name:** A text input field with the placeholder 'Name'.
- Type:** A dropdown menu currently set to 'Trailer'.
- VIN:** A text input field with the placeholder 'VIN'.
- License Plate:** A text input field.
- License Plate State:** A dropdown menu currently set to 'None'.

At the bottom of the modal are 'CANCEL' and 'ADD' buttons. The background table lists existing vehicles and trailers with columns for Name, License Plate, VIN, Type, and a '+ ADD' button.

The screenshot shows the 'Manage Vehicles/Trailers' interface with a list of vehicles and trailers. The table has the following columns: Name, License Plate, VIN, Type, and a '+ ADD' button. The data is as follows:

Name	License Plate	VIN	Type	+ ADD
Trailer996			Trailer	[Edit] [Delete]
Trailer997			Trailer	[Edit] [Delete]
Trailer998			Trailer	[Edit] [Delete]
Trailer999			Trailer	[Edit] [Delete]
Truck500		19XFB2F80DE036331	Vehicle	[Edit] [Delete]
Truck600		WVGCR77LK9D018177	Vehicle	[Edit] [Delete]
Truck700		1FT8W3D0CEB54447	Vehicle	[Edit] [Delete]
Truck701		1FT8W3D0CEB54447	Vehicle	[Edit] [Delete]
Truck702A		3D4G067V79T243032	Vehicle	[Edit] [Delete]

 
Once the new vehicle or trailer has been added, it will be displayed in the ***Manage Vehicles/Trailers screen.***


8 Documents

The Documents feature provides an easy way to capture, view and email documents related to hours of service activities. This includes documentation such as bill of lading, fuel receipts, accident photos etc.


There are a number of ways to access this feature:

8.1 Documents – Main Navigation Menu



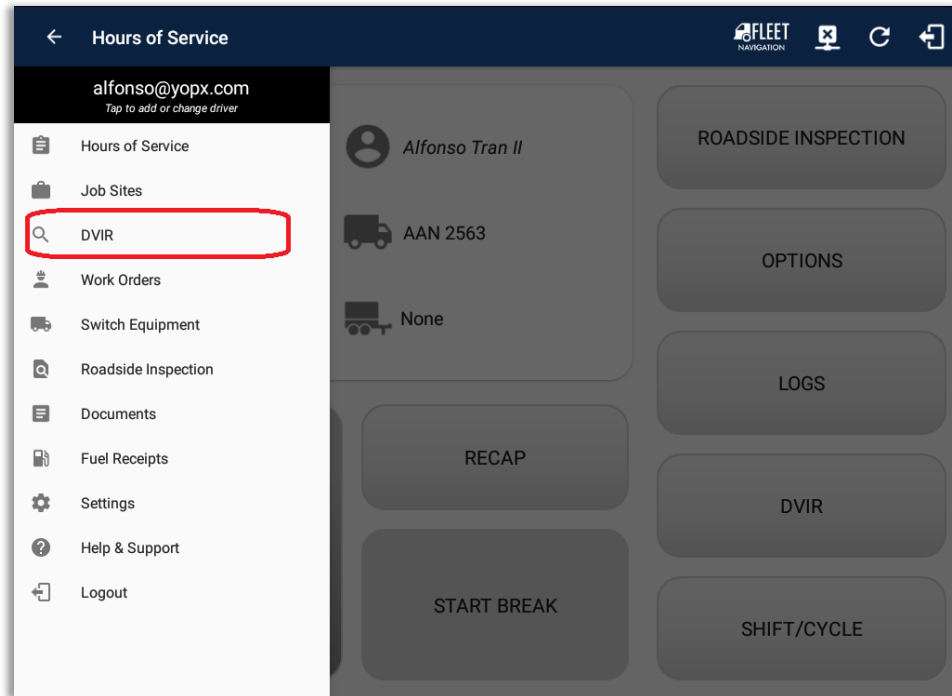


1. Slide the screen from left to right to show the **Main Navigation Menu**
Or
2. Tap the **Main Navigation Hamburger** icon  to show the Main Navigation Menu
3. Select the **Documents** button from the Main Hours of Service Menu

 
8.2 Documents – Options Menu

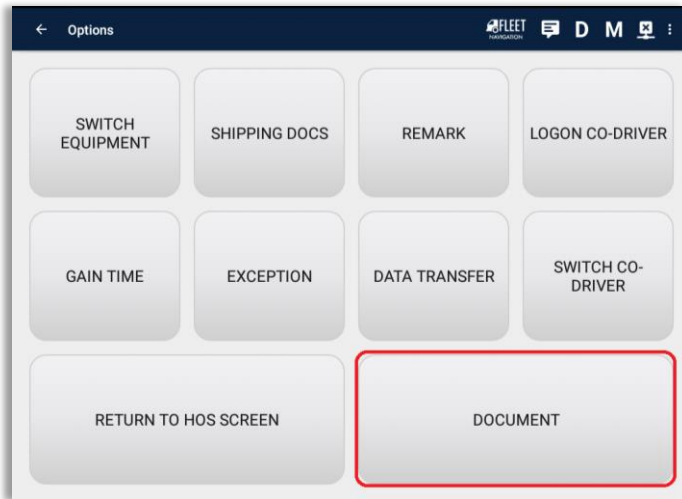

   From the **Hours of Service Main Screen**, tap the Options button and then tap the **Document** button.

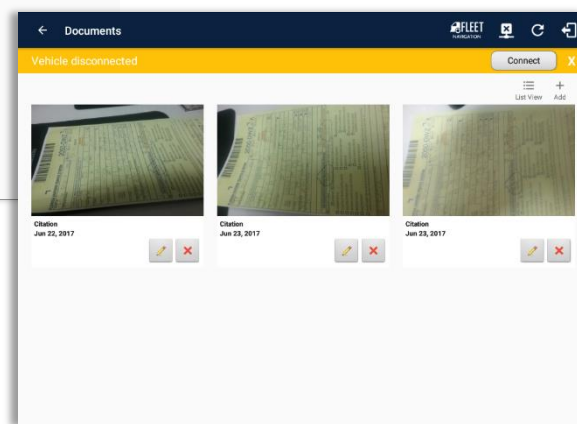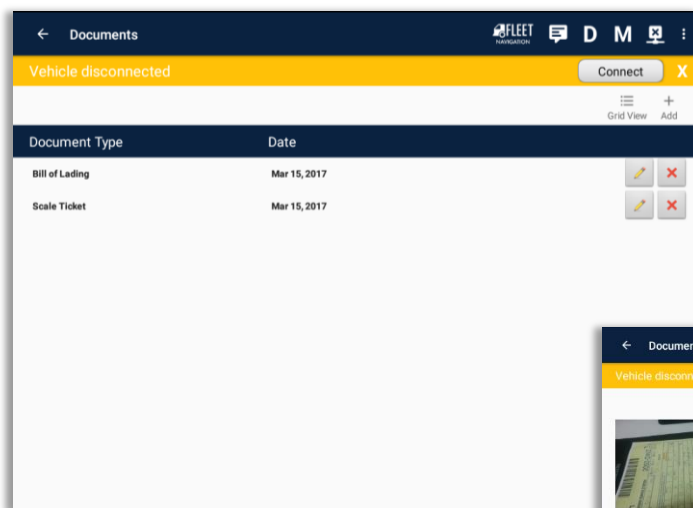


Grid View

 

List View


Note: The Documents screen has two views, the Grid View or 'List View'.

 8.3 Adding Documents

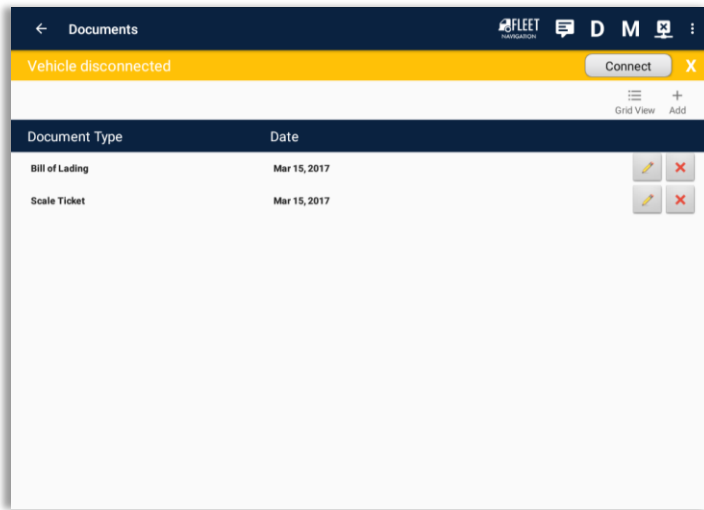

Tap the **Add** button, the camera app will open and you can then take a picture of the document or damage etc.

 
After tapping the Capture Image button, tap the Save button to save the image and add it to your document. You can also discard the image if you are not happy with the picture by tapping the Retry button.

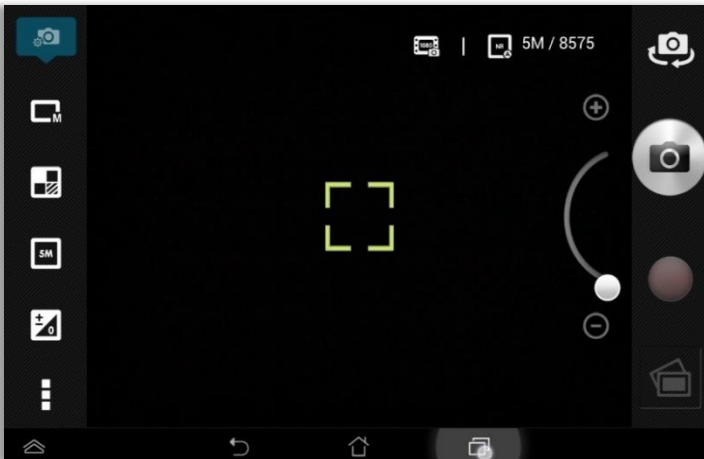



Select the type of document you wish to save by tapping the Document Type drop down list and selecting from the available options.

Enter your **Reference Number**
Add any **Notes** to support the image.

 Tap the **OK** button to save and continue or tap the **CANCEL** button to return without saving.

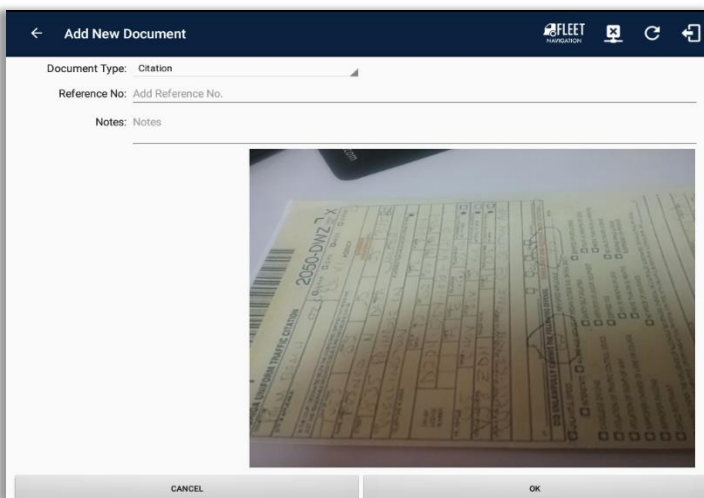

  8.4 Editing / Deleting a Document

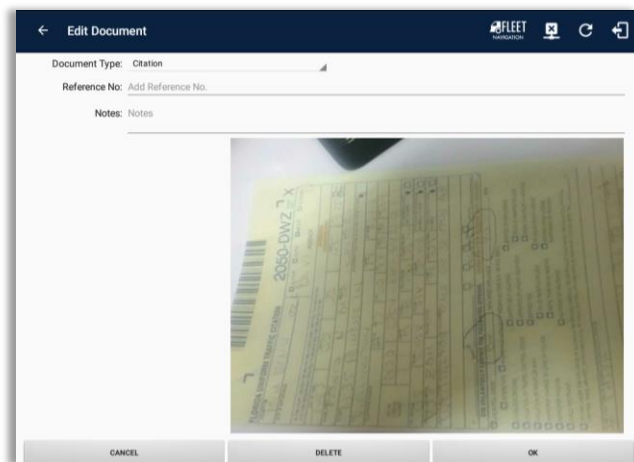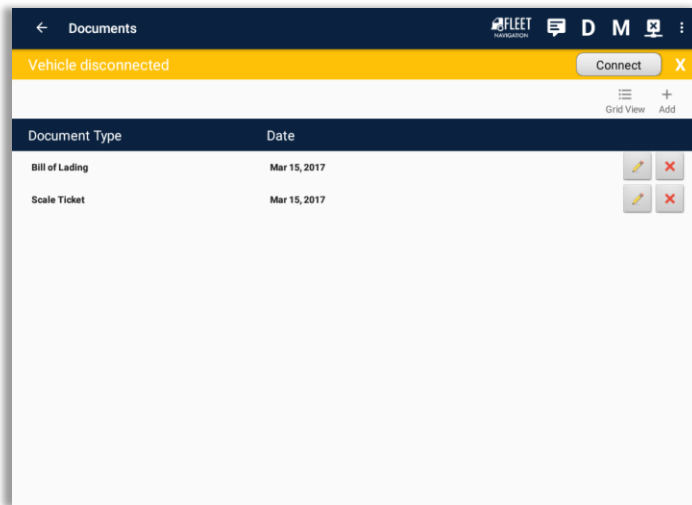

Tap the Edit  button adjacent to the relevant document, make any required changes.

Tap the OK button to save the changes.

 
Tap the CANCEL button to return without saving the changes.


Tap the DELETE button to delete the document completely.

9 Add Fuel Receipts


The Fuel Receipt's feature provides an easy way to capture and view fuel receipts purchased related to hours of service activities.



9.1 Main Navigation Menu

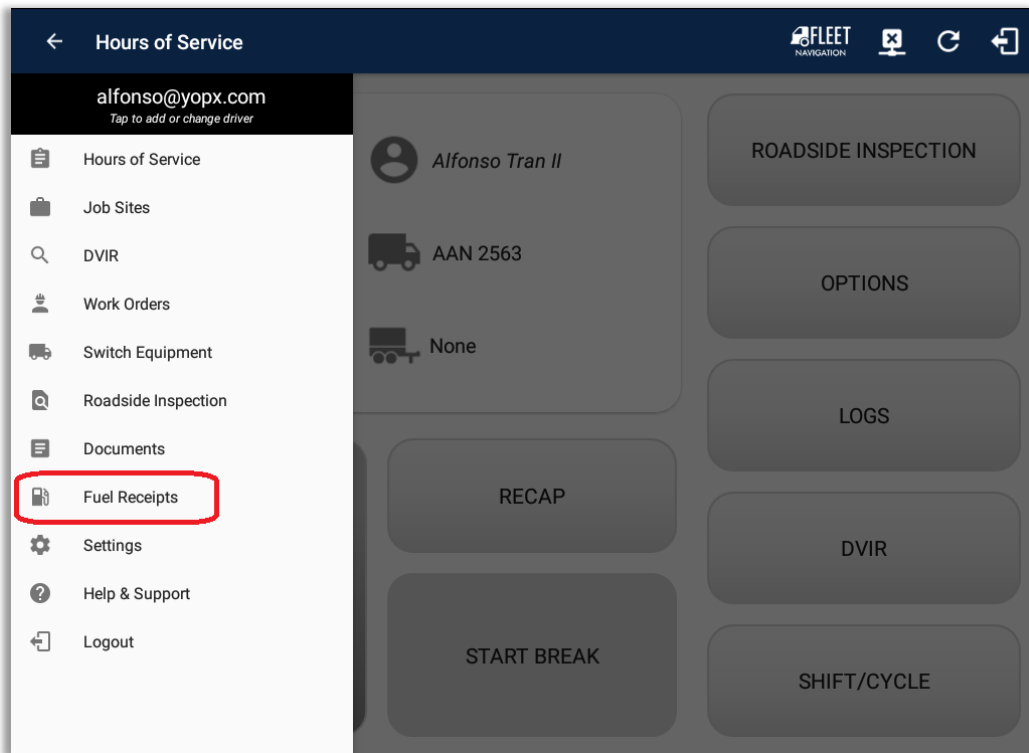


1. Slide the screen from left to right to show the **Main Navigation Menu**.
or
2. Tap the **Main Navigation Hamburger** icon  to show the Main Navigation Menu.
3. Tap on the Fuel Receipts button from the Main Hours of Service Menu.

  9.2 Fuel Receipts Screen

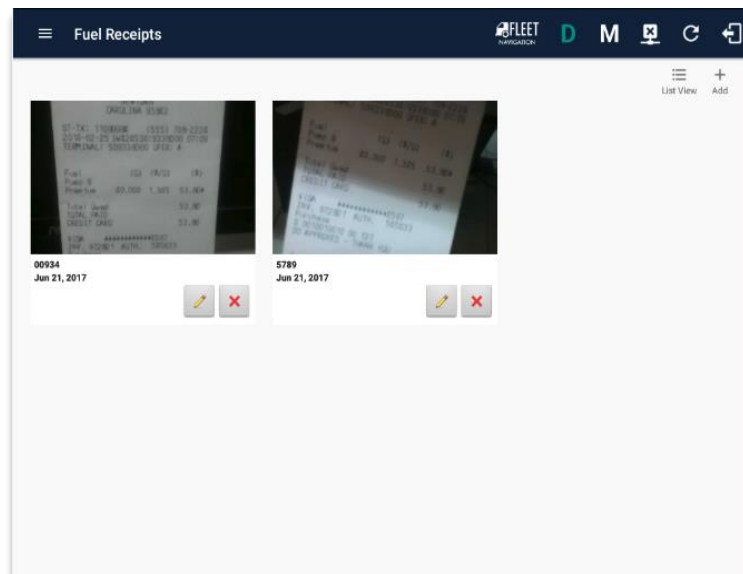

Note: You can change the documents' view to either **"List View"**  or **"Grid View"** .

 9.3 Adding Fuel Receipts

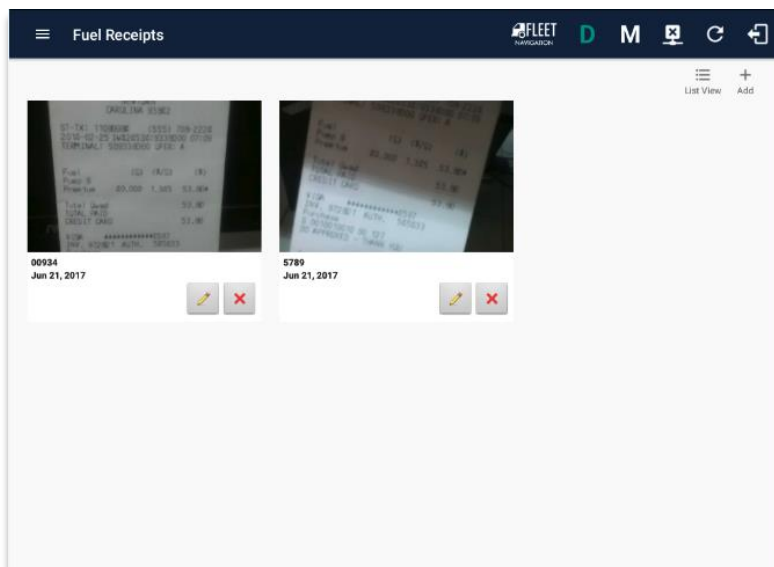

The camera app will then appear to take a picture of the fuel receipt.

After tapping the Capture Image button, select the Check mark button to save the image and add it to your document. You can also discard the captured image by selecting the X mark button.

 

Fill in the necessary information:

- * Reference No.
- * State
- * Vehicle
- * Fuel Type
- * Gallons
- * Total Cost
- * Odometer
- * Notes


Note: Unlike adding a document (e.g Citation or Bill of Lading), additional fields will be displayed when adding a Fuel Receipts.

Notes:

- If the state selected is in **US**, the odometer and volume unit display is in **Mi & Gallons**.
- If the state selected is in **Canada**, the odometer and volume unit display is in **KM & Liters**.
- For every Fuel Receipt created via the App Fuel Receipt feature, it creates a Remark event, found on the Edit Logs screen, with a note "Purchased 1.345 gallons at \$53.80 price (sample note for the above purchased)".

After filling in all the fields you can now tap the  **button** to successfully add the document. You can also tap the  **button** to cancel adding the fuel receipt.

 9.4 Editing or Deleting a Fuel Receipts

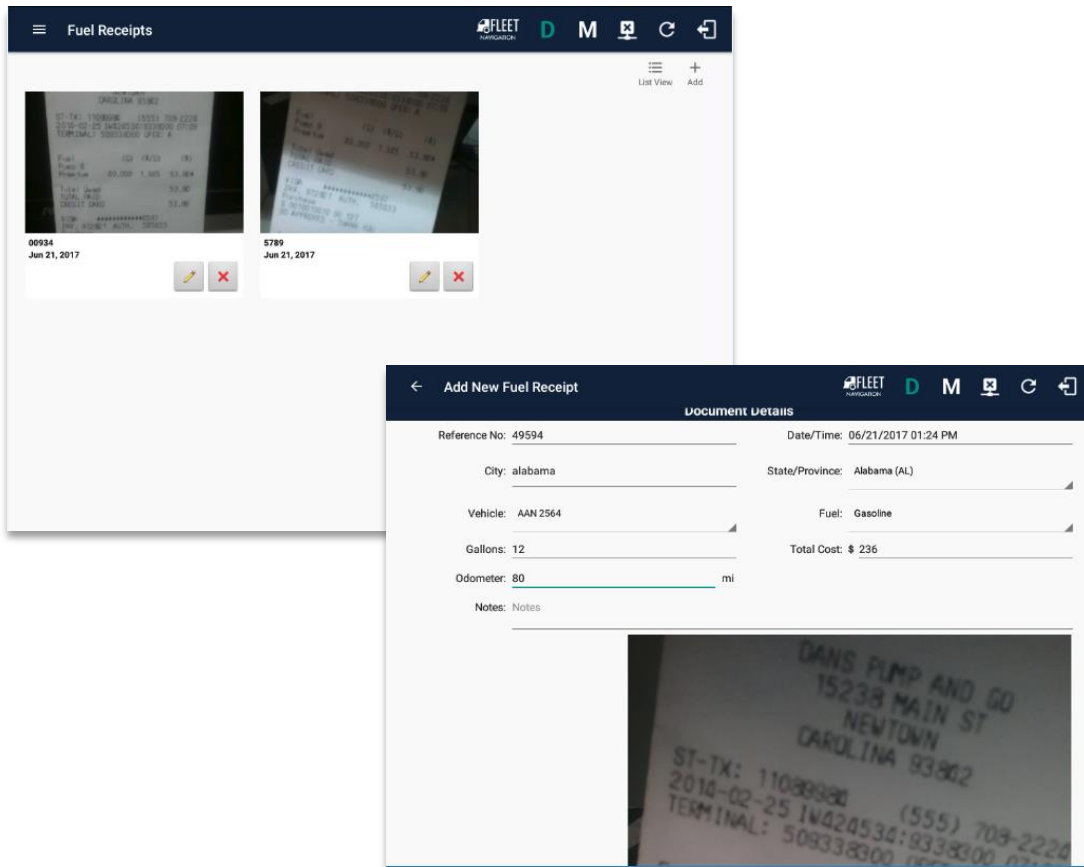

Tap the Edit  button adjacent to the relevant fuel receipts, make any required changes.

 
Tap the OK button to save the changes.

Tap the CANCEL button to return without saving changes.

Tap the DELETE button to delete the fuel receipt completely.

10 Co-Drivers


10.1 Logon Co-Driver

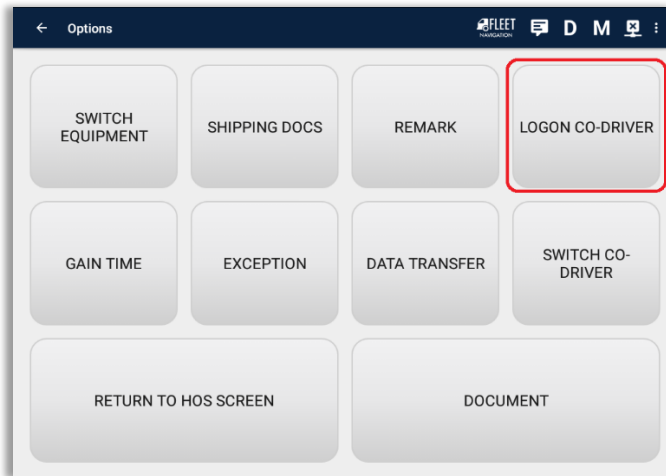


From the **Hours of Service Main Screen**, tap the **Options** button and then tap the **Logon Co-Driver** button.



 Personnel accounts cannot be Co-Drivers. Only authenticated users with a Driver role are allowed to log-in as Co-Driver.

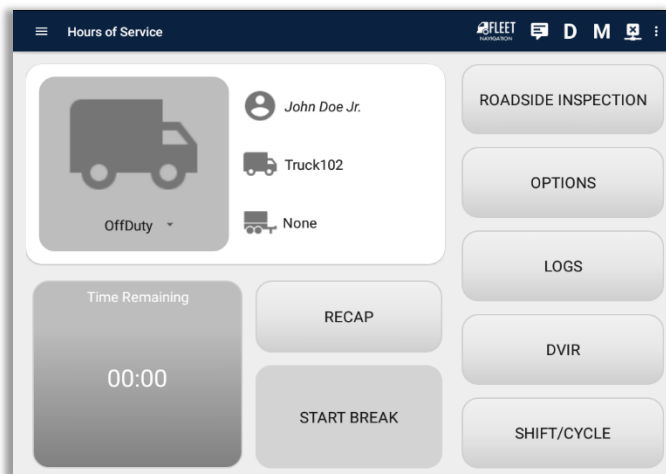

 
The Co-Driver must enter his/her **Username & Password** and then tap the **Login** button to continue, he/she will then be logged on successfully and the **Hours of Service Main Screen** will display Their log details.


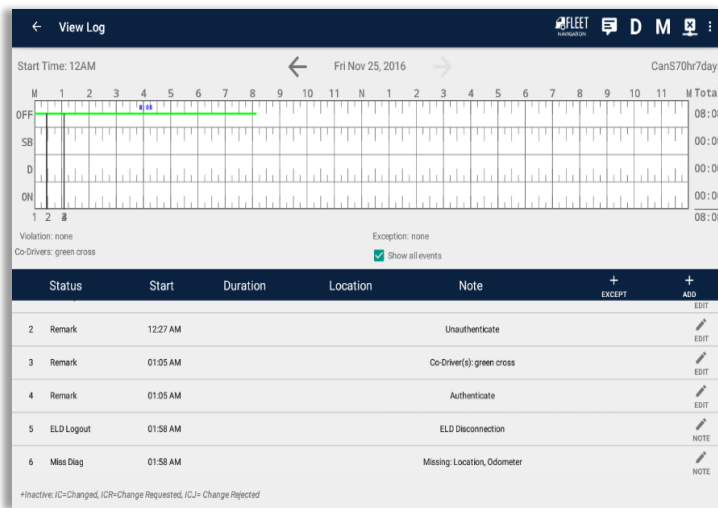


In addition, the Co-Driver's name is displayed in the daily logs which is placed under the grid chart.

Team Driving

   When in Team Driving, The Co-Driver is allowed to review his/her information by having the "Access Co-Driver Logs" option on the lock screen which allows them to access the HOS dashboard and subsequently select the Logs option while the vehicle is still in motion.

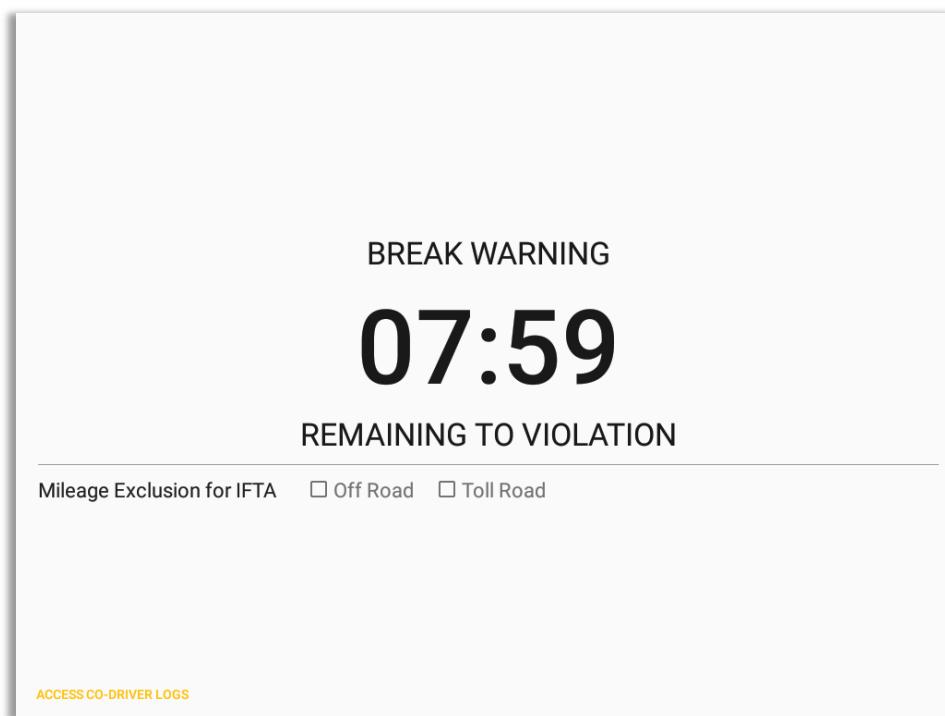

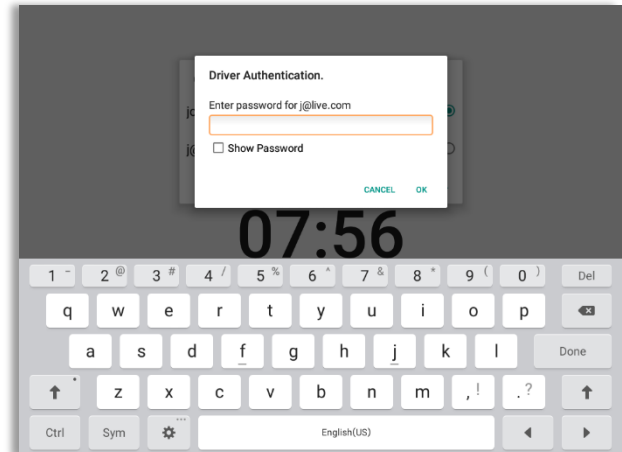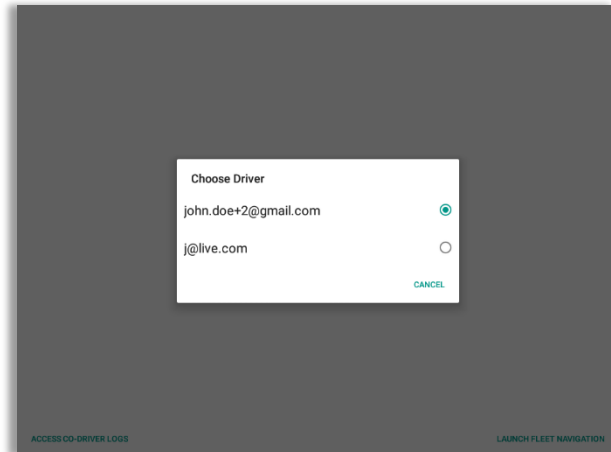

See steps in 9.2 Switch Driver to complete process

Once the Co-Driver has successfully logged in, the main dashboard is displayed with the co-driver's information while setting the app in Review Mode with limited capabilities.

Review Mode

When in Review Mode the Co-Driver cannot receive or access:

 
- ✗ Driving Notifications and alerts which relates to the Driver
- ✗ Lock screen will not display even if the vehicle is in motion
- ✗ Cannot switch vehicle
- ✗ Cannot change the current event in to Driving event
- ✗ Cannot update any preferences related to background services

When in Review Mode the Co-Driver can receive or access:

- ✓ Data Diagnostics and Malfunctions pop-up dialogs
- ✓ Pending Edit Request(s)
- ✓ Allow modifications on previous events
- ✓ Can edit current event to OnDuty ND, OffDuty & Sleeper except changing it into Driving


Notes: (when the vehicle is still in motion)

- Attempts to change the status to Driving will only display an error stating "Cannot change status while vehicle is in motion."

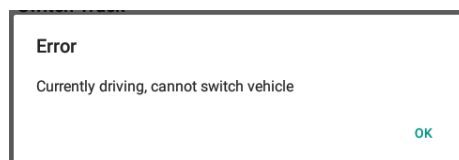


- Attempts to Accept or Reject requested driving event is not allowed in a co-driver's account, instead an error dialog is displayed stating that "Only "Driver" can switch to "Driving" as current status."

 When a Co-Driver is on the Review Mode and that the vehicle is not in motion, an option to make the co-driver to become the Driver is available on the Drivers List.

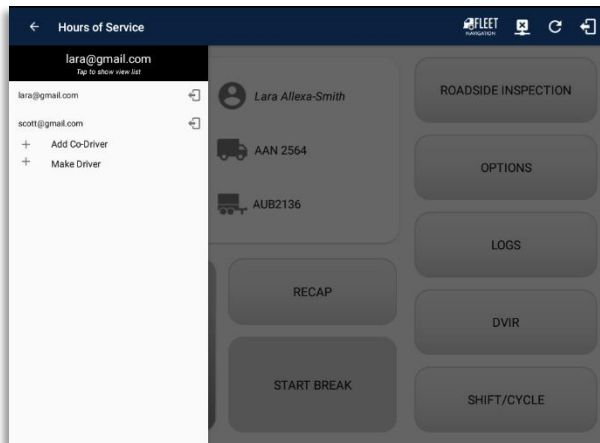


 Once the “Make Driver” button is tap, a confirmation dialog will display.

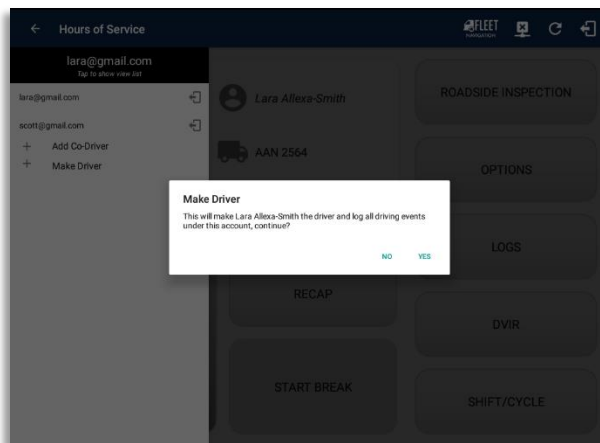

- If **YES** is tap, the VBUS services will restart under the new driver’s account.
- If **No** is tap, the dialog will close.

 Note: The “Make Driver” button will be disabled when the main driver is in a Driving state, which will then display a label stating “Cannot Change Driver While Driving”.



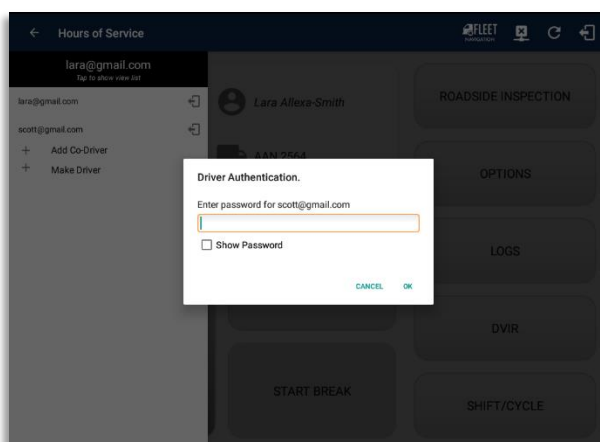


When the Main Driver switch to the Co-Driver’s account, in the Authentication dialog an option for the “Make Driver” is available.

Note: A driver that is set as the Main Driver is the one currently using the application while the other one is only in the monitoring state.

Reassign Driving Time

   The ELD allows the driver to reassign his driving time to a co-driver.

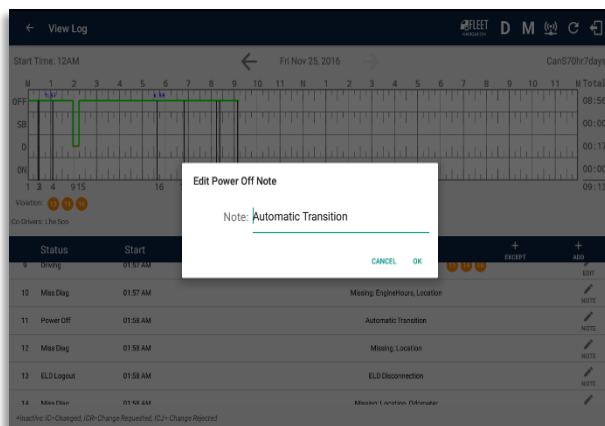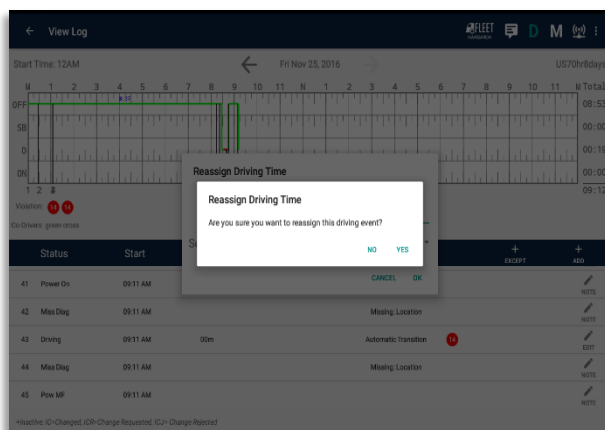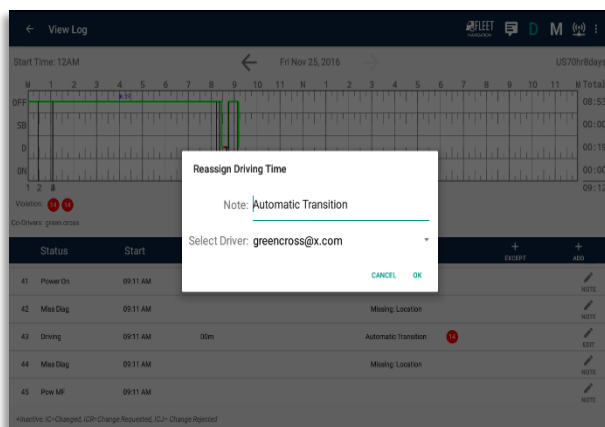

Tap on the Edit button of the created auto driving event to display the Reassign Driving Time dialog. Select for the co-driver's name of the list.

Once the OK button is tap, it will display a confirmation dialog whether to proceed to reassign the driving time event.

 
- If **YES** is tap, the driving event will have recorded as an Inactive Changed (IC) event on the main driver's log
- If **No** is tap, the dialog will close and will not reassign the driving time.

Switch to the Co-Driver's account to check the Reassign Driving Time which will be displayed on the Pending Edit Request dialog.


- If **Accepted**, the driving event will be reassigned and recorded on the co-driver's log.
- If **Rejected**, the driving event will not be recorded under the co-driver's log. However, it will be displayed as an Inactive Changed Rejected (ICJ) event (both Main and Co-drivers log).

Note: A Co-Driver is not allowed to accept or reject a requested Driving event. Only "Main Driver" can switch to "Driving" as current status.

10.2 Switch Driver

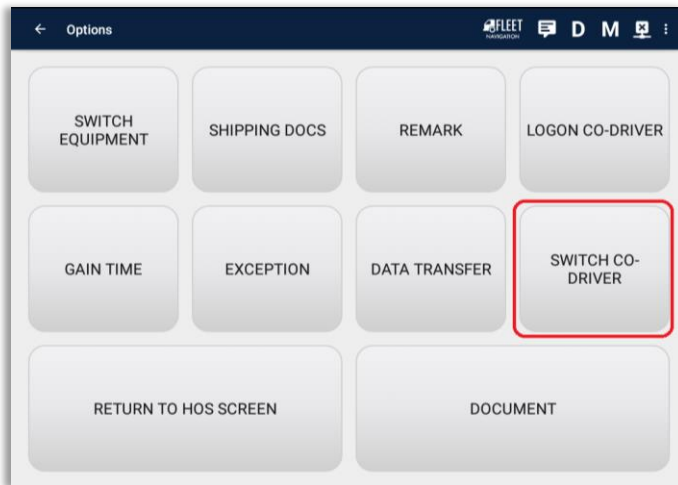


 From the **Hours of Service Main Screen**, tap the **Options** button and then tap the **Switch Co-Driver** button.

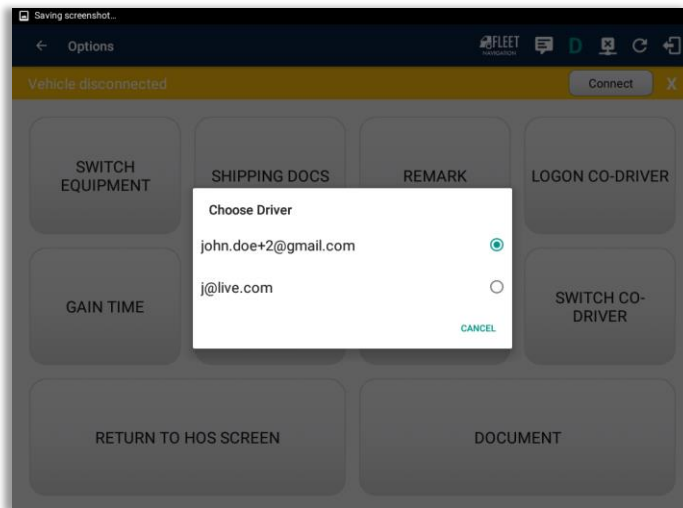


From within the **Choose Driver** dialog, tap the driver's name who you wish to switch to.

 Tap the **CANCEL** button to return to the **Options** screen.

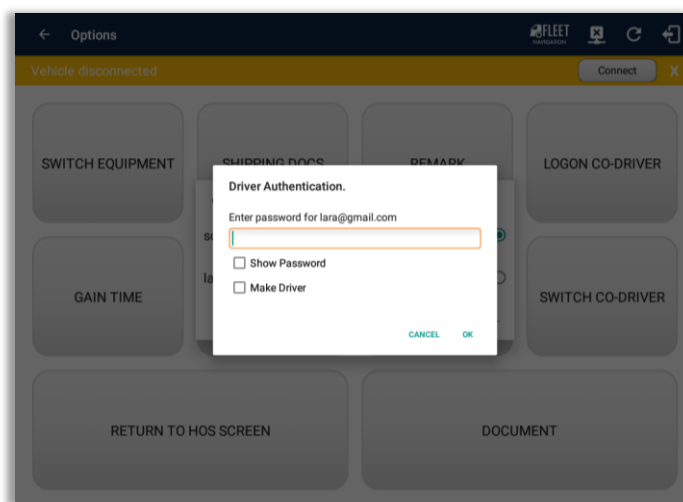

The Magellan HOS Compliance app then asks the co-driver to input the password to authenticate the account.

 11 Shipping Documents

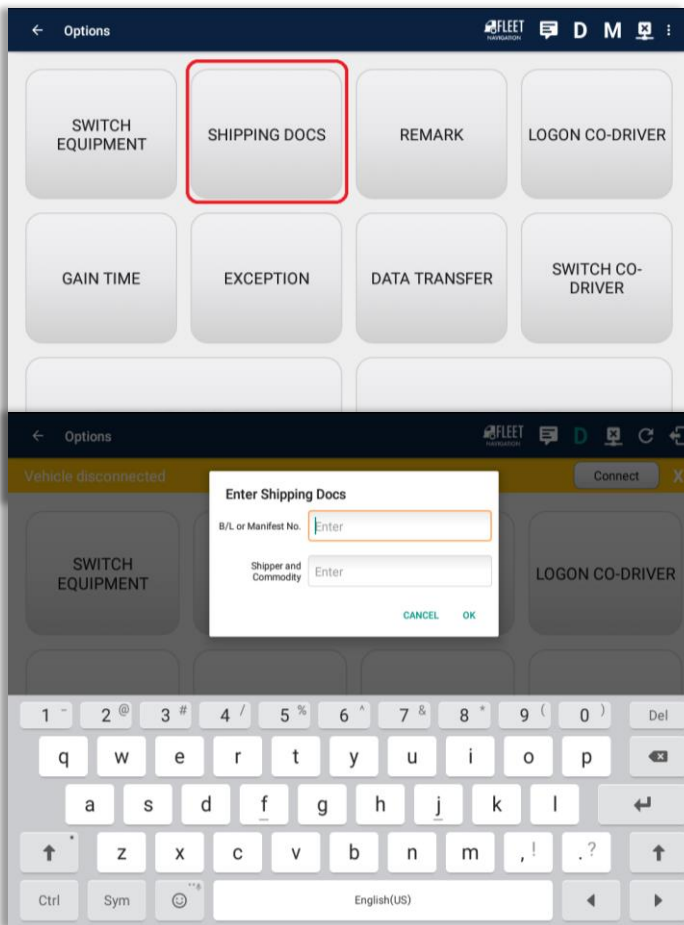

From the **Hours of Service Main Screen**, tap the **Options** button and then tap the **Shipping Docs** button.

 
Enter the **Bill of Lading** or **Manifest Number**.

Enter the **Shipper** or **Commodity**.


Tap the **OK** button to save the details.

Tap the **CANCEL** button to return without saving.

12 Add Remark

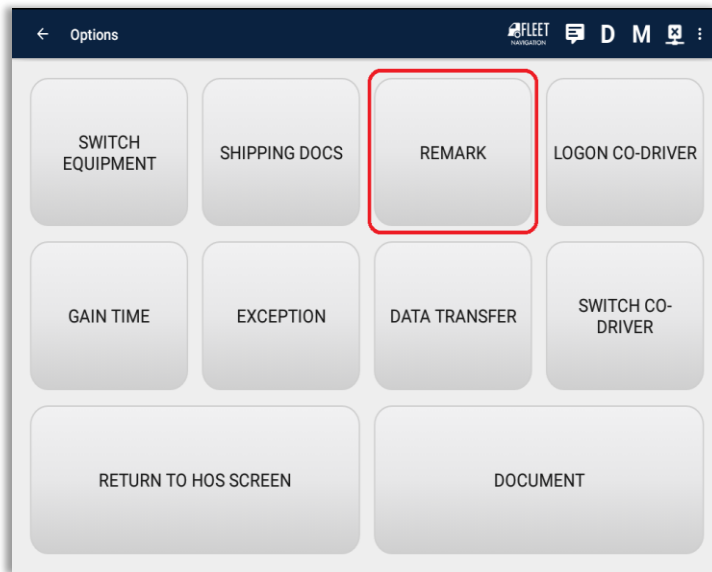

 From the **Hours of Service Main Screen**, tap the **Options** button and then tap the **Remarks** button.

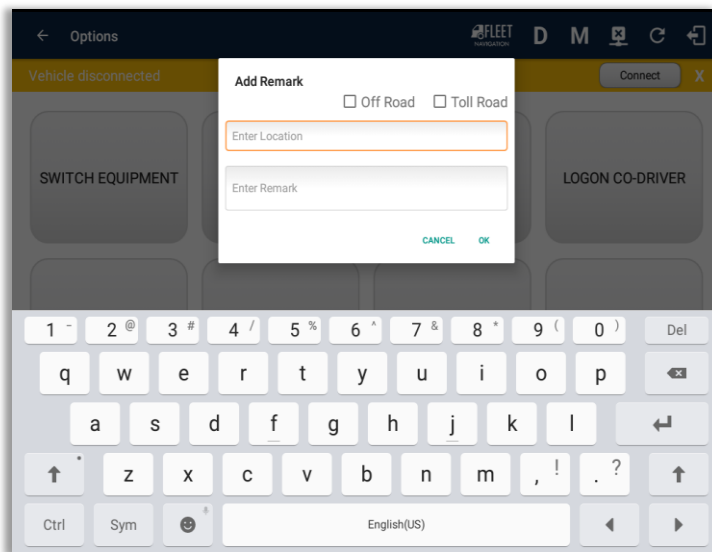

Enter the **Location** (optional).

Enter the **Remark**.

Tap the **OK** button to save the remark.

 
Tap the **CANCEL** button to return without saving.

Off Road / Toll Road Feature:

- When **Off Road** is enabled it will create a "Remark" with a note "Off Road". When uncheck it will create a "Remark" with a note "On Road".
- When **Toll Road** is enabled it will create a "Remark" with a note "Start Toll Road". When uncheck it will create a "Remark" with a note "End Toll Road".

13 Exempt Driver


If the Driver is an **Exempt Driver** or a driver that operates under the short-haul exemption (395.1 (e)), upon *logging in* or *logging out* a dialog will display confirming whether the driver chooses to continue as an exempt driver.

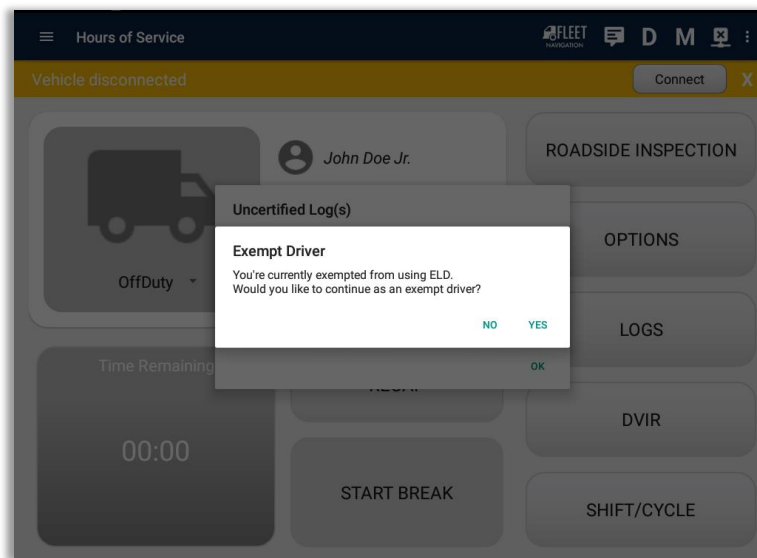


By selecting the OK button, the **“No Logs for Non-CDL-Driver Short-Haul Drivers operating within 150 air-miles”** exception will be enabled. You can enable Exempt Driver through these steps:

Login to Portal → Go to the Drivers Management page → Select on New Driver button or select the Edit driver button → Enable the Exempt Driver option

 14 Logout

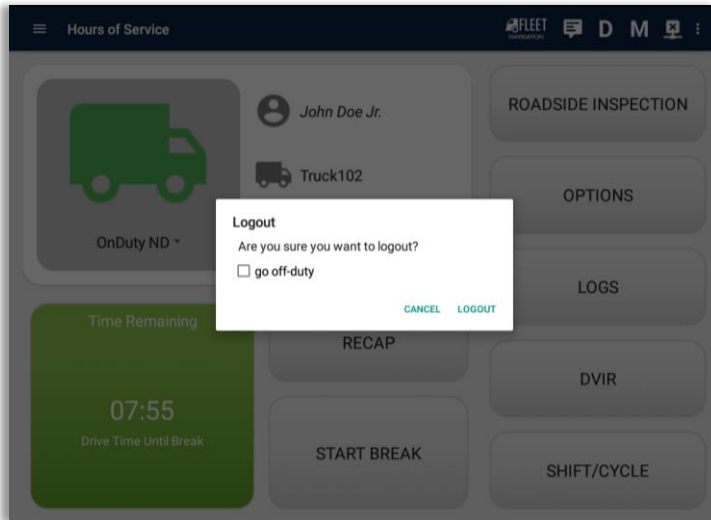

 Logout message when status is still **'On Duty'** or **'Driving'**

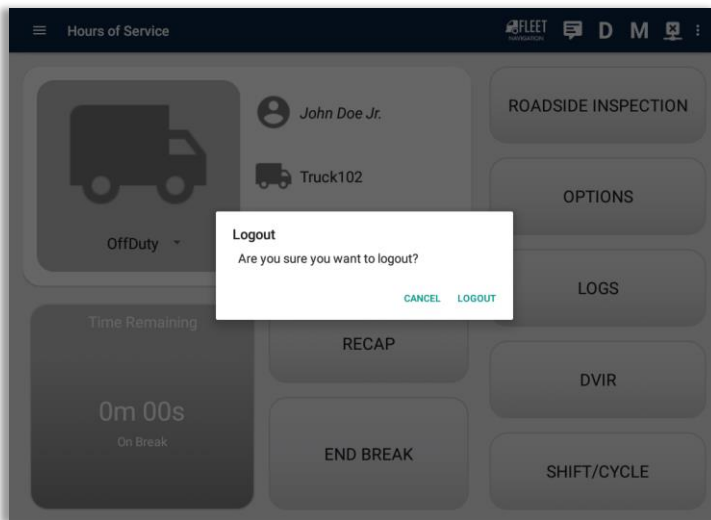


Logout message when status is **'Off Duty'**

Note: Once the “**Logout**” option is tapped, the valid driver that logged into the Magellan HOS Compliance app will be logged out and the Magellan HOS Compliance app will be close completely (with no Magellan service or VBUS service running in the background).

15 Unidentified Driving Events

 Unidentified Driving Events are events that are automatically recorded when a vehicle has been moving for more than 3 minutes while there is no driver logged in. These events are recorded under “**Unidentified Driver**” account. Unidentified Driving events can be accepted by actual drivers upon logging in to the app (within the Pending Request(s) window). However, the app prevents from Unidentified Driving for vehicle in **AOBRD** mode.

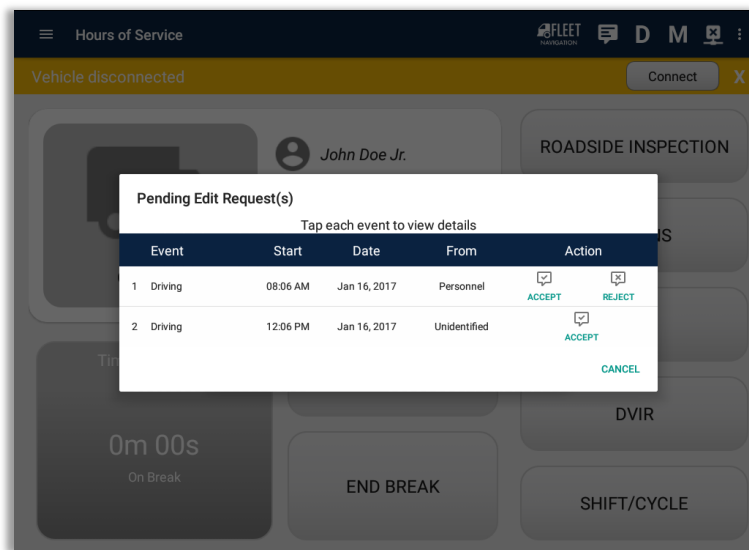

When the next Authenticated Driver logs in or logs out, this popup will then appear. In order for the Unidentified Driving Events to be reassigned, the logged in driver will be the one to accept the **Pending Edit Requests** of the Unidentified Driver.

Accept Event

Do you really want to accept this event?

Event:	Driving
Start:	Nov 25, 2016 09:26 AM
End:	Nov 25, 2016 09:29 AM
From:	
To:	
Vehicle Miles:	-239
VIN:	Simulated
Equipment ID:	LheSoo
Origin:	Unidentified
Note:	Automatic Transition
Reason:	

Enter annotation for this event

CANCEL OK

 
Note:

- Odometer field is displayed for edit request(s) made by the Personnel but it is displayed as Vehicle Miles field for edit request(s) made by the Unidentified Driver.
- The Unidentified Driving Event pending edit request dialog has additional details like: **From, To & Equipment ID** compared to that of the Personnel's pending edit request dialog.

16 Warning Features

Audible and Visible Warning

If the driver logged out from the app and the driver does not log onto the ELD, as soon as the vehicle is in motion, the ELD prompts a visual and audible warning reminding the driver to stop and login to the ELD.

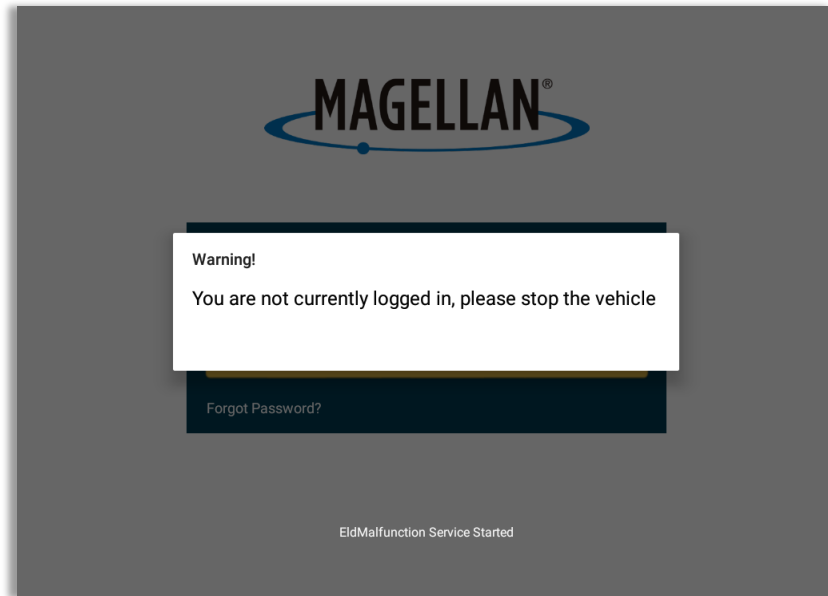


An audible alert is also available that can be heard every couple of seconds.

The **visible warning** stays on screen which prevents the driver from using any features of the tablet except from accessing it through the driver icon on the **notification bar**.


Location Services

 If the driver logged into the application without the Location Services turned on, a snackbar will display on the main dashboard and to other screens except for the screens navigated through the Settings menu. However, when the Location Services of the device is enabled then the snackbar will no longer display.

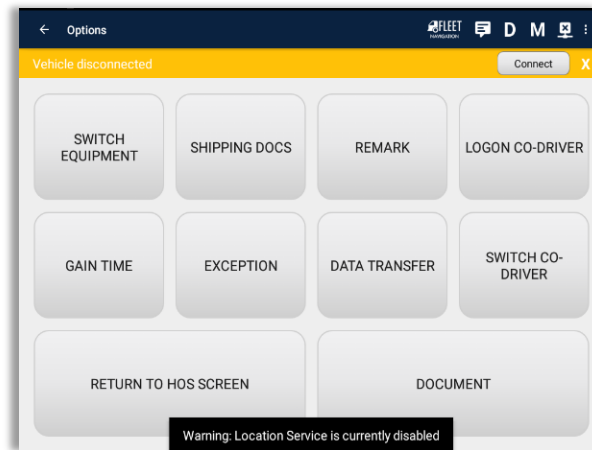

Lock Screen

 All warnings acquired by the authenticated driver while driving, will be displayed on the lock screen and remains on screen along with a countdown (to 00:00) being displayed however the text will dim down after 15 seconds to not distract the driver. The normal text color (black or white, depending on day/night mode) will be displayed upon tapping of the screen.

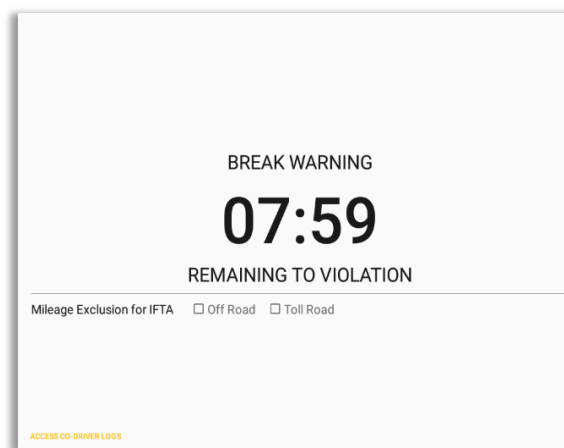

Note: If the driver stops driving while one of the checkbox is enabled the driver can still uncheck the “Off Road” or the “Toll Road” through the Options screen > Remarks.

17 List of Login Errors

These are the different error messages that appear upon an incorrect login. Follow the steps that follow to determine the cause of the error and to mitigate the problem.

Login Errors	Mitigation Steps
Authentication Failed. Check your network connection.	Ensure that the tablet/mobile phone is connected to a data network or Wi-Fi network.
Invalid user id or password.	Ensure that the email address and password are correct and valid. The password should match the valid email address.
A timeout error has occurred.	Ensure that the tablet/mobile phone is connected to a data network or Wi-Fi network with internet access. If issue persists, try again later or contact Magellan support at 909-394-5005 or send an email to fleetsupport@magellangps.com .
An unknown error has occurred.	Contact Magellan support at 909-394-5005 or send an email to fleetsupport@magellangps.com .
Username is required.	Ensure that the username field is not empty.
Password is required.	Ensure that the password field is not empty.
Login timed out.	Ensure that the tablet/mobile phone is connected to a data network or Wi-Fi network with internet access.
An error has occurred while creating the account. If the error continues please contact Magellan for assistance.	Try logging in after a few minutes and if error persists, contact Magellan support to 909-394-5005 or send an email at fleetsupport@magellangps.com .
An error has occurred while retrieving account details.	Contact Magellan support at 909-394-5005 or send an email to fleetsupport@magellangps.com .
An error has occurred while setting up the account. Please contact Magellan for assistance.	Contact Magellan support at 909-394-5005 or send an email to fleetsupport@magellangps.com .

Check account configuration	Ensure that the driver and the asset are in the same Visibility Sets and has a role Driver role.
Error creating unidentified driver account	Try logging in after a few minutes and if error persists, contact Magellan support to 909-394-5005 or send an email at fleetsupport@magellangps.com .
A non-driver accounts cannot be login as co-driver.	Ensure that the user account has a role Driver role. Personnel accounts are not allowed to log in as co-drivers.
Your Magellan version is < current build version >. This version is no longer supported. Please upgrade to < latest build version > or greater for stable operation.	Upgrade the Application to the latest version.